

TF-586VM

**Embedded ATX Mainboard
with S3 VGA & Flash disk socket
for ZIF Socket 7 Processor**

COPYRIGHT©

This document is a copyright of the original manufacturer, 1999. The original manufacturer reserves the right to make improvements to the product(s) described in this manual at any time without notice. This manual may not, in whole or in part, be photocopied, reproduced, transcribed, translated, or transmitted in whatever form without the written consent of the manufacturer, except for copies retained by the purchaser for backup purposes. All rights are reserved.

TRADEMARKS

Pentium® is a registered trademark of Intel Corporation.

The following are trademarks or registered trademarks of their respective companies: IBM, Intel, AMD, Cyrix, Award, AMI, Microsoft, Windows, Windows NT, Novell, SCO, PC/104, PICMG, ALI, UMC, SMC, Winbond. Products mentioned in this manual are mentioned for identification purposes only. All names of products or services appearing in this manual are the trademarks or registered trademarks of their respective organizations and companies.

© Copyright 1999

Ver. No. 1.0
LEI-UM-TF586VM-001

Date : 02.01.1999

TABLE OF CONTENTS

CHAPTER 1	INTRODUCTION	1
1.1	SPECIFICATIONS	2
1.2	PACKING CHECK LIST	3
CHAPTER 2	JUMPER SETTINGS AND CONNECTORS	4
2.1	BOARD OUTLINE OF TF-586VM	4
2.2	CPU INSTALLING AND UPGRADING	5
2.3	JUMPER SETTING OVERVIEW	7
2.4	JUMPER LOCATION FOR TF-586VM	8
2.5	JUMPER SETTINGS SUMMARY FOR TF-586VM	9
2.6	JUMPER SETTINGS FOR TF-586VM	10
2.7	I/O CONNECTORS LOCATION FOR TF-586VM	16
2.8	I/O CONNECTORS SUMMARY FOR TF-586VM	17
2.9	SETTING STATUS INDICATORS AND CONTROL CONNECTORS	18
2.10	I/O CONNECTORS DESCRIPTION	19
CHAPTER 3	AWARD BIOS SETUP	29
3.1	RUNNING AWARD BIOS	29
3.2	CMOS SETUP UTILITY	30
3.3	STANDARD CMOS SETUP	31
3.4	BIOS FEATURES SETUP	36
3.5	CHIPSET FEATURES SETUP	39
3.6	POWER MANAGEMENT SETUP	43
3.7	PNP/PCI CONFIGURATION	46
3.8	LOAD BIOS DEFAULTS	48
3.9	LOAD SETUP DEFAULTS	48
3.10	INTEGRATED PERIPHERALS	49
3.11	SUPERVISOR / USER PASSWORD	51
3.12	IDE HDD AUTO DETECTION	52
3.13	HDD LOW LEVEL FORMAT	52
3.14	SAVE & EXIT SETUP	52
3.15	EXIT WITHOUT SAVING	52

CHAPTER 4	DRIVERS SUPPORT	53
4.1	DRIVER DISKETTE LIST	53
4.2	VGA DRIVER UTILITIES	53
APPENDIX A	HOW TO USE WATCH-DOG TIMER	63
APPENDIX B	TECHNICAL REFERENCE	64
GLOSSARY		
	TERMS AND CONDITIONS	
	RMA SERVICE REQUEST FORM	

INTRODUCTION

The TF-586VM is a Embedded ATX Mainboard computer for Intel Pentium[®] Processor that is using the Intel's chipset 82430TX which supports the Ultra DMA-33 for faster hard drive and the Health monitoring hardware. The health monitoring hardware detects and releases a sound alarm for any abnormal function of the operating voltage & temperature of CPU or it's cooling fan. Another feature includes the S3 ViRGE 375 chip which supports VGA function with resolution up to 1024x768 at 256 colors. For boosting operation, this motivated card also supports sockets for a Flash Disk, two DIMMs and four SIMMs. This board is also equipped with a switching voltage regulator that supports 2.8V, 2.9V, 3.2V, 3.3V and 3.5V core voltage for various processors. It offers the function of an industrial computer on a single board with on-board 2nd level cache RAM of 512KB for maximum performance.

The TF-586VM provides the primarily elements for building an IBM PC/AT compatible computer for a wide variety of applications with system integration. The TF-586VM is fully compatible with the IBM PC/AT which means virtually all the software written for the IBM PC/AT will run on the TF-586VM SBC. One special feature is its multiple expansion slot (6-ISA and 2-PCI buses).

This is an all-in-one mainboard featuring four serial ports (three RS-232 and one selectable RS-232/422/485), one multi-mode parallel (ECP/EPP/SPP) port, a floppy drive controller and a keyboard interface and a PS/2 mouse interface. The built-in high speed PCI IDE controller supports both PIO and bus master modes. Up to four IDE devices can be connected, including large hard disks, CD-ROM drives, tape backup drives and other IDE devices. Its 6-layer printed circuit board combines with noise-tolerant and low power consumption CMOS technology applied on the board makes TF-586VM able to withstand any harsh industrial environments very well.

1.1 SPECIFICATIONS

❑ Processor	: For ZIF Socket 7 Processor Intel Pentium [®] & MMX, AMD K5 & K6, Cyrix 6x86 & M2 CPU
❑ Chipset	: Intel 82430TX2.1 Compliant, S3 ViRGE 375 and Winbond 877TF/977TF I/O chipset compatible
❑ System Memory	: Two 168-pin DIMM and Four 72-pin SIMM sockets up to 256MB DRAM
❑ Cache Memory	: On-board 512KB Pipelined Burst Synchronous cache
❑ BIOS	: 256KB Award License BIOS
❑ Flash Memory Disk	: Reserved socket for DiskOnChip from M-System support up to 72 MB Flash memory Disk
❑ VGA Controller	: S3 ViRGE 375, with 2MB video memory Resolution up to 1024 x 768 at 256 colors
❑ IDE Drive Interface	: Two PCI IDE ports that support up to four IDE devices and Ultra DMA-33
❑ Floppy Drive Interface	: One FDD port that supports up to two floppy devices
❑ Serial Port	: Four COM ports, three RS-232 and one RS-232/422/485 serial port
❑ Parallel Port	: One multi-mode parallel port (ECP/SPP/EPP)
❑ Bus Interface	: Optional ISA/PCI bus
❑ RTC Battery	: Dallas RTC battery or compatible
❑ DMA	: 8 DMA channels
❑ Interrupts	: 16 levels of hardware interrupts
❑ PS/2 Mouse Connector	: On-board 6-pin Mini-Din PS/2 Mouse connector
❑ Keyboard Connector	: 5-pin header and 6-pin Mini-Din connectors
❑ External Power Connector	: ATX power connector
❑ Expansion Slot	: 6-ISA and 2-PCI expansion slot
❑ Watchdog Timer	: 8 level time-out intervals (0.5/1/2/4/8/16/32/64 sec.)
❑ Universal Serial Bus	: Support 2 USB ports
❑ IR Interface	: Support one IrDA header
❑ Health Monitoring	: Support CPU Temperature Alarm
❑ Operating Temperature	: 0°C~55°C (32°F~132°F)
❑ Humidity	: 10 ~90 RH
❑ Power Requirement	: +5V @ 3A, +12V @ 1.2A, -12V @ 50mA
❑ Dimensions	: ATX 230 mm X 305 mm (9" X 12")
❑ Net weight	: 440 g (0.968 lb.)

1.2 PACKING CHECK LIST

Before you begin to install your card, please make sure that you received the following materials as listed below:


<i>Item</i>	<i>Qty</i>	<i>Remark</i>
TF-586VM Embedded ATX Mainboard	1 pc.	
Keyboard adapter cable	1 set	6-pin AT keyboard connector to 5-pin PS/2 keyboard connector 5-pin female connector header to 5-pin female connector header
IDE/Floppy cable	1 set	40-pin standard header to 40-pin standard header 34-pin standard header to 34-pin standard header
COM3/COM4 cable	1 set	Two 10-pin female flat header to 9-pin COM male D-Sub connector (Attached to standard I/O card bracket)
CRT cable	1 pc.	10-pin female flat connector header to 15-pin female D-Sub connector
SVGA/Utility Drivers	1 set	Disk drivers
User's manual	1 pc.	TF-586VM

CHAPTER 2.

JUMPER SETTINGS AND CONNECTORS

2.1 BOARD OUTLINE OF TF-586VM

The Figure below shows the jumpers and connectors location on the TF-586VM:

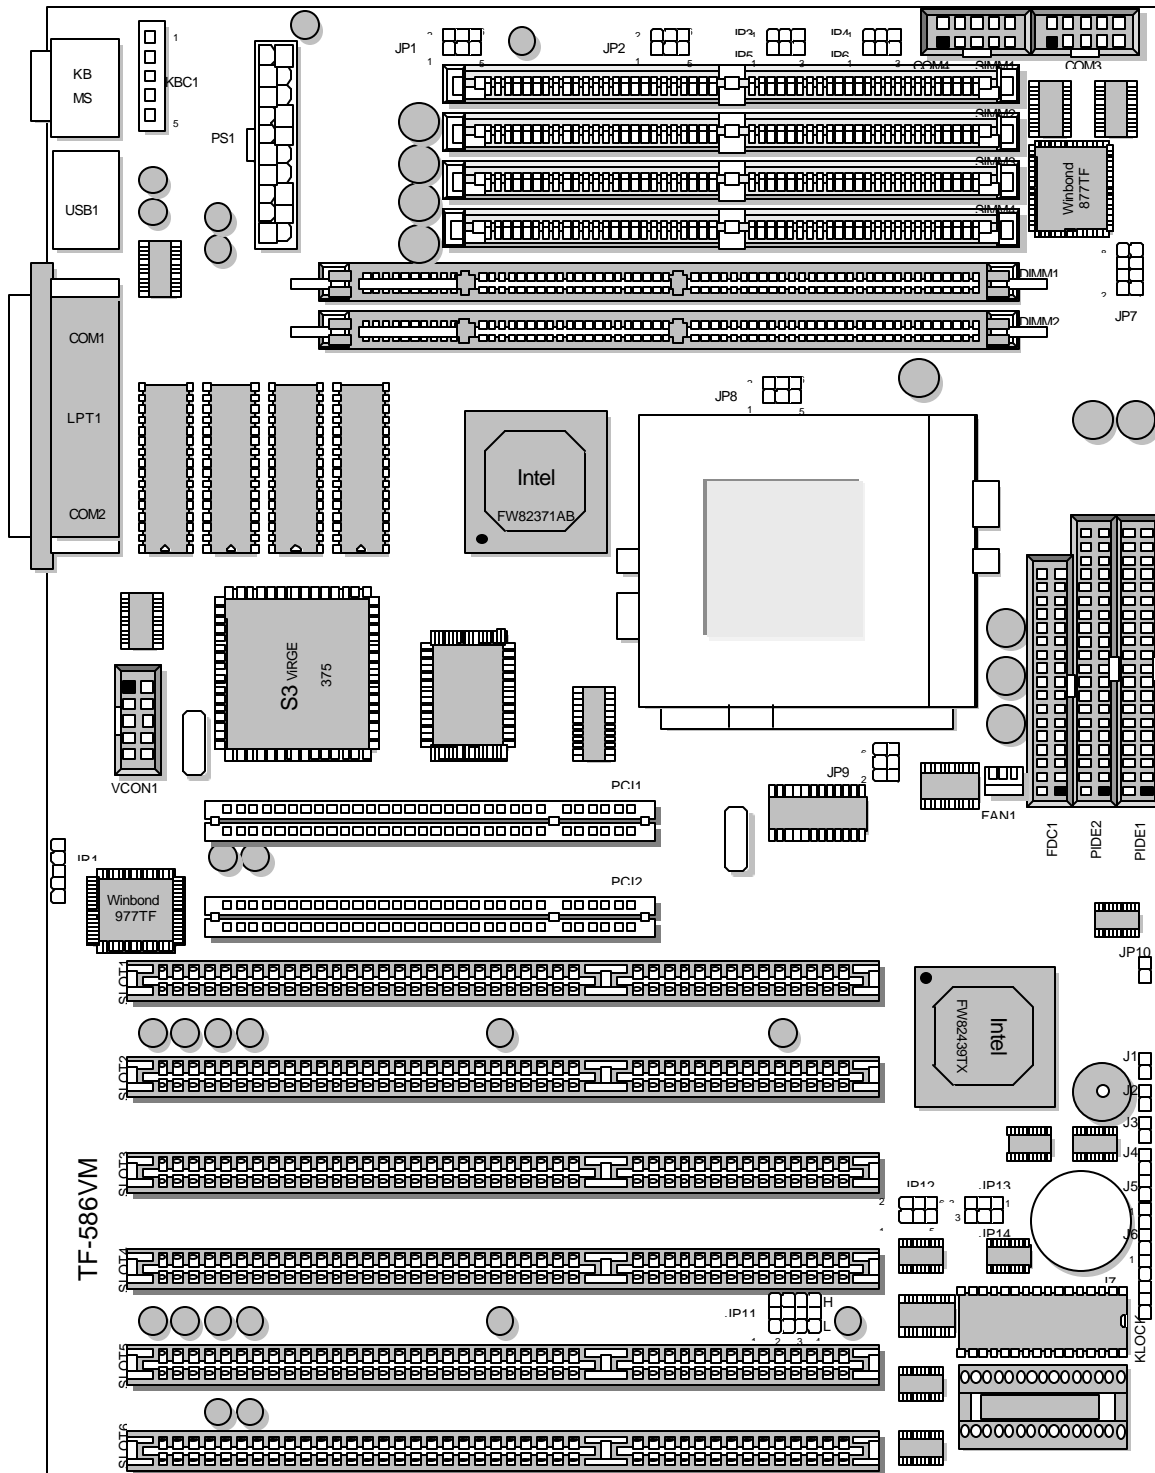

2.2 INSTALLING AND UPGRADING THE CPU

To upgrade to a higher power Pentium CPU, simply remove the old CPU and install to a new one; be sure to set the jumpers for the new CPU type and speed.

WARNING!

Disconnect the power cord from your system when you intend to work on it or you plan to open the chassis of your IPC. Do not make connections when the power is turned on as sensitive electronic components can be damaged by the sudden rush of power. Please only allow experienced electronics technicians to do this job.

STATIC ELECTRICITY PRECAUTION!


Caution! Computer components are very sensitive to damage from static electric discharge. Always ground yourself to remove static charge build-up before touching the boards in the computer. Use a grounding wrist strap at all time. Place all electronic components on the anti-static pad for static-dissipation or in a static-shielded bag when they are not in the chassis.

CAUTION!

Danger of Explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the battery manufacturer's instructions.

© **INSTALLING THE DIM MODULE:**


A DIM module simply snaps into a socket on the system board. Pin1 of the DIM module must correspond with Pin1 of the socket.

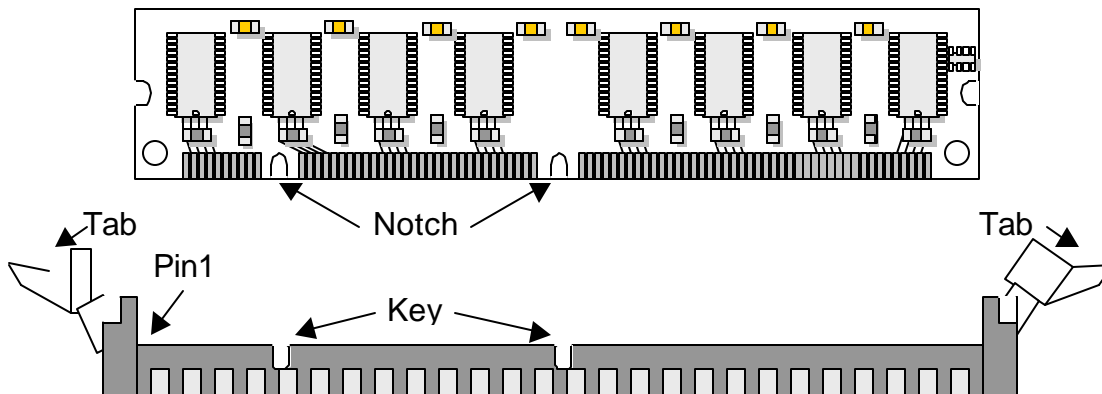

1. Pull the “tabs” which are at the ends of the socket to the side.
2. Position the DIMM above the socket with the “notches” in the module aligned with the “keys” on the socket.
3. Seat the module vertically into the socket. Make sure it is completely seated. The tabs will hold the DIMM in place.

© **INSTALLING THE SIM MODULE:**


A SIM module simply snaps into a socket on the system board. Pin1 of the SIM module must correspond with Pin1 of the socket.

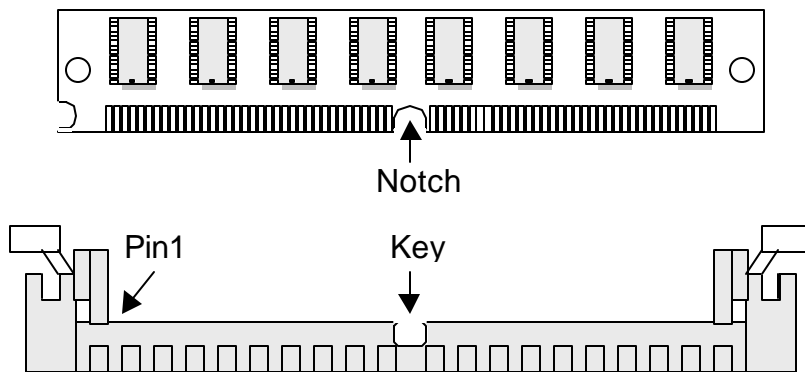

1. Position the SIMM above the socket with the “notch” in the module aligned with the “key” on the socket.
2. Seat the module at a 45 angle into the bank. Make sure it is completely seated. Tilt the module upright until it locks in place in the socket.


2.3 JUMPER SETTING OVERVIEW

In order to select the operation modes of your system, configure and set the jumpers on the your SBC to match the need of your application. To set a jumper, a black plastic cap containing metal contacts is placed over the jumper pins as designated by the required configuration as listed in this section. A jumper is said to be “ on ” or “ 1-2 ” when the black cap has been placed on two of its pins, as show in the figure below:

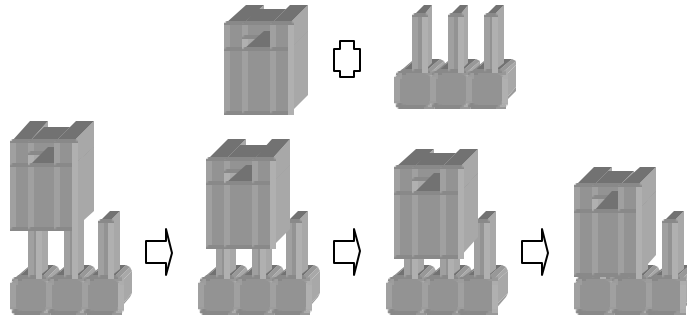

A pair of needle-nose pliers is recommended when working with jumpers. If you have any doubts about the best hardware configuration for your application, contact your local sales representative before you make any changes. In general, you simply need a standard cable to make most connections.

2.4 JUMPER LOCATION BOARD LAYOUT FOR TF-586VM

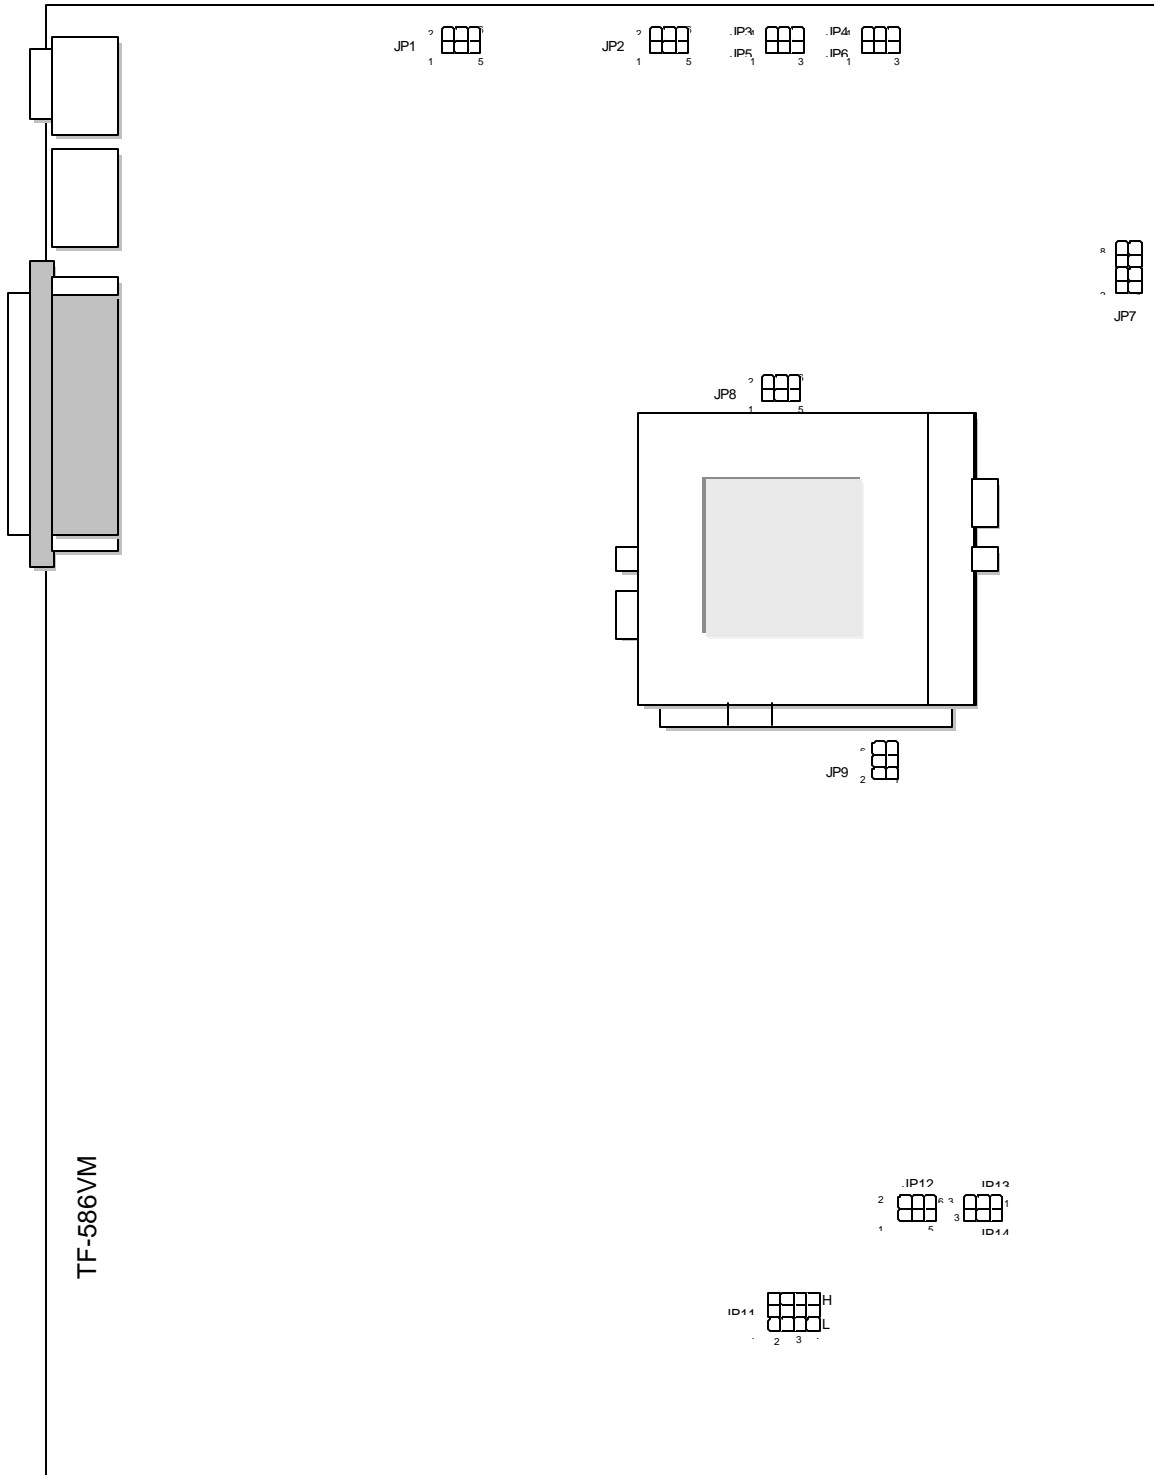

2.5 JUMPER SETTINGS SUMMARY FOR TF-586VM



JUMPERS	
LOCATION	FUNCTION
JP1	Select ATX Power
JP2 ~ JP6	Select COM4 Type
JP7	Select Vcore Voltage
JP8	Select Internal CPU Clock Ratio
JP9	Select CPU External Bus Clock
JP11	Select Watch-Dog Time Out Period
JP12	Select Disk On Chip (Flash Disk) Address
JP13	Clear CMOS Jumper
JP14	Select Watch-Dog Active Type

2.6 JUMPER SETTINGS FOR TF-586VM

- **JP1 : Select ATX Power**
Manufacturer Setting
Default : OFF



- **JP2~JP6 : Select COM4 Type**

COM4 Type	JP2	JP3	JP4	JP5	JP6
RS-232 (Default)	1-2	1-2	1-2	1-2	1-2
RS-422	3-4	2-3	2-3	2-3	2-3
RS-485	5-6	2-3	2-3	2-3	2-3

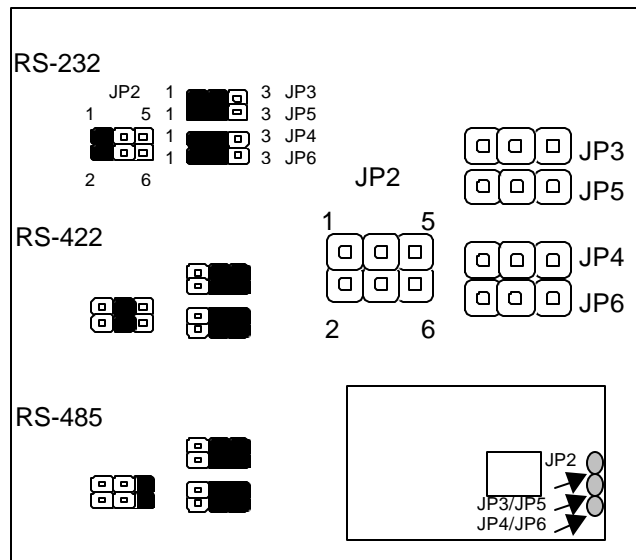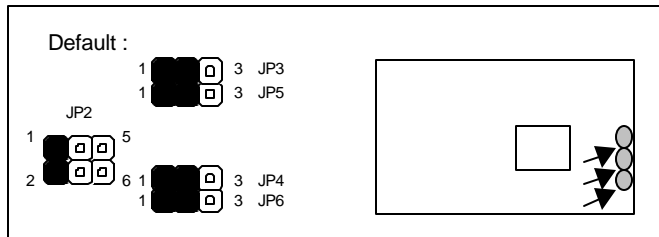

● **JP7 : Select Vcore Voltage**



Vcore Voltage	JP7
1.24 V	OFF
2.1 V	1-2
2.2 V	3-4
2.3 V	1-2 , 3-4
2.4 V	5-6
2.5 V	1-2 , 5-6
2.6 V	3-4 , 5-6
2.7 V	1-2 , 3-4 , 5-6
2.8 V (Default)	7-8
2.9 V	1-2 , 7-8
3.0 V	3-4 , 7-8
3.1 V	1-2 , 3-4 , 7-8
3.2 V	5-6 , 7-8
3.3 V	1-2 , 5-6 , 7-8
3.4 V	3-4 , 5-6 , 7-8
3.5 V	1-2 , 3-4 , 5-6 , 7-8

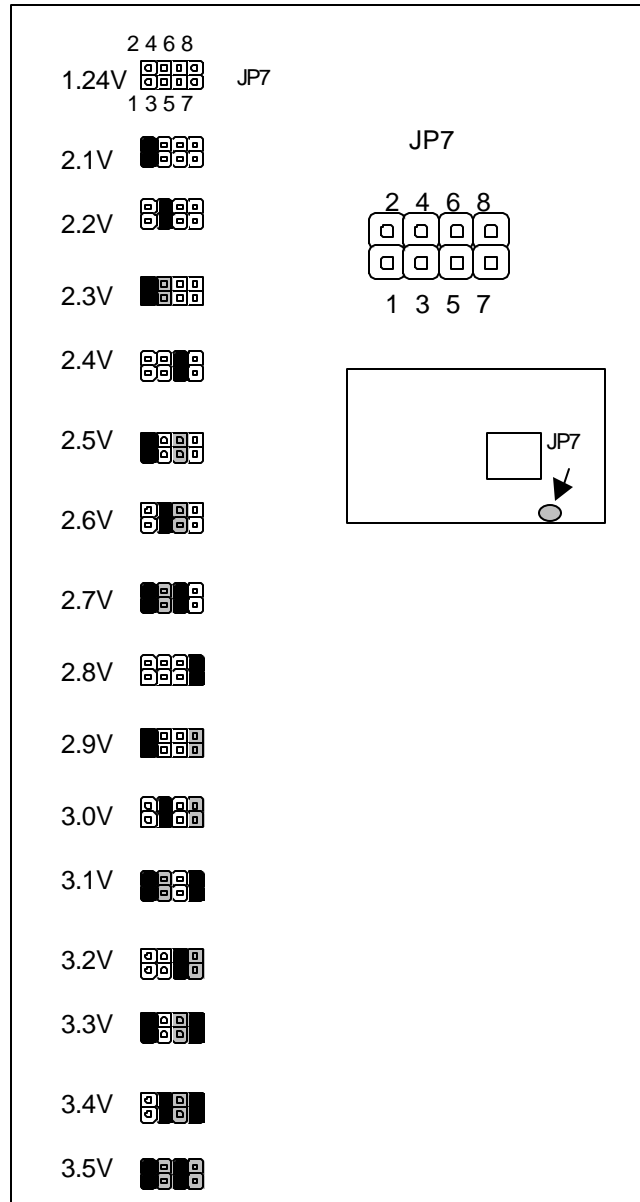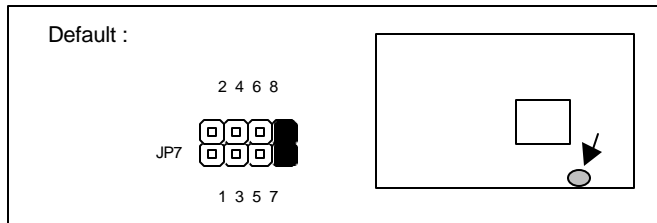

CPU Speed Reference Table									
CPU Speed (MHz)	75	90	100	120	133	150	166	200	233
Clock setting	50	60	66.6	60	66.6	60	66.6	66.6	66.6
Frequency ratio	1.5	1.5	1.5	2	2	2.5	2.5	3	3.5



● **JP8 : Select Internal CPU Clock Ratio**

Clock Ratio	JP8
1.5 X	OFF
2.0 X	1-2
2.5 X (Default)	1-2 , 3-4
3.0 X	3-4
3.5 X	OFF
4.0 X	1-2 , 5-6
4.5 X	1-2 , 3-4 , 5-6
5.0 X	3-4 , 5-6
5.5 X	5-6

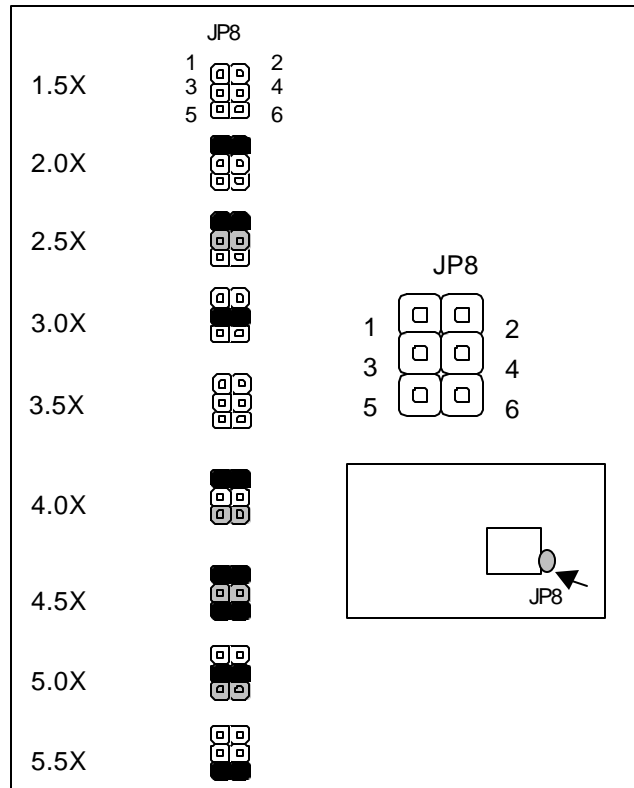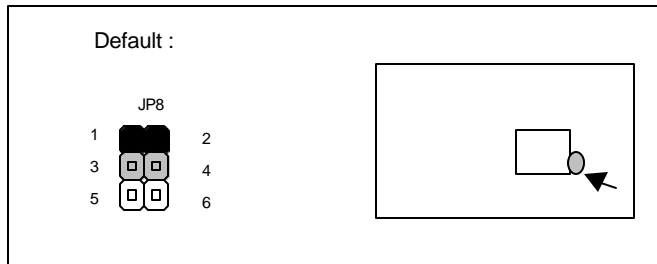



● **JP9 : Select External CPU Clock**

External CPU Clock	JP9
50 MHz	1-2 , 3-4 , 5-6
60 MHz	1-2
66.6 MHz (Default)	OFF
75 MHz	3-4 , 5-6
83 MHz	1-2 , 3-4

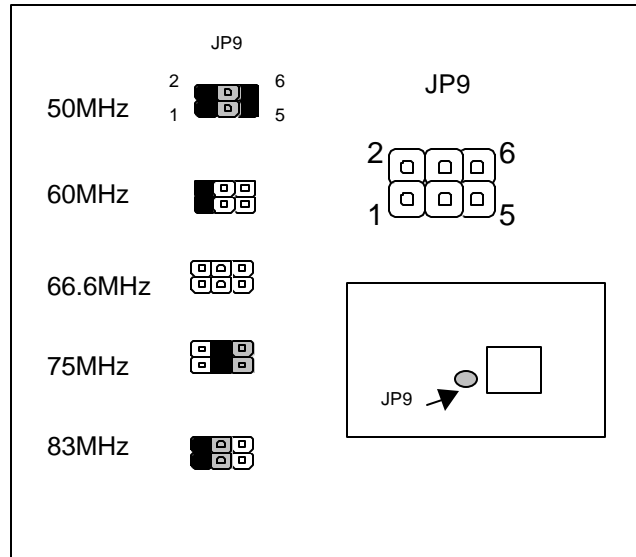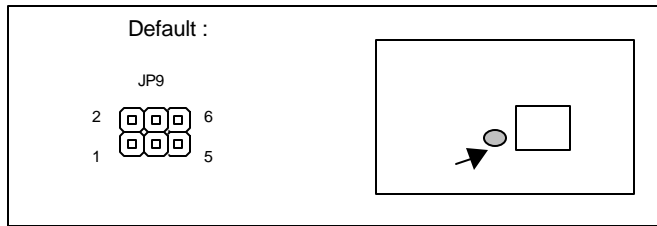



● **JP11 : Select Watch-Dog Time Out Period**

Time Out Period	JP11
0.5 sec	1-5
1 sec	2-6
2 sec	3-7
4 sec (Default)	4-8
8 sec	8-12
16 sec	7-11
32 sec	6-10
64 sec	5-9

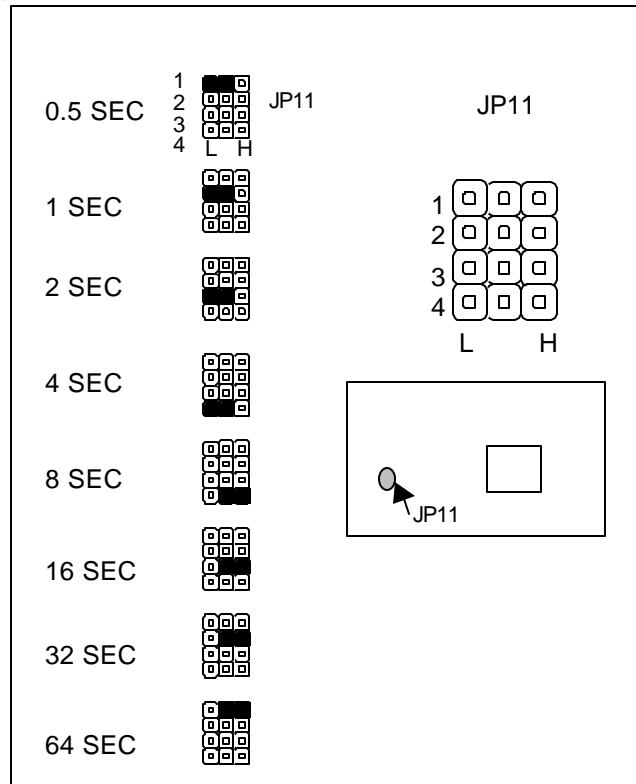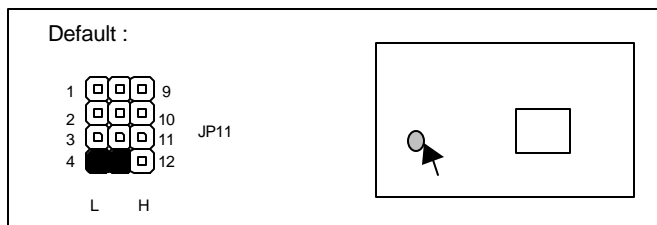



● **JP12 : Select Disk On Chip (Flash Disk) Address**

Flash Disk Address	JP12
C8000~CFFFF	1-2
D0000~D7FFF	3-4
D8000~DFFFF	5-6
Default	2-4

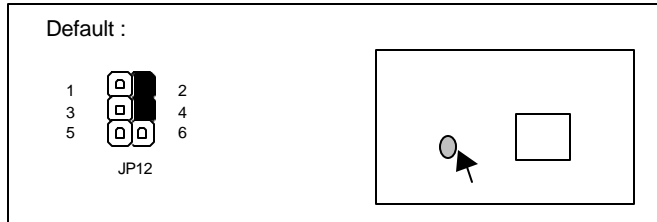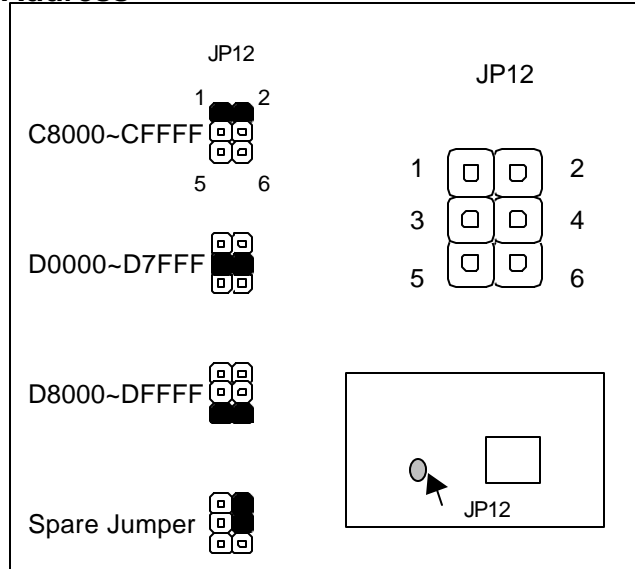



● **JP13 : Clear CMOS Jumper**

Clear CMOS Jumper	JP13
Normal (Default)	1-2
Clear CMOS	2-3

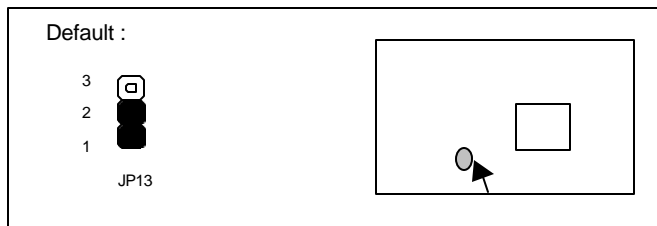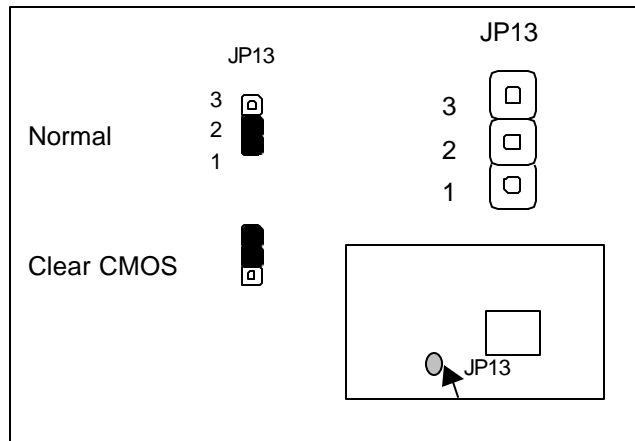


● **JP14 : Select Watch-Dog Active Type**

Active Type	JP14
Reset System (Default)	1-2
NMI System	2-3
Disable Watch-Dog	OFF

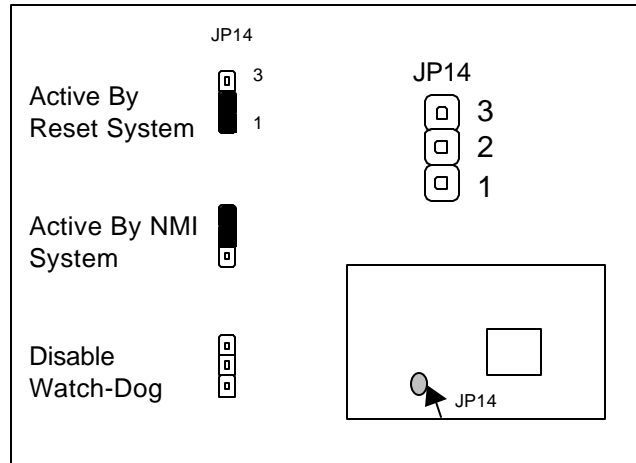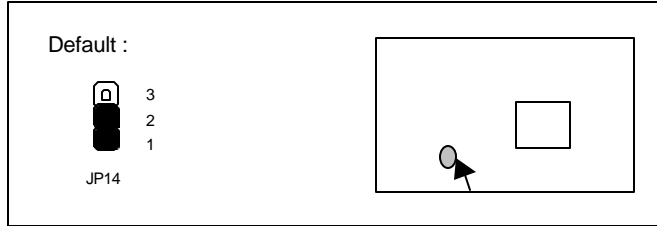

2.7 I/O CONNECTOR LOCATION FOR TF-586VM

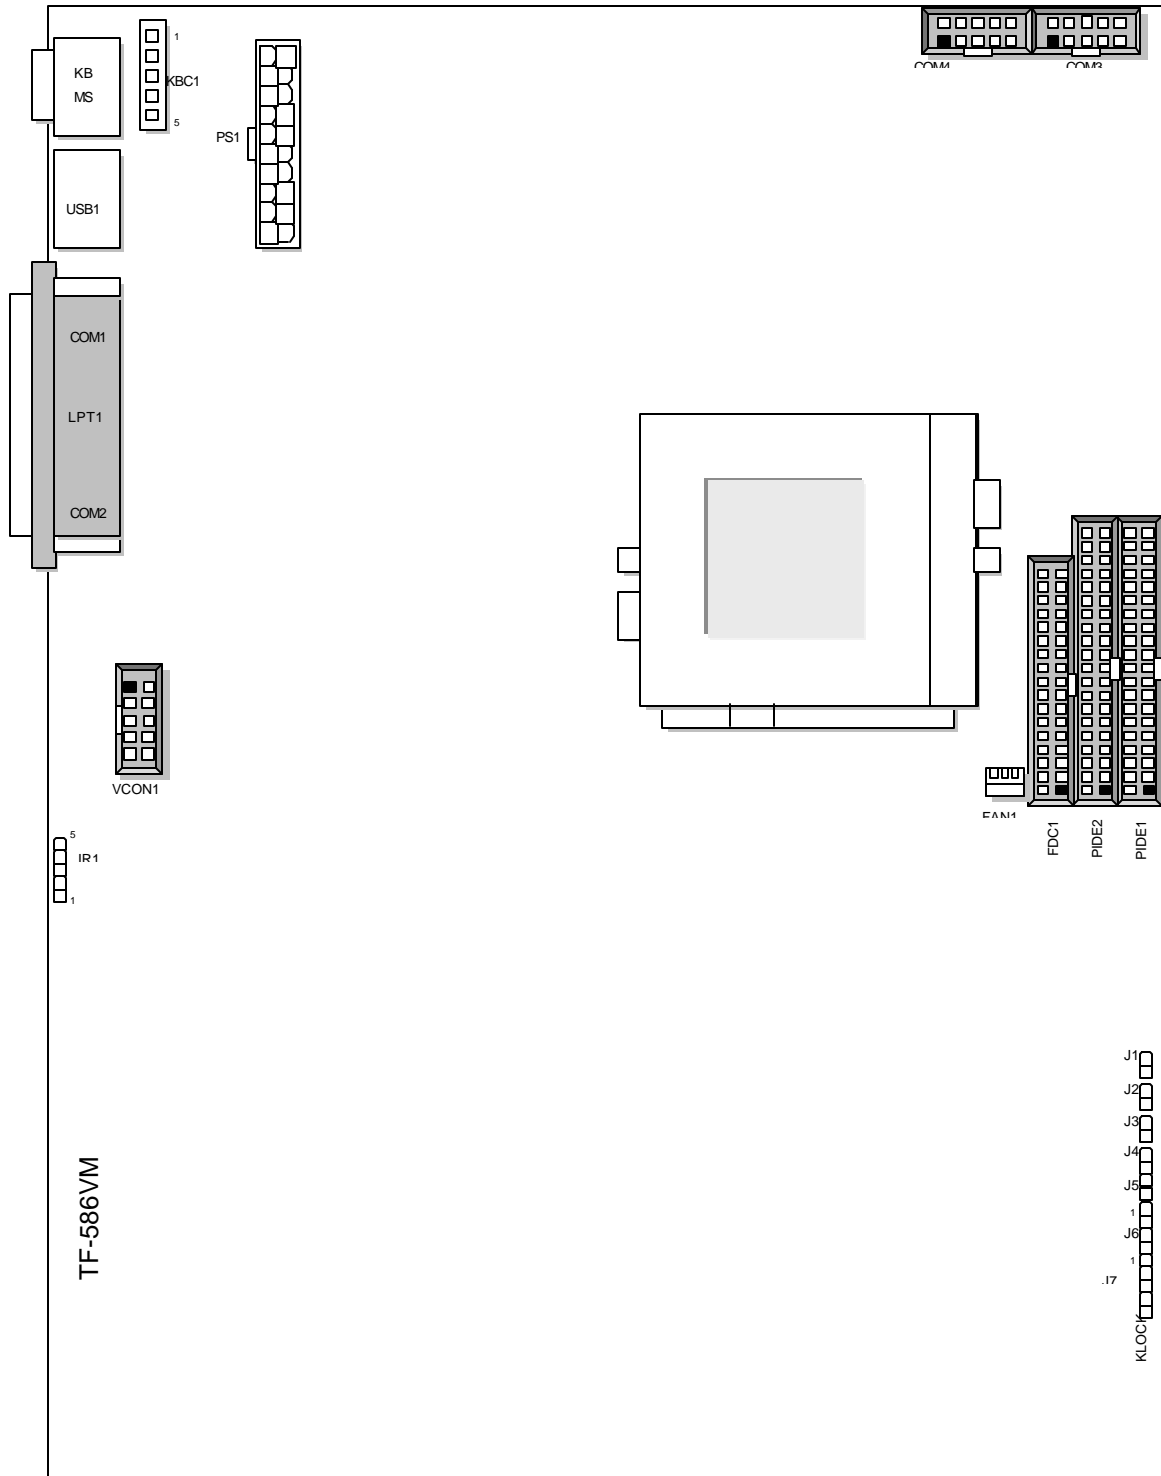

2.8 I/O CONNECTOR SUMMARY FOR TF-586VM

CONNECTOR	FUNCTION
J1	HDD LED
J2	Green LED
J3	Power Button
J4	Green Switch
J5	Reset Switch
J6	Ext. Speaker
J7	Key Lock & Power LED
FAN1	FAN Connector
VCON1	External VGA Connector
COM1	RS-232 Port #1 Connector (D-Sub)
COM2	RS-232 Port #2 Connector (D-Sub)
COM3	COM3 Connector
COM4	COM4 Connector
IR1	Alternate IrDa Connector
KBC1	External Keyboard Connector
PS1	ATX Power Connector
MS	PS/2 Mouse Connector (Mini-Din)
KB	PS/2 Keyboard Connector (Mini-Din)
USB1	USB Port #1 & Port #2 Connector
PIDE1/PIDE2	EIDE Interface Connector (Header)
FDC1	Floppy Interface Connector (Header)
LPT1	Parallel Port Connector (D-Sub)
VGA1	CRT VGA Connector

2.9 SYSTEM STATUS INDICATE AND CONTROL CONNECTORS

CONNECTOR	PIN NO.	DESCRIPTION
J1 : HDD LED	1	VCC
	2	Ground
J2 : Green LED	1	VCC
	2	Ground
J3 : Power Button		
J4 : Green Switch		
J5 : Reset Switch		
J6 : Ext. Speaker	1	VCC
	2	NC
	3	NC
	4	Signal
J7 : Key Lock & Power LED	1	VCC
	2	NC
	3	Ground
	4	Keylock #
	5	Ground

2.10 I/O CONNECTORS DESCRIPTION

● FAN1 : FAN Connector

PIN NO.	DESCRIPTION
1	Ground
2	+12V
3	FAN Status





● VCON1 : External VGA Connector

PIN NO.	DESCRIPTION
1	Red Color Signal
2	Green Color Signal
3	Blue Color Signal
4	V-SYNC
5	H-SYNC
6	Ground
7	Ground
8	Ground
9	Ground
10	Ground





● **COM1 : RS-232 Port#1 Connector (D-Sub)**

PIN NO.	DESCRIPTION
1	Data Carrier Detect (DCD#)
2	Receive Data (RXD)
3	Transmit Data (TXD)
4	Data Terminal Ready (DTR#)
5	Ground (GND)
6	Data Set Ready (DSR#)
7	Request To Send (RTS#)
8	Clear To Send (CTS#)
9	Ring Indicator (RI#)

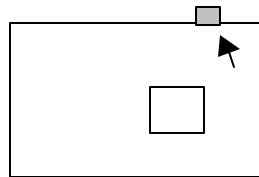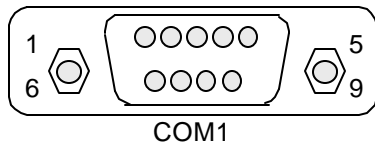



● **COM2 : RS-232 Port#2 Connector (D-Sub)**

PIN NO.	DESCRIPTION
1	Data Carrier Detect (DCD#)
2	Receive Data (RXD)
3	Transmit Data (TXD)
4	Data Terminal Ready (DTR#)
5	Ground (GND)
6	Data Set Ready (DSR#)
7	Request To Send (RTS#)
8	Clear To Send (CTS#)
9	Ring Indicator (RI#)

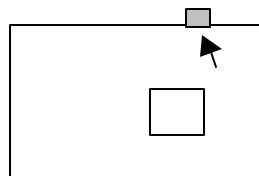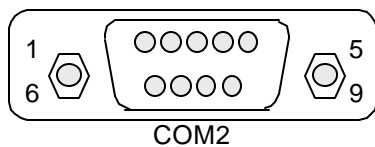



● **COM3 : COM3 Connector**

PIN NO.	DESCRIPTION
1	DCD3#
2	SIN3
3	SOUT3
4	DTR3#
5	GND
6	DSR3#
7	RTS3#
8	CTS3#
9	RI3#
10	NC

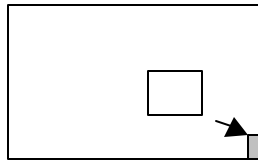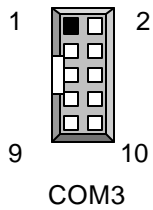


● **COM4 : COM4 Connector**

PIN NO.	DESCRIPTION
1	DCD4#
2	SIN4
3	SOUT4
4	DTR4#
5	GND
6	DSR4#
7	RTS4#
8	CTS4#
9	RI4#
10	NC

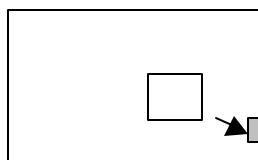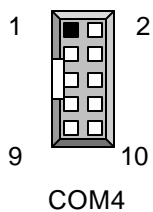



● **IR1 : Alternate IrDa Connector**

PIN NO.	DESCRIPTION
1	VCC
2	NC
3	IR_RX
4	Ground
5	IR_TX

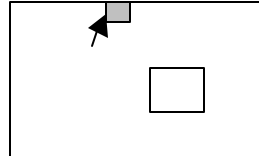


● **KBC1 : External Keyboard Connector**

PIN NO.	DESCRIPTION
1	Keyboard Clock
2	Keyboard Data
3	NC
4	Ground
5	VCC

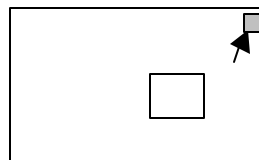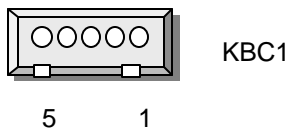


● **PS1 : ATX Power Connector**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	3.3V	2	3.3V
3	Ground	4	5V
5	Ground	6	5V
7	Ground	8	Power Good
9	Stand_By 5V	10	12V
11	3.3V	12	-12V
13	Ground	14	PS_ON
15	Ground	16	Ground
17	Ground	18	-5V
19	5V	20	5V

 


PS1

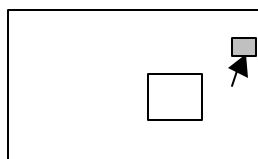


● **MS : PS/2 Mouse Connector (Mini Din)**

PIN NO.	DESCRIPTION
1	PS/2 Mouse Data
2	NC
3	Ground
4	5V
5	PS/2 Mouse Clock
6	NC

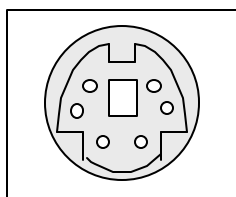


MS

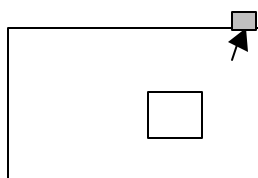


● **KB : PS/2 Keyboard Connector (Mini Din)**

PIN NO.	DESCRIPTION
1	PS/2 Keyboard Data
2	NC
3	Ground
4	5V
5	PS/2 Keyboard Clock
6	NC

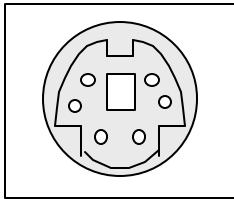


KB

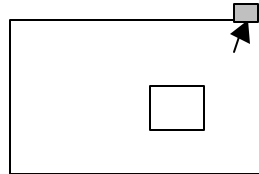


● **USB1 : USB Port #1 & Port #2 Interface Connector**

PIN NO.	DESCRIPTION
1	USB VCC
2	USB P0-
3	USB P0+
4	S_Ground
5	USB VCC
6	USB P1-
7	USB P1+
8	S_Ground
9	Ground
10	Ground

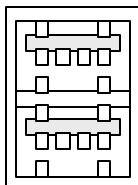


USB1

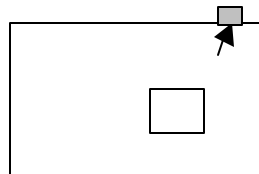



● **PIDE1 / PIDE2 : EIDE Interface Connector (Header)**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Reset #	2	Ground
3	Data 7	4	Data 8
5	Data 6	6	Data 9
7	Data 5	8	Data 10
9	Data 4	10	Data 11
11	Data 3	12	Data 12
13	Data 2	14	Data 13
15	Data 1	16	Data 14
17	Data 0	18	Data 15
19	Ground	20	NC
21	DMA REQ	22	Ground
23	IOW#	24	Ground
25	IOR#	26	Ground
27	IOCHRDY	28	Ground
29	DMA ACK#	30	Ground
31	Interrupt	32	NC
33	SA1	34	NC
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD Active	40	Ground

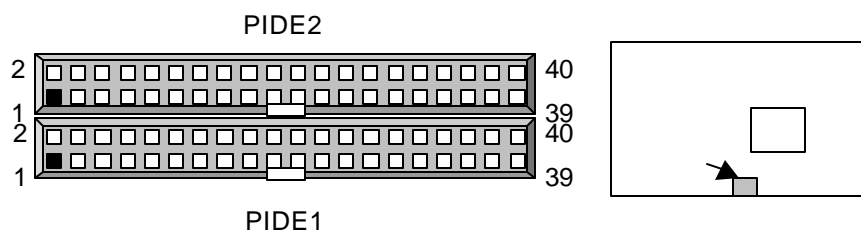



● **FDC1 : Floppy Interface Connector (Header)**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Ground	2	Density Select
3	Ground	4	NC
5	Ground	6	DS1
7	Ground	8	Index #
9	Ground	10	Motor Enable A#
11	Ground	12	Drive Select B#
13	Ground	14	Drive Select A#
15	Ground	16	Motor Enable B#
17	Ground	18	Direction #
19	Ground	20	Step #
21	Ground	22	Write Data #
23	Ground	24	Write Gate #
25	Ground	26	Track 0#
27	Ground	28	Write Protect
29	NC	30	Read Data #
31	Ground	32	Head Side Select #
33	NC	34	Disk Change #

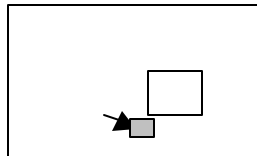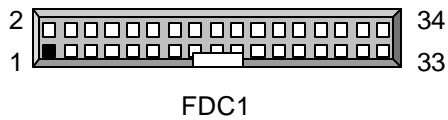


● **LPT1 : Parallel Port Connector (D-Sub)**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Strobe #	2	Auto Form Feed
3	Data 0	4	Error #
5	Data 1	6	Initialize #
7	Data 2	8	Printer Select IN #
9	Data 3	10	Ground
11	Data 4	12	Ground
13	Data 5	14	Ground
15	Data 6	16	Ground
17	Data 7	18	Ground
19	Acknowledge #	20	Ground
21	Busy	22	Ground
23	Paper Empty	24	Ground
25	Printer Select	26	NC

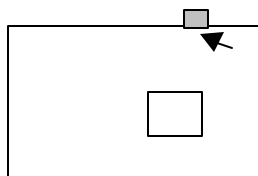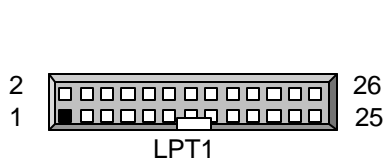


● **VGA1 : CRT VGA Connector**

PIN NO.	DESCRIPTION
1	Red Color Signal
2	Green Color Signal
3	Blue Color Signal
4	NC
5	Ground
6	Ground
7	Ground
8	Ground
9	VCC
10	Ground
11	NC
12	DC2 Data
13	H-Sync.
14	V-Sync.
15	DC2 Clock

 

VGA1

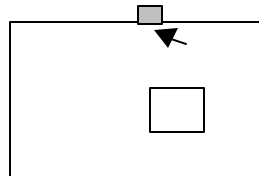

CHAPTER 3.**AWARD BIOS SETUP**

The Basic Input/Output System (BIOS) is a program that takes care of the basic level of communication between the processor and peripherals. In addition, the BIOS also contain codes for various advanced features found in the system board. Award's ROM BIOS provides a built-in Setup program that allows user to modify the basic system configuration and settings. The modified data will be stored in a battery-backed CMOS RAM so that these data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM stay unchanged unless there is configuration change in the system, such as hard drive replacement or new equipment is installed.

3.1 RUNNING AWARD BIOS

The Setup Utility is stored in the BIOS ROM. When the power of the computer system is turned on, a screen message appears to give you an opportunity to call up the Setup Utility; while the BIOS will enter the Power On Self Test (POST) routines. The POST routines perform various diagnostic checks while initializing the board hardware. If the routines encounter an error during the tests, the error will be reported in either of the two different ways, hear a series of short beeps or see an error message on the screen display. There are two kinds of error: fatal or non-fatal. The system can usually continue to boot up sequence with the non-fatal errors. Non-fatal error messages usually appear on the screen along with the following instructions:

“ Press <F1> to RESUME ”

Write down the message and press the F1 key to continue the bootup sequence. After the POST routines are completed, the following message appears:

“ Press DEL to enter SETUP ”

Entering Setup

Turn on the power of the computer system and press immediately. If you don't have the chance to respond, reset the system by simultaneously typing the <Ctrl>, <Alt> and <Delete> keys, or by pushing the ' Reset ' button on the system cabinet. You can also restart by turning the system OFF then ON.

3.3 STANDARD CMOS SETUP

When you select the "STANDARD CMOS SETUP" on the main program, the screen display will appear as :

Standard CMOS Setup Screen

ROM PCI / ISA BIOS(2A59IL7G)																	
STANDARD CMOS SETUP																	
AWARD SOFTWARE, INC.																	
Date (mm : dd : yy) : Wed, Jun 24 1998																	
Time (hh : mm : ss) : 9 : 20 : 26																	
HARD DISKS	TYPE	SIZE	CYLS.	HEAD	PRECOMP	LANDZ	SECTOR	MODE									
Primary Master	: Auto	0	0	0	0	0	0	AUTO									
Primary Slave	: Auto	0	0	0	0	0	0	AUTO									
Secondary Master	: Auto	0	0	0	0	0	0	AUTO									
Secondary Slave	: Auto	0	0	0	0	0	0	AUTO									
Drive A : 1.44M, 3.5 in.				<table border="1"> <tr> <td>Base Memory :</td> <td>640K</td> </tr> <tr> <td>Extended Memory :</td> <td>64512K</td> </tr> <tr> <td>Other Memory :</td> <td>384K</td> </tr> <tr> <td>Total Memory :</td> <td>65536K</td> </tr> </table>						Base Memory :	640K	Extended Memory :	64512K	Other Memory :	384K	Total Memory :	65536K
Base Memory :	640K																
Extended Memory :	64512K																
Other Memory :	384K																
Total Memory :	65536K																
Drive B : None																	
Floppy 3 Mode Support : Disabled																	
Video : EGA/VGA																	
Halt On : All Errors																	
ESC : Quit ↑ ↓ → ← : Select Item PU / PD / + / - : Modify F1 : Help (Shift) F2 : Change Color																	

The Standard CMOS Setup utility is used to configure the following components such as date, time, hard disk drive, floppy drive, display, and memory. Once a field is highlighted, on-line help information is displayed in the left bottom of the Menu screen.

Set Date : Month, Date, Year.

Set Time : Hour, Minute and Second. Use 24 Hour clock format (for p.m. time, add 12 to the hour number, you would enter 4:30p.m. as 16:30). When you select the "STANDARD CMOS SETUP" on the main program, the screen display will appear as :

Hard Disks : There are four hard disks listed: “Primary Master”, “Primary Slave”, “Secondary Master” and “Secondary Slave”. For each IDE channel, the first device is the “Master” and the second device is “Slave”. Hard disk types from 1 to 45 are the standard ones. To select or change the configuration, move the cursor to the desired position and press <Page Up> or <Page Down> to change the option : (1) Press “Auto” for IDE HDD auto detection, (2) Press “User” for user definable, and Press “None” for not installed (e.g. SCSI). There are six categories of information that you must enter for a HDD: “CYLS.” for (number of cylinders), “HEADS” for (number of heads), “PRECOMP” for (write pre-compensation), “LANDZ” for (landing zone), “SECTOR” for (number of sectors) and ”MODE“ for (Normal, LBA, LARGE and AUTO). The hard disk vendor’s or system manufacturer’s documentation should provide you with the drive specifications. For an IDE hard drive, you can set “TYPE” to “Auto” or use the “IDE HDD AUTO DETECTION” utility in the main program screen to enter the drive specifications.

Here is a brief explanation of drive specifications:

- **Type** : The BIOS contains a table of pre-defined drive types. Each defined drive type has specified number of cylinders, number of heads, write compensation factor, landing zone, and number of sectors. Drives whose specifications do not accommodate any pre-defined type are classified as type USER.
- **Size** : Disk drive capacity (approximate). Note that this size is usually slightly greater than the size of a formatted disk given by a diskchecking program.
- **Cyls** : Number of cylinders.
- **Head** : Number of heads.
- **Precomp** : Write precompensation cylinder
- **Landz** : Landing zone.
- **Sector** : Number of sectors.
- **Mode** : Auto, Normal, Large, or LBA.
 - Auto: The BIOS automatically determines the optimal mode.
 - Normal: Maximum number of cylinders, heads, and sectors supported are 1024, 16, and 63.
 - Large: For drives that do not support LBA and have more than 1024 cylinders.
 - LBA (Logical Block Addressing): During drive accesses, the IDE controller transforms that data address described by sector, head, and cylinder number into physical block address, significantly improving data transfer rates. For drives with greater 1024 cylinders.

There are four hard disks listed: "Primary Master", "Primary Slave", "Secondary Master" and "Secondary Slave". For each IDE channel, the first device is the "Master" and the second device is "Slave". Hard disk types from 1 to 45 are the standard one. To select or change the configuration, move the cursor to the desired position and press <Page Up> or <Page Down> to change the option.

The AWARD BIOS supports three HDD modes: NORMAL, LBA and LARGE.

NORMAL mode : This is a Generic Access mode in which neither the BIOS nor the IDE controller will make any transformation during the accession. The maximum HDD size is supported by the NORMAL mode that is 528 Megabytes.

LBA mode : This is a Logical Block Addressing mode which is a HDD accessing method to overcome the 528 Megabytes restriction. The number of cylinders, heads and sectors that are shown in setup may not be the physical number contained in the HDD.

During the HDD accessing, the IDE controller will transform the logical address that is described by the cylinder, head and sector numbers into its own physical address as contained inside the HDD. The maximum HDD size that is supported by the LBA mode is 8.4 Gigabytes.

LARGE mode : Some IDE HDD contains more than 1024 cylinders without the LBA support. This access mode tricks DOS (or other OS) with the number of cylinders that is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside INT13H in order to access to the right HDD address. The maximum HDD size that is supported by the LARGE mode is 1 Gigabytes.

- Note :
1. To support LBA or LARGE mode, there are softwares located in the AWARD HD Service Routine "INT13H". It may fail to access a HDD with LBA or LARGE modes selected if you are running under an Operating System that replaces the whole INT13H service routine.
 2. Entering incorrect drive specifications will result in a hard disk drive that will function improperly or no function at all.

Drive A and Drive B : Select the correct specifications for the diskette drive(s) installed in the computer.

None	No diskette drive installed
360K, 5.25 in	5-1/4 inch PC-type standard drive; 360 kilobyte capacity
1.2M, 5.25 in	5-1/4 inch AT-type high-density drive; 1.2 megabyte capacity
720K, 3.5in	3 1-2 inch double-sided drive; 720 kilobyte capacity
1.44M, 3.5 in	3 1-2 inch double-sided drive; 1.44 megabyte capacity
2.88M, 3.5 in	3 1-2 inch double-sided drive; 2.88 megabyte capacity

Note : 1. Not Installed could be used as an option for diskless workstations..

2. Highlight the listing after each drive name and select the appropriate entry.

Video : Select the type of primary video subsystem in your computer. The BIOS usually detects the correct video type automatically. The BIOS supports a secondary video subsystem, but you do not select it in Setup.

EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SEGA, SVGA or PGA monitor adapters.
CGA 40	Color Graphics Adapter, power up in 40 column mode
CGA 80	Color Graphics Adapter, power up in 80 column mode
MONO	Monochrome adapter, includes high resolution monochrome adapters

Halt On : During the power-on-self-test (POST), the computer stops if the BIOS detects a hardware error. You can tell the BIOS to ignore certain errors POST and continue the boot-up process. These are the selections:

No errors	Whenever the BIOS detects a non-fatal error the system will not be stopped and you will be prompted
All errors	The system boot will be stopped for any error that may be detected.
All, But Keyboard	The system boot will not stop for a keyboard error ; it will stop for all Other errors.
All, But Diskette	The system boot will not stop for a disk error ; it will stop for all other Errors.
All, But Disk/Key	The system boot will not stop for a keyboard or disk error ; it will stop for all other errors.

Memory : You cannot change any values in the Memory fields; they are only for your information. The fields show the total installed random access memory (RAM) and amounts allocated to base memory, extended memory, and other (high) memory. RAM is counted in kilobytes (KB: approximately one thousand bytes) and megabytes (MB: approximately one million bytes).

RAM is the computer's working memory, where the computer stores programs and data currently being used, so they are accessible to the CPU. Modern personal computers may contain up to 64MB, 128MB, or more.

- **Base Memory** : Typically 640KB. Also called conventional memory. The DOS operating system and conventional applications use this area.
- **Extended Memory** : Above the 1-MB boundary. Early IBM personal computers could not use memory above 1MB, but current PCs and their software can use extended memory.
- **Other Memory** : Between 640KB and 1MB; called High memory. DOS may load terminate-and-stay-resident (TSR) programs, such as device drivers, in this area, to free as much conventional memory as possible for applications. Lines in your CONFIG.SYS file that start with LOADHIGH load programs into high memory.

3.4 BIOS Features Setup

When you select the “BIOS FEATURES SETUP” on the main program, the screen display will appear as:

BIOS Features Setup Screen

ROM PCI / ISA BIOS (2A59IL7G) BIOS FEATURES SETUP AWARD SOFTWARE, INC			
Virus Warning	:Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	:Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	:Enabled	CC000-CFFFF Shadow	: Disabled
Quick Power On Self Test	:Enabled	D0000-D3FFF Shadow	: Disabled
Boot Sequence	:A,C,SCSI	D4000-D7FFF Shadow	: Disabled
Swap Floppy Drive	:Disabled	D8000-DBFFF Shadow	: Disabled
Boot Up Floppy Seek	:Disabled	DC000-DFFFF Shadow	: Disabled
Boot Up NumLock Status	:On		
Boot Up System Speed	:High		
Gate A20 Option	:Fast		
Typematic Rate Setting	:Disabled		
Typematic Rate (Chars/Sec)	:6		
Typematic Delay (Msec)	:250		
Security Option	:Setup		
PCI/VGA Palette Snoop	:Disabled		
Assign IRQ For VGA	:Enabled	ESC : Quit	↑↓→← : Select Item
OS Select For DRAM >64MB	:Non-OS2	F1 : Help	PU /PD +/- - : Modify
		F5 : Old Values (Shift) F2	: Color
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

The following explains the options for each of the features as listed in the above menu:

Virus Warning : The default setting of the Virus Warning is “Disabled”. When it is enabled, any attempt to write the boot sector and partition table will halt the system and cause a warning message to appear. If this happens, you can use an anti-virus utility on a virus free, bootable floppy diskette to reboot, to clean and to investigate your system.

CPU Internal Cache : The default setting is “Enabled”. This setting enables the CPU internal cache .

External Cache : The default setting is “Enabled”. This setting enables the external cache.

Quick Power On Self Test : The default setting is “Enabled”. This speeds up the Power On Self Test (POST) by skipping some items that are normally checked during the full POST. If your system is functioning normally, you can choose this feature to speed the booting process.

Boot Sequence : The default setting is “A:,C SCSI”; the other options are “C,A,SCSI”; “C,CDROM,A”; “CDROM,C,A”; “D,A,SCSI”; “E,A,SCSI”; “F,A,SCSI”; “SCSI,A,C”; “SCSI,C,A”; “C only”; and “LS/ZIP,C”. This setting determines where the computer looks first for an operating system, the hard disk, or the floppy disk, ... or other. The BIOS will load the operating system from the disk drives in the sequence as selected here.

Swap Floppy Drive : The default setting is “Disabled”. This setting gives you an option to swap A and B floppy disks. Normally, the floppy drive A is the one at the end of the cable and drive B is at the other end. If you set this option to “Enabled”, the Drive A will function as Drive B, and vice-versa under the DOS.

Boot Up Floppy Seek : The defaults setting is “Disabled”. When enabled, the BIOS will check whether there is a floppy disk drive installed.

Boot Up Numlock Status : The default setting is “On”. If set “Off”, the cursor controls will function on the numeric keypad.

Boot Up System Speed : The default setting is “High”. This sets the CPU speed at boot up.

Gate A20 Option : The default setting is “Fast”. This is the optimal setting for the CPU card. The other option is “Normal”.

Typematic Rate Setting : The default setting is “Disabled”. If enabled, you can set the typematic rate and typematic delay.

Typematic Rate (Chars/Sec) : This setting controls the speed at which the system registers the repeated keystrokes. The choices range from 6 to 30 Chars/Sec. The default setting is “6” Chars/Sec.

Typematic Delay (Msec) : This setting controls the time between the display of the first and second characters. There are four delay choices: 250ms, 500ms, 750ms and 1000ms. The default setting is “250” ms.

Security Option : This setting controls the password in the main screen. The options are “Setup” and “System”. Select “Setup” and it will protect the Setup Utility settings from being tampered with. Select “System” if you want to use password feature every time the system boots up. The default setting is “Setup”. You can create your password by using the “SUPERVISOR/USER PASSWORD” utility on the main program screen.

PCI/VGA Palette Snoop : The default setting is “Disabled”. Set to “Enable” if any ISA adapter card installed requires VGA palette snooping.

OS Select For DRAM > 64MB : The default setting is “Non-OS2”. Set to “OS2” if the system memory size is greater than 64MB and the operating system is OS/2.

Video BIOS Shadow : The default setting is “Enabled” which will copy the VGA display card BIOS into system DRAM to improve performance.

C8000-CBFFF Shadow to DC000-DFFFF Shadow : The default setting for the shadow feature is “Disabled”. When enabled, the ROM with the specific address is copied into system DRAM. It will also reduce the size of memory available to the system. After you have made your selection in the BIOS FEATURES SETUP, press the <ESC> key to go back to the main program screen.

3.5 CHIPSET FEATURES SETUP

When you select the “CHIPSET FEATURES SETUP” on the main program, the screen display will appear as:

Chipset Features Setup Screen

ROM PCI / ISA BIOS (2A59IL7G)			
CHIPSET FEATURES SETUP			
AWARD SOFTWARE, INC.			
AUTO Configuration	: Enabled	CPU Warning Temperature	: Disabled
DRAM Timing	: 70 ns	Current CPU Temperature	: 31°C/87°F
DRAM Leadoff Timing	: 10 / 6 / 4	Current CPUFAN1 Speed	: 4500 RPM
DRAM Read Burst (EDO/FP)	: x333/x444	Current Vin3 (V)	: 2.81V
DRAM Write Burst Timing	: x333		
Fast EDO Lead Off	: Disabled		
Refresh RAS# Assertion	: 5 Clks		
Fast RAS To CAS Delay	: 3		
DRAM Page Idle Timer	: 2 Clks		
DRAM Enhanced Paging	: Enabled		
Fast MA to RAS# Delay	: 2 Clks		
SDRAM (CAS Lat/RAS-to-CAS)	: 3 / 3		
SDRAM Speculative Read	: Disabled		
System BIOS Cacheable	: Enabled		
Video BIOS Cacheable	: Enabled	ESC : Quit	↑↓→←: Select Item
8 Bit I /O Recovery Time	: 1	F1 : Help	PU /PD +/- : Modify
16 Bit I /O Recovery Time	: 2	F5 : Old Values (Shift) F2	: Color
Memory Hole At 15M-16M	: Disabled	F6 : Load BIOS Defaults	
PCI 2.1 Compliance	: Disabled	F7 : Load Setup Defaults	

This section describes features of the Intel 82430TX PCIsset. If your system contains a different chipset, this section will bear little resemblance to what you seen on your screen.

Auto Configuration : The default setting is “Enabled” which will optimize DRAM timing automatically depending on whether the DRAM used is either 70ns or 60ns. The other

option is “Disabled” which allows you to change DRAM timing manually.

DRAM Timing : Choose DRAM speed 60ns or 70ns.

DRAM Leadoff Timing : Select the combination of CPU clocks the DRAM on your board requires before each read from or write to the memory.

DRAM Read Burst (EDO/FP) : Sets the timing for reads from EDO (Extended Data Output) or FPM (First Page Mode) memory. The lower the timing numbers, the faster the system addresses memory. Selecting timing numbers lower than the installed DRAM is able support can result in memory errors.

DRAM Write Burst Timing : Sets the timing for writes to memory. The lower the timing numbers, the faster the system addresses memory. Selecting timing numbers lower than the installed DRAM is able to support can result in memory errors.

Fast EDO Lead off : Select Enabled only for EDO DRAMs in either a synchronous cache or cacheless system. It causes a 1-HCLK pull-in for all read leadoff latencies for EDO DRAMs (i.e., page hits, page misses, and row misses). Select Disabled if any of the DRAM rows are populated with FPM DRAMs.

Refresh RAS# Assertion : Select the number of clock ticks RAS# is asserted for refresh cycles.

Fast RAS# to CAS# Delay : When DRAM is refreshed, both rows and columns are addressed separately. This field lets you insert a timing delay between CAS and RAS strobe signals, used when DRAM is written to, read from, or refreshed. Disabled gives faster performance; Enabled give more stable performance.

DRAM Page Idle Timer : Select the amount of time in HCLKs that the DRAM controller waits to close a DRAM page after the CPU becomes idle.

DRAM Enhanced Paging : When Enabled, the chipset keeps the page open until a page/row miss. When Disabled, the chipset uses additional information to keep the DRAM page open when the host may be “right back.”

Fast MA to RAS# Delay : The values in this field are set by the system board designer, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU.

SDRAM (CAS Lat/RAS-to-CAS) : You can select a combination of CAS latency and RAS-to-CAS delay in HCLKs of 2/2 or 3/3. The system board designer should set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU.

SDRAM Speculative Read : The chipset can “speculate” on a DRAM read address, thus reducing read latencies. The CPU issues a read request containing the data memory address. The DRAM controller receives the request. When this field is Enabled, the controller issues the read command slightly before it has finished decoding the data address.

System BIOS Cacheable : Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

Video BIOS Cacheable : Selecting Enabled allows caching of the video BIOS ROM at C0000h to C7FFFh, resulting in better video performance. However, if any program writes to this memory area, a system error may result.

8/16 Bit I/O Recovery Time : The I/O recovery mechanism adds bus clock cycles between PCI-originated I/O cycles to the ISA bus. This delay takes place because the PCI bus is so much faster than the ISA bus. These two fields let you add recovery time (in bus clock cycles) for 16-bit and 8-bit I/O.

Memory Hole At 15M-16M : The default setting is “Disabled”. Set to “Enabled” when the system memory size is equal to or greater than 16M bytes, then the physical memory address from 15M to 16M will be passed to PCI or ISA. Thus, there will be 1M Bytes hole in your system memory. This option is designed for some OS with special add-on cards which need 15M-16M memory space.

PCI 2.1 Compliance : Select “Enabled” to support compliance with PCI specification version 2.1

CPU Warning Temperature : Select the combination of lower and upper limits for the CPU temperature. If the CPU temperature extends beyond either limit, any warning mechanism programmed into your system will be activated. The default setting is : 32°C/89°F.

Current CPUFAN1 Speed : This field displays the current speed of the CPU fan, if your computer contains a monitoring system.

Current Vin3 (V) : This field displays the current input voltage of the CPU, if your computer contains a monitoring system.

After you have made your selections in the CHIPSET FEATURES SETUP, press the <ESC> key to go back to the main program screen.

3.6 POWER MANAGEMENT SETUP

The “Power Management Setup” controls the CPU card’s “Green” features. When you select the “POWER MANAGEMENT SETUP” on the main program, the screen display will appear as:

Power Management Setup Screen

ROM PCI / ISA BIOS (2A59IL7G) POWER MANAGEMENT SETUP AWARD SOFTWARE, INC.		
Power Management	: User Define	** Reload Global Timer Events **
PM Control by APM	: Yes	IRQ [3 – 7 , 9 – 15], NMI : Enabled
Video Off Method	: V /H SYNC+ Blank	Primary IDE 0 : Disabled
Video Off After	: Standby	Primary IDE 1 : Disabled
MODEM Use IRQ	: 3	Secondary IDE 0 : Disabled
Doze Mode	: Disabled	Secondary IDE 1 : Disabled
Standby Mode	: Disabled	Floppy Disk : Disabled
Suspend Mode	: Disabled	Serial Port : Enabled
HDD Power Down	: Disabled	Parallel Port : Disabled
Throttle Duty Cycle	: 62.5%	
ZZ Active in Suspend	: Disabled	
VGA Active Monitor	: Enabled	
Soft-Off by PWR-BTTN	: Delay 4 Sec.	
CPUFAN Off In Suspend	: Enabled	ESC : Quit ↑↓→← : Select Item
Resume by Ring	: Disabled	F1 : Help PU /PD/+/- : Modify
IRQ 8 Break Suspend	: Disabled	F5 : Old Values (Shift) F2 : Color
		F6 : Load BIOS Defaults
		F7 : Load Setup Defaults

Power Management : This setting controls the System Doze Mode, Standby Mode and Suspend Mode Timer features. There are four options namely --

User Define : Allows you to customize all power saving timer features.

Optimize : This is the recommended setting for general use.

Test/Demo : This is for test/demonstration purpose.

Disable : Disable the power management features.

PM Control by APM : The default setting is “No”. If it is set to “Yes”, the system BIOS will wait for APM’s prompt before it enters any PM mode.

Note : If your system power management is controlled by APM and there is a task running, the APM will not prompt the BIOS to enter any power saving mode after time out.

Video Off Method : This setting controls the Video off method in power saving mode. The default setting is “V/H SYNC+Blank”. This setting disables V/H SYNC signals and blanks the screen into the power saving mode. Other options are “Blank Screen” and “DPMS”.

Video Off After : As the system moves from lesser to greater power-saving modes, select the mode in which you want the monitor to blank.

MODEM Use IRQ : Name the interrupt request (IRQ) line assigned to the modem (if any) on your system. Activity of the selected IRQ always awakens the system.

Doze Mode : Options are from “1 Min.” to “1 Hour” and “Disable”. The system speed will change from turbo to slow and the video signal will be suspended, if no Power Management events occur for a specified length of time. Full power function will return when a Wake-Up event is detected.

Standby Mode : Options are from “1 Min” to “1 Hour” and “Disable”. The system speed will change from turbo to slow and the video signal will be suspended, if no Power Management events occur for a specified length of time. Full power function will return when a Wake-Up event is detected.

Suspend Mode : Option are from “1 Min” to “1 Hour” and “Disable”. The CPU clock will be stopped and the video signal will be suspended, if no Power Management events occur for a specified length of time. Full power function will return when a Wake-Up event is detected.

HDD Power Down : Options are from “1 Min.” to “15 Min.” and “Disable”. The IDE hard drive will spin down if it is not accessed within a specified length of time.

Throttle Duty Cycle : When the system enters Doze mode, the CPU clock runs only part of the time. You may select the percent of time that the clock runs.

ZZ Active in Suspend : When Enabled, the ZZ signal is active during Suspend mode.

VGA Active Monitor : When Enabled, any video activity restarts the global timer for Standby mode.

Soft-Off by PWR-BTTN : When Enabled, turning the system off with the on/off button places the system in a very low-power-usage state, with only enough circuitry receiving power to detect power button activity or Resume by Ring activity (see next second field).

CPUFAN Off In suspend : When Enabled, the CPU fan turns off during Suspend mode.

Resume by Ring : An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.

IRQ8 Clock Event : You can turn On or Off monitoring of IRQ8 (the Real Time Clock) so it does not awaken the system from Suspend mode.

Reload Global Timer Events : When Enabled, an event occurring on each device listed below restarts the global time for Standby mode.

IRQ3-7, 9-15, NMI

Primary IDE 0

Primary IDE 1

Secondary IDE 0

Secondary IDE 1

Floppy Disk

Serial Port

Parallel Port

After you have made your selection in the POWER MANAGEMENT SETUP, press the <ESC> key to go back to the main program screen.

3.7 PNP/PCI CONFIGURATION

Both the ISA and PCI buses on the CPU card use system IRQs & DMAs. You must set up the IRQ and DMA assignments correctly through the PnP/PCI Configuration Setup utility, otherwise the SBC will not work properly.

When you select the “PnP /PCI CONFIGURATION” on the main program, the screen display will appear as:

PnP/PCI Configuration Setup Screen

ROM PCI / ISA BIOS (2A59IL7G) PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.	
PNP OS Installed : No Resources Controlled By : Manual Reset Configuration Data : Disabled	PCI IDE IRQ Map To : ISA
IRQ-3 assigned to : Legacy ISA IRQ-4 assigned to : Legacy ISA IRQ-5 assigned to : PCI/ISA PnP IRQ-7 assigned to : PCI/ISA PnP IRQ-9 assigned to : PCI/ISA PnP IRQ-10 assigned to : PCI/ISA PnP IRQ-11 assigned to : PCI/ISA PnP IRQ-12 assigned to : PCI/ISA PnP IRQ-14 assigned to : PCI/ISA PnP IRQ-15 assigned to : PCI/ISA PnP DMA-0 assigned to : PCI/ISA PnP DMA-1 assigned to : PCI/ISA PnP DMA-3 assigned to : PCI/ISA PnP DMA-5 assigned to : PCI/ISA PnP DMA-6 assigned to : PCI/ISA PnP DMA-7 assigned to : PCI/ISA PnP	Used MEM base addr : N/A ESC : Quit ↑↓→← : Select Item F1 : Help PU /PD/+/- : Modify F5 : Old Values (Shift) F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults

PNP OS Installed : Select Yes if the system operating environment is Plug-and-Play aware (e.g., Windows 95).

Resources Controlled By : The defaults setting is “Auto” which will control all IRQs and DMAs automatically. The other option is “Manual” which allows you to control IRQs and DMAs individually.

Reset Configuration Data : The default setting is “Disabled”. When set to “Enabled”, the content of the ESCD block in flash BIOS will be cleared.

IRQ assigned to and DMA assigned to : If there is a legacy ISA device which uses an IRQ or a DMA, set the corresponding IRQ or DMA to “ Legacy ISA”; otherwise you should set to PCI/ISA PnP.

PCI IDE IRQ Map To : If you disable the on-board PCI IDE controller and install a PCI IDE card on the SBC, you need to set this option. If a PCI IDE Card which uses ISA IRQ directly through a paddle card installed on an ISA slot, select “ISA” for the option “PCI IDE IRQ Map To”. If a PCI IDE Card uses PCI “INT” and is compliant to PCI Plug and Play specification, select “PCI-AUTO” for the option “PCI IDE IRQ Map To”. Otherwise, select “PCI-SLOT 1, PCI-SLOT 2 or PCI-SLOT 3, PCI-SLOT4) depending on which slot the PCI IDE Card is installed. Only INT# A and INT# B are available for a PCI IDE Card, therefore you must set the PCI IDE Card’s primary interrupt to INT A and secondary interrupt to INT B. The INT# A is routed to IRQ 14, while the INT# B is routed to IRQ 15 through a hardware router in the chipset.

Used MEM base addr : Because BIOSes fail to auto detect some specific ISA Legacy cards with requested memory space below 1M address, we have added the “Used MEM base addr” and “Used MEM Length” to support such kind of cards. Now, with these two functions, users can define where the used memory address is located and its length of the legacy area correspondingly. Based on this, BIOS will skip the UMB area that is used by the legacy device to avoid the memory space conflict. For example, if the user select “D000” for “Used MEM base addr” and “16K” for “Used MEM Length” that means the address region D0000H-D3FFFH is occupied by ISA legacy cards, and BIOS will not assign this region for PnP/ISA and PCI cards.

3.10 INTEGRATED PERIPHERALS

When you select the “INTEGRATED PERIPHERALS” on the main program, the screen display will appear as:

Integrated Peripheral Setup Screen

ROM PCI / ISA BIOS (2A59IL7G)			
INTEGRATED PERIPHERALS			
AWARD SOFTWARE, INC.			
IDE HDD Block Mode	: Enabled	UART Mode Select	: Normal
IDE Primary Master PIO	: Auto		
IDE Primary Slave PIO	: Auto		
IDE Primary Master UMDA	: Auto	Onboard Parallel Port	: 378/IRQ7
IDE Primary Slave UMDA	: Auto	Parallel Port Mode	: SPP
IDE Secondary Master PIO	: Auto		
IDE Secondary Slave PIO	: Auto		
IDE Secondary Master UMDA	: Auto	Onboard Serial Port 3	: 3E8H/IRQ3
IDE Secondary Slave UMDA	: Auto	Onboard Serial Port 4	: 2E8H/IRQ4
On-Chip Primary PCI IDE	: Enabled		
On-Chip Secondary PCI IDE	: Enabled		
USB Keyboard Support	: Disabled		
POWER ON Function	: Hot Key		
Hot Key Power On	: Ctrl-F1	ESC : Quit	↑↓→← : Select Item
KBC input clock	: 8 MHz	F1 : Help	PU /PD/+/- : Modify
Onboard FDC Controller	: Enabled	F5 : Old Values (Shift)	F2 : Color
Onboard Serial Port 1	: 3F8 / IRQ4	F6 : Load BIOS Defaults	
Onboard Serial Port 2	: 2F8 / IRQ3	F7 : Load Setup Defaults	

IDE HDD Block Mode : The Default setting is “Enabled”. This feature enhances the hard disk performance by making multi-sector transfers instead of one sector per transfer. Most IDE drives, except the very early design, have Block Mode transfer feature.

IDE Primary Master PIO, IDE Primary Slave PIO, IDE Secondary Master PIO, IDE Secondary Slave PIO : There are four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

IDE Primary Master UMDA, IDE Primary Slave UMDA, IDE Secondary Master UMDA, IDE Secondary Slave UMDA : Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Window 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/33, select Auto to enable BIOS support.

On-Chip Primary/Secondary PCI IDE : The default setting is "Enabled". This option enables the onboard Primary /Secondary PCI IDE controller.

USB Keyboard Support : Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard.

KBC input clock : The system designer must select the correct frequency for the keyboard controller input clock. Do not change the default value.

Onboard FDC Controller : Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install an add-in FDC or the system has no floppy drive, select Disabled in this field.

Onboard Serial Port 1 / 2: These options are used to assign the I/O addresses for the two on-board serial ports. They can be assigned as follows:

Auto **[Default]**

3F8 / IRQ4

2F8 / IRQ3

3E8 / IRQ4

2E8 / IRQ3

Disabled (Disable the onboard serial port)

UART Mode Select : Select an operating mode for the second serial port:

Normal	RS232C serial port
IrDA SIR	IrDA-compliant serial infrared port
IrDA MIR	1-MB/sec infrared port
IrDA FIR	Fast Infrared standard
Sharp IR	4-MB/sec data transmission

Onboard Parallel Port : This option is used to assign the I/O address for the onboard parallel port. The options are “378/IRQ7” (defaults), “278/IRQ7”, “3BC/IRQ7” and “Disabled” (disable the onboard parallel port). Note: Printer port always use IRQ7 when set to “378/IRQ7” or “278/IRQ7”, or from “3BE/IRQ7” to “Enabled”.

Parallel Port Mode: There are four options “Normal” (default), “ECP”, “ECP/EPP” and “EPP/SPP”. Change the mode from “Normal” to the enhanced mode only if your peripheral device can support it. When it is set to ECP mode, the printer port always uses DMA3.

Onboard Serial Port 3 / 4: Select a logical COM port name and matching address for the first and second serial ports. Select an address and corresponding interrupt for the third and fourth serial ports.

3.11 SUPERVISOR/USER PASSWORD

The “SUPERVISOR/USER PASSWORD” utility sets the password. The SBC is shipped with the password disabled. If you want to change the password, you must first enter the current password, then at the prompt -- enter your new password. The password is case sensitive, and can be up to 8 alphanumeric characters. Press <Enter> after you have finished typing in the password. At the next prompt, confirm the new password by re-typing it and pressing <Enter> again. When you are done, the screen automatically reverts to the main screen. Remember that when you use this feature, the “Security Option” line in BIOS FEATURES SETUP will determine when entering the password will be required.

To disable the password, press the <Enter> key instead of entering a new password when the “Enter Password” in the dialog box appears. A message will appear confirming that the password is disabled.

If you have set both supervisor and user password, only the supervisor password allows you to enter the BIOS SETUP PROGRAM.

Note : If you forget your password, the only way to solve this problem is to discharge the CMOS memory by turning power off and placing a shunt on the S1 (open pad) for 5 seconds, then removing the shunt.

3.12 IDE HDD AUTO DETECTION

If your system has an IDE hard drive, you can use this utility to detect its parameters and enter them into the Standard CMOS Setup automatically.

If the auto-detected parameters displayed do not match the ones that should be used for your hard drive, do not accept them. Press the <N> key to reject the values and enter the correct ones manually on the Standard CMOS Setup screen.

Note : If you are setting up a new hard disk drive (nothing on it) that supports LBA mode, more than one line will appear in the parameter box, choose the line that lists LBA for an LBA drive.

Do not choose Large or Normal if the hard disk drive is already fully formatted when you install it, choose the mode "HDD Low Level Format" to format it.

3.13 HDD LOW LEVEL FORMAT

Select and highlight this option press the <Enter> key to enable you to perform the low level format of hard disk drive.

3.14 SAVE & EXIT SETUP

Select this option and press the <Enter> key to save the new setting information in the CMOS memory and continue with the booting process.

3.15 EXIT WITHOUT SAVING

Select this option and press the <Enter > key to exit the Setup Utility without recording any new values or changing old ones.

CHAPTER 4.

DRIVERS SUPPORT

4.1 DRIVER DISKETTE LIST


The table below lists the drivers supported for TF-586VM

Diskette No.	Diskette Name	Driver Directory Name
Disk No. 1	S3 ViRGE 375	WIN 3.1 WIN 95 WIN NT3.51 WIN NT4.0


4.2 VGA DRIVER UTILITIES

This section describes the operation and installation of the software drivers. Below is the Windows 95 Driver Installation Procedure –


Step 1. Double click **My Computer** icon.

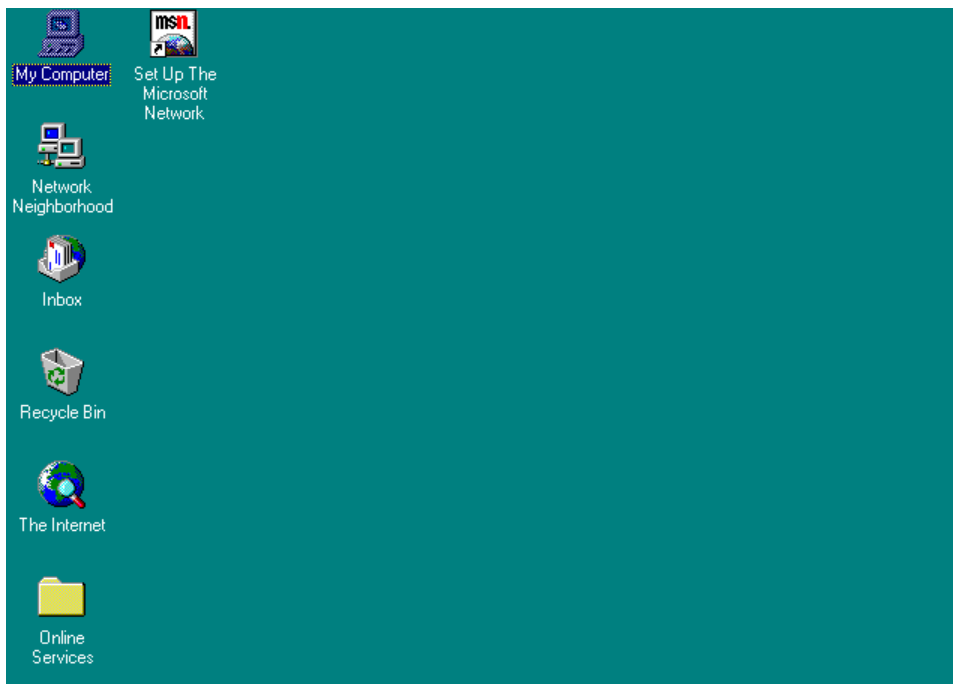


Step 2. Go back to front page of Windows 95. Click **Start**, point to **Settings**, and click **Control Panel**.

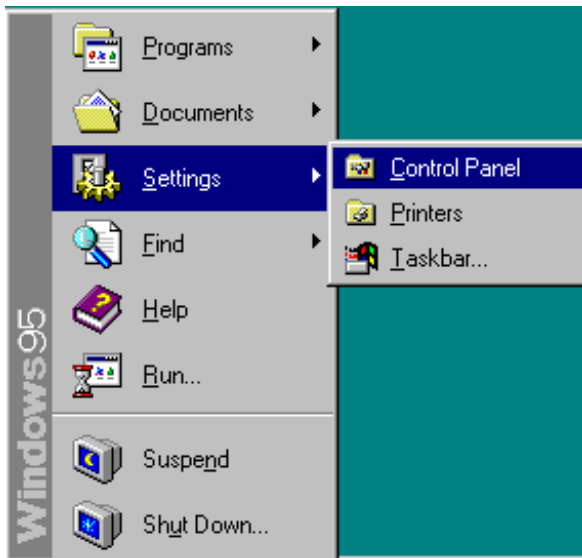


Step 3. Select and click **Display** icon under the **Control Panel** window.

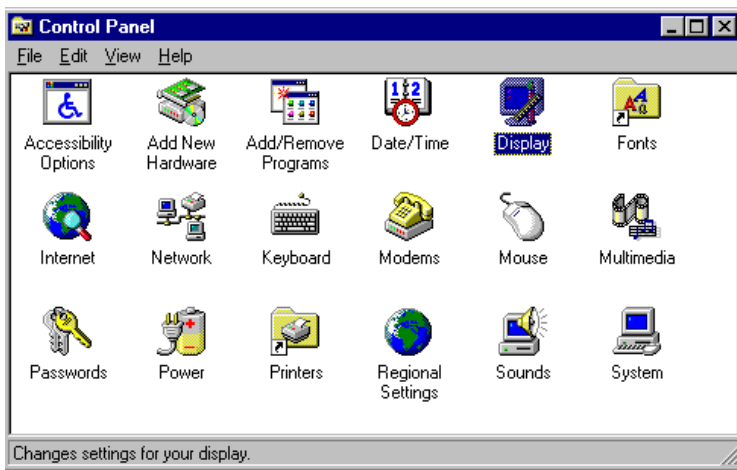


Step 4. In the **Display properties** window, click on the **Settings** folder.

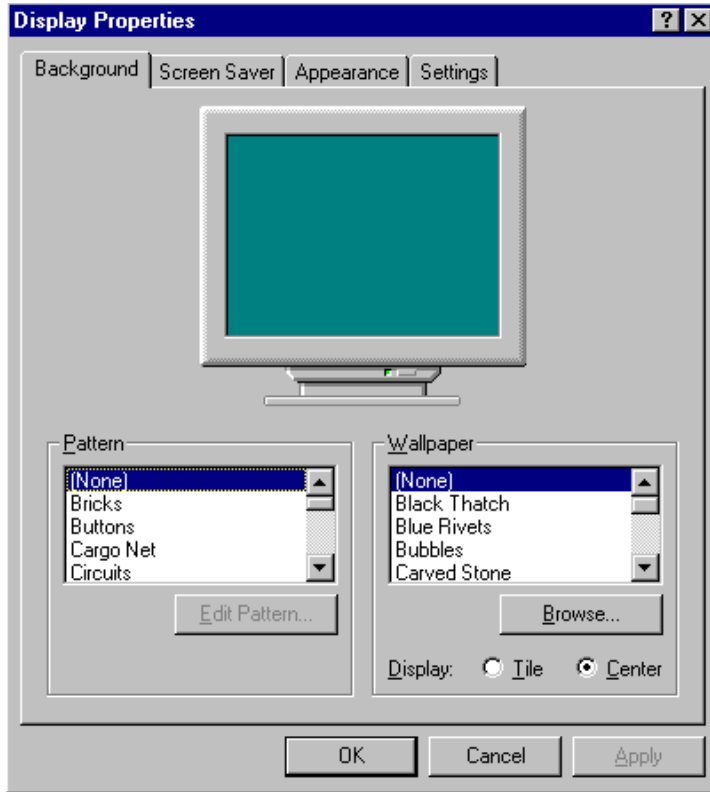


Step 5. The **Settings** window appears, then click on the **Advanced Properties** tab.

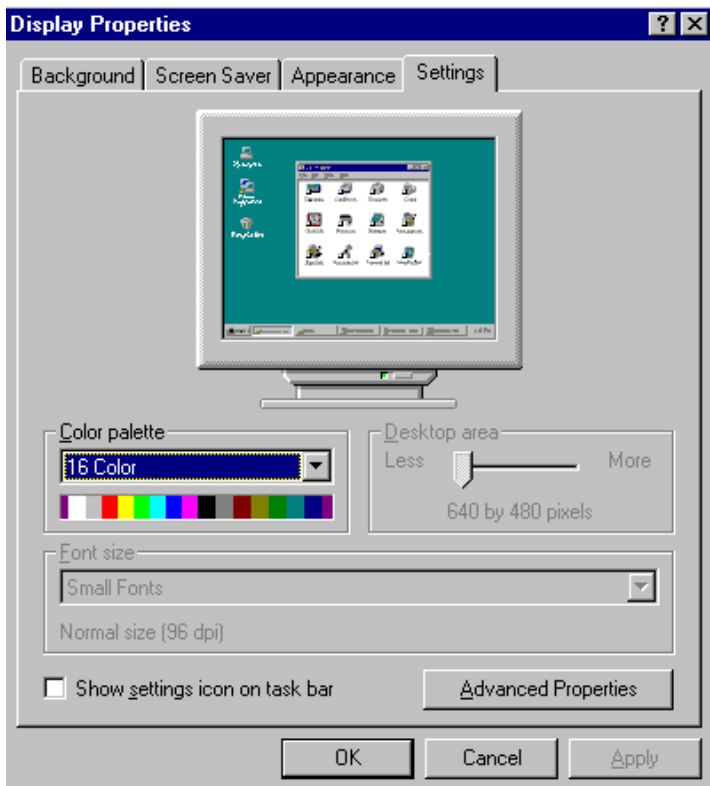


Step 6. In the **Advanced Display Properties**, click **Change** under **Adapter** folder.

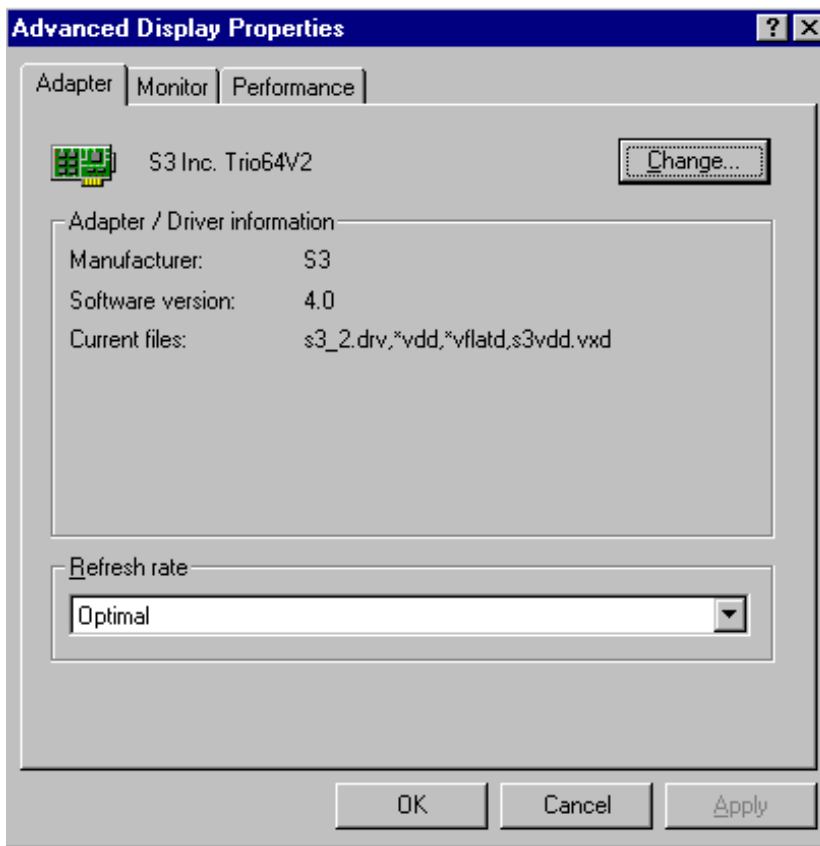


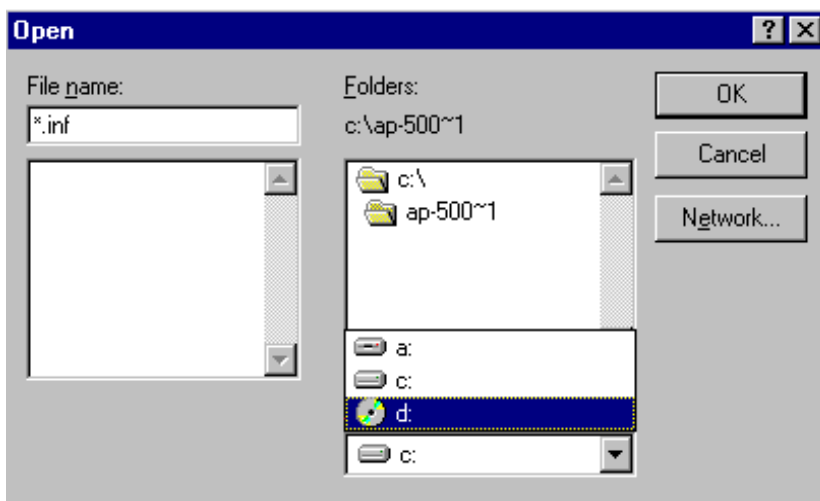
Step 7. When the **Select Device** window appears, select and click **Have Disk...** tab.

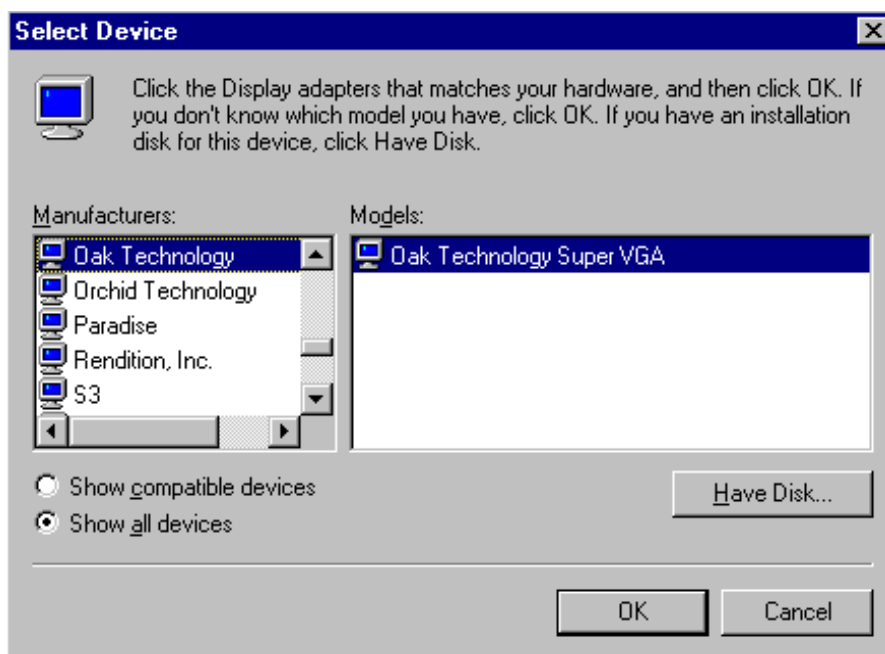


Step 8. Select and click **Browse...** tab in the **Install From Disk** window.

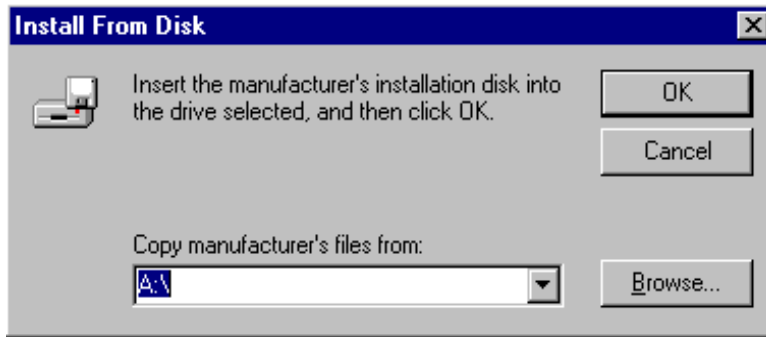


Step 9. The **Open** window appears as shown below. Move  tab in the dialog box of **Drives**. A pull out box showing the available drives. Select and point to **d:** and click to start reading d: drive.




Step 10. Select **375** folder in the Folders dialog box.

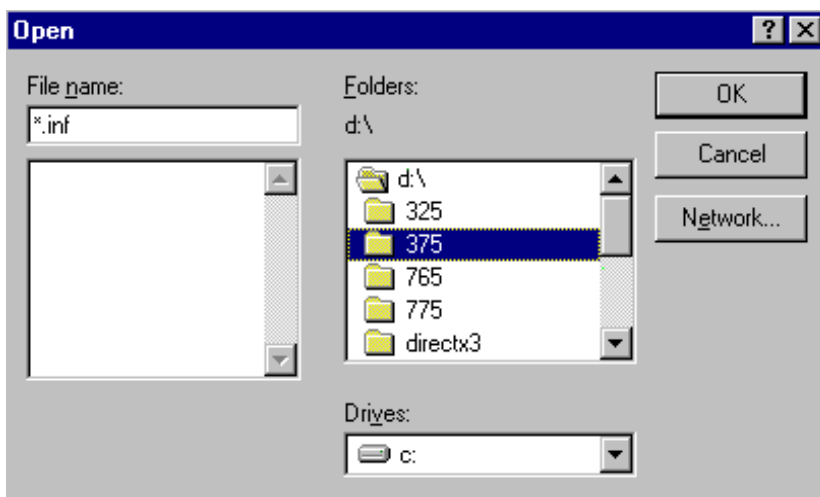

Step 11. The **Open** window appears, select **win95** driver.

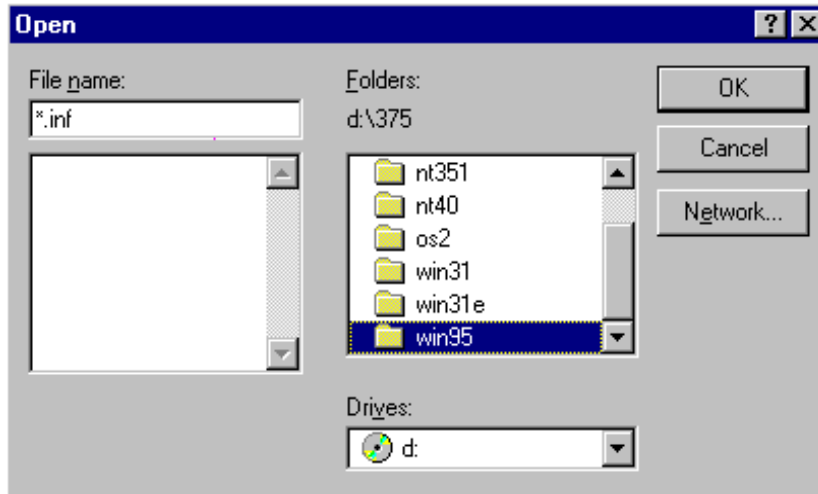


Step 12. Select and point to **s3virge.inf** under the **File name** dialog box. Click **OK** to proceed.

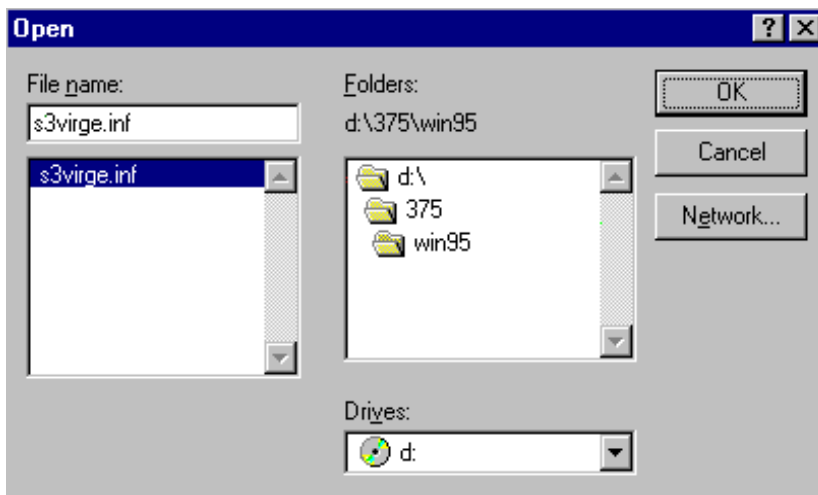


Step 13. When the **Install From Disk** window appears, select and click **Browse...** tab.




Step 14. Succeeded by the **Select Device** window, a file showing S3 Inc. ViRGE GX2 PCI is selected and shown in the **Models:** dialog box. Click **OK** tab to start installation.

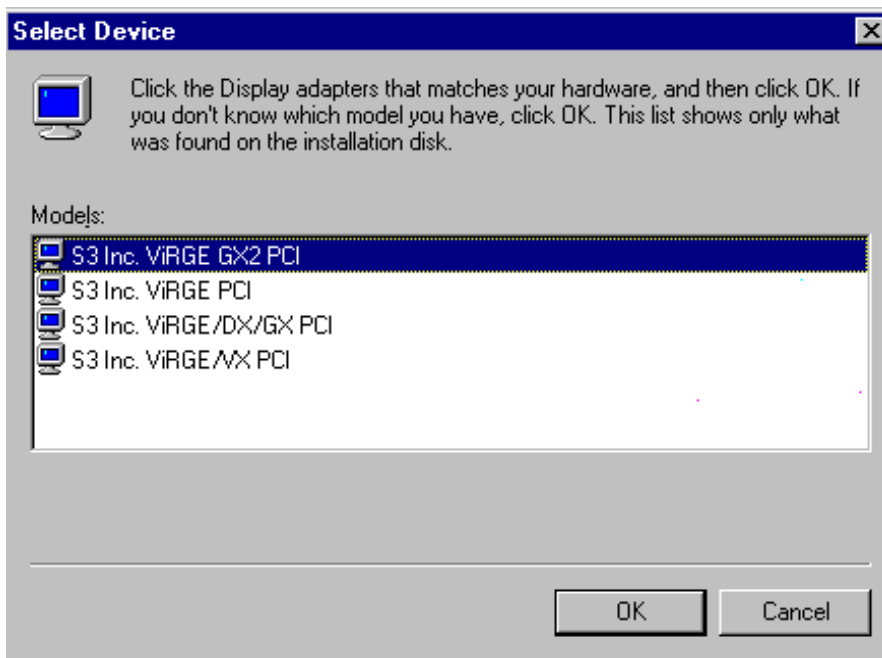


The driver program will be retrieved and install in the system.

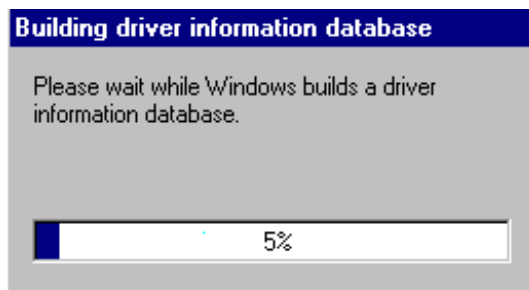


Step 15. When the installation is completed. The Advanced Display Properties windows appears to indicate the completion of the task. Point to **Close** tab and click.

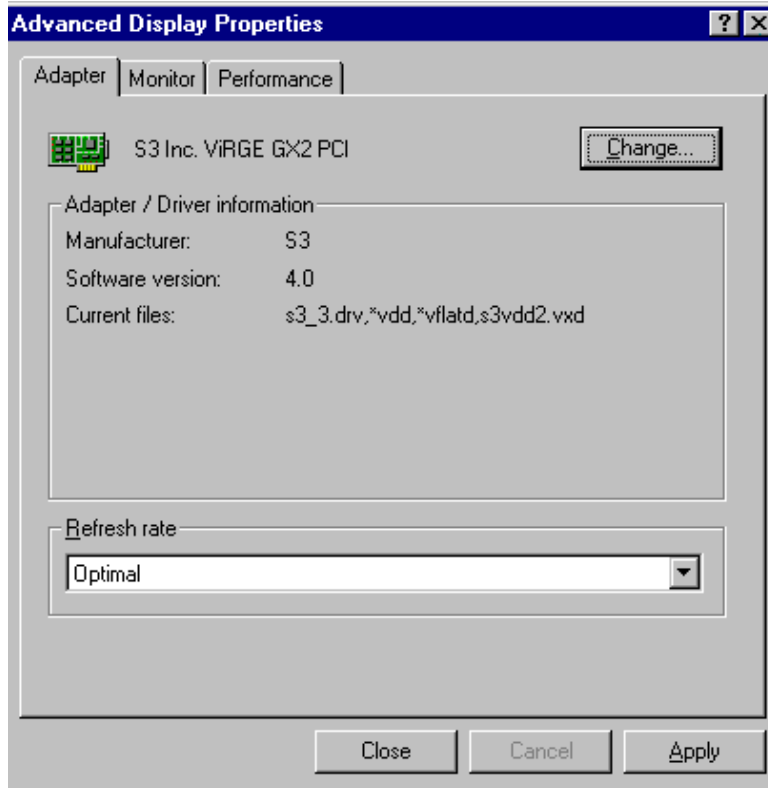

Step 16. After returning to the **Display Properties** window, point to **Close** tab and click.

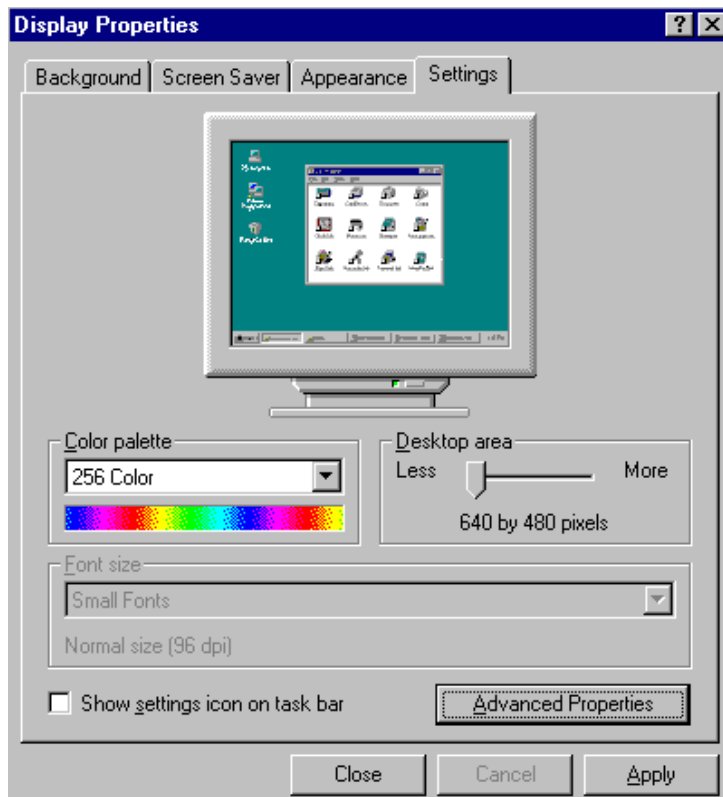

A window with message **System Settings Change** appears, select **Yes** tab and click to restart your computer with the proper vga setting that you have just chosen.

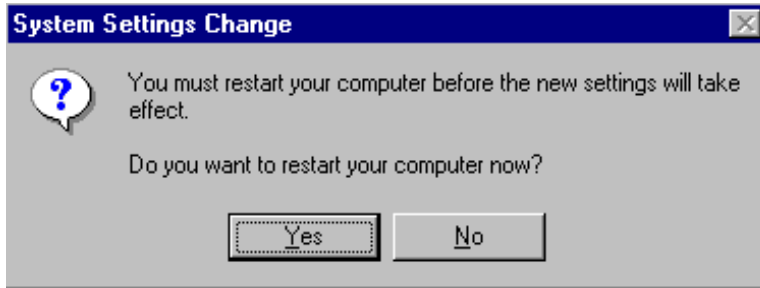

APPENDIX A.

HOW TO USE WATCH-DOG TIMER

To use the watch-dog timer :

Step 1. Enable and retrigger the Watch-Dog timer: **443H**

Step 2. Disable: **43H**

EX.1: For DOS

Execute the **DEBUG.EXE** file under DOS, Then key-in **i443**. The system will reboot automatically according to the time-out you set.

For example, if you want to Set **4 seconds** for the time-out, you should set **JP11: 4-8 ON** and **JP14 : 1-2 ON** to enable watch-dog timer.

```
C:\DOS> DEBUG
-i443
```

EX.2: For assemble Language

Enable :

```
:
:
MOV DX, 443H
IN AL, DX
:
:
```

Disable :

```
:
:
IN AL, 43H
:
```

:

APPENDIX B.

TECHNICAL REFERENCE

I/O PORT ADDRESS MAP

Address	Function
000 - 01F	DMA Controller #1
020 - 03F	Interrupt Controller #1
040 - 05F	Timer Chip
043	Disable Watch-Dog Times Operation (Read)
060 - 06F	Keyboard Controller
070 - 07F	Read Time Clock/NMI Mask
080 - 09F	DMA Page Register
0A0 - 0BF	Interrupt Controller #2
0C0 - 0DF	DMA Controller #2
0F0 - 0F1	Clear/Reset Math Coprocessor
1F0 - 1F7	Hard Disk Controller
200 - 210	Game Port
278 - 27F	Parallel Port #2
2E8 - 2EF	Serial Port #4 (COM 4)
2F8 - 2FF	Serial Port #2 (COM 2)
300 - 31F	prototype Card/Streaming Tape Adapter
360 - 36F	PC Network
378 - 3FF	Parallel Port #1
380 - 38F	SDLC #2
3A0 - 3AF	SDLC #1
3B0 - 3BF	MDA Video Card (Including LPT0)
3C0 - 3CF	EGA Card
3D0 - 3DF	CGA Card
3E8 - 3EF	Serial Port #3 (COM 3)
3F0 - 3F7	Floppy Disk Controller
3F8 - 3FF	Serial Port #1 (COM 1)
443	Enable Watch-dog Timer Operation (read)

MEMORY ADDRESS MAP

Address Range (Hex)	Description
000000H - 09FFFFH	640 KB of Conventional RAM
0A0000H - 0BFFFFH	128 KB of Video RAM
0C0000H - 0EFFFFH	256 KB of I/O Expansion ROM
0F0000H - 0FFFFFFH	64 KB of System BIOS ROM
0100000H - 7FFFFFFFH	1 MB ~ 128MB of User RAM

DMA CHANNELS

CHANNEL	Function
DMA 0	Reserved
DMA 1	Reserved
DMA 2	Floppy Disk Controller
DMA 3	ECP Parallel Port
DMA 4	Cascade for DMA #1
DMA 5	Reserved
DMA 6	Reserved
DMA 7	Reserved

INTERRUPT CONTROLLER

IRQ	Function
IRQ 0	System timer output
IRQ 1	Keyboard
IRQ 2	Cascade for INTC #2
IRQ 3	Serial port #2
IRQ 4	Serial port #1
IRQ 5	Parallel port #2
IRQ 6	Floppy disk controller
IRQ 7	Parallel port #1
IRQ 8	Real time clock
IRQ 9	Software redirected to INT 0AH (IRQ 2)
IRQ 10	Reserved
IRQ 11	Reserved
IRQ 12	PS/2 Mouse
IRQ 13	Math Coprocessor (CPU Internal)
IRQ 14	Primary Hard disk
IRQ 15	Secondary Hard Disk
NMI	Parity Check Error

GLOSSARY

8-Bit Bus – Data is transmitted to expansion slots and other components on the bus only along 8 parallel data line.

10Base-T – It is a 10Mbps IEEE 802.3/Ethernet standard that uses unshielded twisted pair cable specification. 10Base-T supports network configuration using the CSMA/CD access method over a twisted pair transmission system up to 100 meters in length without the use of repeater.

16-Bit Bus or ISA Bus – Data is transmitted along either 8 or 16 data lines, depending on what kind of adapter card is used in an expansion slot. ISA is the abbreviation of Industry Standard Architecture.

100Base-TX – It is a 100Mbps IEEE 802.3/Ethernet standard that uses UTP cable. Also called Fast Ethernet, it uses RJ-45 connectors and EIA/TIA T568B pinning. Maximum cable length from hub to node is 100 meters without a repeater.

Adapter – It is also called an expansion board, expansion card, or adapter card. It is a small circuit board that is installed in the expansion slots on the motherboard. You can install a particular adapter that connects a new device such as internal modem, sound card, and scanner.

AGP (Accelerated Graphic Port) – is a 32-bit, 66MHz data bus that transmit a maximum of 528MB of data.

bps – Bits per second. Also often preceded by K (kilo/thousands), **Kbps** – Kilo bytes per second, and M (mega/million), **Mbps** – Mega bytes per second.

BIOS (Basic Input /Output System) – This is a chip on the motherboard that contains the instructions for starting up, or booting, the computer, and more.

Bus – Data that travels in a computer along the circuits on the motherboard are called buses. Although three main buses (data bus, address bus, and control bus) manage the computer's operation, often these are collectively called the bus. The bus carries instructions back and forth between the CPU and other devices in the system. ISA,

Bus Mastering – A method of transferring data through a bus in which the device takes over the bus and directly controls the transfer of data to the computer’s memory. Bus mastering is a method of Direct Memory Access (**DMA**) transfer.

Cache – Cache RAM is an extra holding area for program instructions that need to be frequently used by the CPU or swapped in and out of RAM. Your CPU can usually access those instructions from the cache more quickly than it could from a hard disk or even RAM, so a cache helps the system work more efficiently. Most systems sold today offer either 256K or 512K cache.

CPU (Central Processing Unit) – executes all commands and controls the flow of data, providing the “ brain ” that enables the PC to calculate and perform the operations like sorting information more quickly than a human could. The CPU makes perhaps the greatest contribution to a PC’s speed and power. Note: Any additional information is subject to change without prior revision from the supplier.

Table 1 -- CPU Speeds

Processor type	Speed ratings (MHz)
486DX2	66, 80
486DX4	75, 100, 120
Pentium	90, 100, 120, 133, 166, 200
Pentium MMX	166, 200, 233
Pentium Pro	166, 180, 200
Pentium II	233, 266, 300, 333

EIDE (Enhanced IDE) – It is a hard drive controller that enables your system to be able to handle fast hard disk drives at a speed of 10Mbps.

EISA or MCA Bus – Data is transmitted along 32 data lines to adapter cards designed specifically to work with the 32-bit buses. MCA expansion slots cannot accept 8-bit or 16-bit adapter cards. EISA stands for Extended Industry Standard Architecture, while MCA stands for MicroChannel Architecture. MCA is architecture used in IBM Microcomputer.

Expansion slots – Expansion slots are plug-in connectors that allow you to insert additional circuit boards that attach to the rest of the PC through special circuitry called the **bus**. By inserting the right circuit board -- usually called an **adapter** or an **expansion card** – you can increase the resolution and the number of colors used by the display, or you can transform your PC into a machine for recording and playing music.

Fast SCSI – The common nomenclature associated with SCSI-2, the second generation of SCSI offering mandatory parity checking improvements over SCSI-1.

IDE (Integrated Drive Electronics) – It was developed from ST-506 type hard drive interface, utilizes BIOS INT 13h hard drive secondary software and supports two hard drives (Master and Slave). Do not need extra software to drive since it is directly initiated in the BIOS. Data transfer rate is 4.1 Mbps. Take note that this interface cannot support other drive like CD-ROM drive.

IEEE (Institute of Electrical and Electronic Engineers) – It is an international professional society that issues its own standard, and is a member of ANSI and ISO. Popular known standards is:

- IEEE802.3** – is a physical layer standard for 10Base-T, 100Base-T, Ethernet, and StarLAN.
- IEEE802.5** – is a physical layer standard for Token Ring.
- IEEE802.11** – is a physical layer standard for Wireless LAN/WAN compatibility.
- IEEE802.12** – is a physical layer standard for 100VG AnyLAN.

LAN (Local Area Network) – A data communications network spanning a limited area. It provides communications between three or more computers and peripherals, in most cases using a high-speed media as it's backbone.

Keyboard – This is a component that comes in direct contact for you with your PC. The mechanism of keyboard converts a key cap's movement into a signal sent to the computer. The most common key mechanism are “ **capacitate** ” and “ **hard contact** ”. Capacitate keyboard has a spring that causes the plastic and the metal plunger to move nearer to two pads that have large plates (plated in tin, nickel, and copper). These pads are connected to the keyboard's printed circuit board. Hard contact keyboard causes

the key cap to collapse a foam rubber dome that presses against a sheet of

plastic on the bottom of which is metallic area connected to the rest of the keyboard's circuit board.

LDCM (LANDesk Client Manager) – With the help of LDCM, PCs that are either stand-alone or on a network can not escape the control of a system administrator. Alerts will be sent to the user if an abnormal condition is encountered in a PC. It allows the administrator to give each PC a thorough check-up. Additionally, this feature is available to multiple OS's on the market today. LDCM Key Features include the following : ①Health Monitoring ②Real-Time Alerting ③Remote Accessibility ④Extensive Instrumentation. This is a product from Intel.

Mouse – The keyboard is a barrier to learn how to use a computer. Xerox Corporation first developed the concept of a pointing device, something a computer user could move with his or her hand, causing a corresponding move on screen. Because of its size and tail like cable, the device was named for the mouse. Apple Computer made the mouse a standard feature of its Macintosh computers, and with the popularity of Windows, a mouse is becoming standard equipment on all PCs, as well. The “**Trackball**” have survived more awkward methods of navigating with the keyboard. “**Digitizing tablets**” are popular with architects and engineers who must translate precise movements of a pen into lines on the screen. “Touch screens”, on which you press either your finger and a special light pen to control the software, are too tiring to use for any length of time.

MMX[™] – CPU's with MMX[™] technology are optimized to run multimedia application, and therefore, offer faster multimedia playback than standard CPUs. However, when manufacturers introduce any new hardware technology, the software makers need to catch up. At this time of compilation, most applications can't yet take advantage of MMX[™] capabilities.

Parallel port – Parallel ports (labeled **LPT1**, **LPT2**, and so on) are usually for plugging in printers. It is also often called a **Centronics port** – has been almost synonymous with **printer port**. Although a serial port can also be used to send data from a PC to some models of printers, the parallel port is faster. A serial port sends data one bit at a time over a single one-way wire; a parallel port can send several bits of data across

eight parallel wires simultaneously. Take note that a serial connection sends a single bit, a parallel port send an entire byte. A parallel connection has one drawback.

GLOSSARY

PCI Bus (Peripheral Component Interconnect) – It is a connection slot in a motherboard that supports 32-bit bus transfer rates. The now standard PCI Local Bus carries data along at least 32 lines, that is, at least 32 bits at a time. Local bus computer designs add special buses so the CPU can communicate directly with key components like the monitor, resulting in much better performance. You should look for PCI local bus capabilities in any system you buy, especially PCI local bus video (which helps the monitor display more quickly).

POST (Power-On Self-Test) – is the first thing your PC does when you turn it on, and it's your first warning of trouble with any of the components. When the POST detects an error from the display, memory, keyboard, or other basic components, it produces an error warning in the form of a message on your display and — in case your display is part of the problem — in the form of a series of beeps.

RAM (Random Access Memory) – consists of a bank of chips that act as “ working memory ”, holding program instructions and data only while your computer's on. Unless the instructions and data are saved to a disk, RAM forgets them when you turn your computer off. RAM is measured in megabytes (M). Most computers today come with 32M of RAM, though some sell with only 16M installed. There are a few different flavors and speeds of RAM, as well. One of the most prominent today is Extended Data Output (EDO) RAM, but an even faster type of RAM that has just hit the market is called **SyncDRAM**.

Serial port – Serial ports are also sometimes called **COM** (short for COMmunications) ports, and are labeled **COM1**, **COM2**, and so on. It is simple in concept: one line to send data, another line to receive data, and a few other lines to regulate how data is sent over the other two lines – from commonplace modems and printers to plotters and burglar alarms. The most common use for serial port is with a **mouse** or **modem**. The reason for this is that a serial port is not a very efficient way to transfer data, so little data that speed is not crucial, and perfect for modems because. With current technology, phone lines cannot transport more than one signal at a time anyway. The **serial port** is often referred to as an **RS-232 port**.

SCSI (Small Computer System Interface) – An intelligent bus for transmitting data

commands between a variety of devices. There are many implementations of SCSI, including Fast SCSI, Wide SCSI, Fast Wide SCSI, Fast-20, and Fast-40.

SCSI-2 – The second generation of SCSI includes many improvements to SCSI-1, including Fast SCSI, Wide SCSI, and mandatory parity checking.

SCSI-3 – The third generation of SCSI; introduces Fast-20 and Fast-40 as improvements to the parallel bus. The standard also includes a number of specifications for high-speed serial bus architectures such as SSA, Fiber Channel, and IEEE 1394. Also known as Ultra SCSI.

Ultra SCSI – Also known as SCSI-3, is a third generation SCSI standard that introduced parallel bus speed improvements (FAST-20 and FAST-40), and the miniaturized 68-pin micro connector.

USB (Universal Serial Bus) – USB consolidates serial, parallel, keyboard, mouse, and game ports into one asynchronous and isochronous communications port with bandwidth for data transfer speeds up to 12 Mbps without termination. By daisy-chaining USB hubs, up to 127 I/O devices can be connected to one USB port on the PC. USB is completely plug-and play meaning peripherals can be correctly detected and configured automatically as soon as they are connected.

UTP (Unshielded Twisted Pair) – Twisted pair cable with neither individual nor overall shielding. **Twisted Pair** are two wires twisted together to reduce susceptibility to RF crosswalk.

VGA (Video Graphics Array) – A video adapter that supports 640x480 pixels color resolution. The Windows OS provides medium text & graphics standard.

VL-Bus – It is also known as Local Bus; this is an I/O interface that is directly connected and depended of the system CPU. The VL-Bus is an abbreviation of VESA Local Bus.

Terms and Conditions

Date:1997.10.20

Warranty Policy

1. All products are warranted against defects in materials and workmanship on a period of two years from the date of purchase by the customer.
2. The buyer will bear the return freight charges for goods that are returned for repair within the warranty period whereas manufacturer will bear the other way after repair.
3. The buyer will pay for repair (for the replaced materials plus service time) and transportation charges (both ways) for items after the expiration of the warranty period.
4. If the RMA Service Request Form does not meet the stated requirement as listed on "RMA Service " , RMA goods will be returned at the customer expense.
5. The following conditions are excluded from this warranty
 - A. Improper or inadequate maintenance by the customer.
 - B. Unauthorized modification or misuse.
 - C. Operation outside of the environmental specifications for the product.

RMA Service

1. Request a RMA# :

Complete and fax to Supplier the "RMA Request Form" to obtain a RMA number.

2. Shipping:

- A. The customer is requested to fill up the problem code as listed . If none of the code is selected, please write the symptom description on the remark.
- B. Ship the defective units with freight prepaid.
- C. Mark the RMA # clearly on the box.
- D. Shipping damage as a result of inadequate packing is the customer's responsibility.
- E. Use the original packing materials whenever possible .

3. All RMA# are valid for 30 days only:

When RMA goods are received after valid RMA# period , the goods will be rejected.

