

ROCKY – 3782EVS
Pentium® III, Celeron™ , VIA Cyrix® III with
Dual Ethernet, VGA, Audio,
Dual Ultra-160 SCSI Port SBC
Ver 1.x

@Copyright 2000

All Rights Reserved.

Manual first edition July 14, 2000

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

ROCKY-3782EVS is registered trademarks of ICP Electronics Inc., IBM PC is a registered trademark of International Business Machines Corporation. Intel is a registered trademark of Intel Corporation. AWARD is registered trademarks of AWARD SOFTWARE INTERNATIONAL, Inc. Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Contents

1. Introduction	5
1.1 Specifications.....	6
1.2 What You Have.....	7
2. Installation	8
2.1 ROCKY-3782EVs's Layout	9
2.2 Clear CMOS Setup	10
2.3 BIOS Protection Setting.....	10
2.4 CompactFlash Card Master/Slave Mode Setting.....	10
2.5 System Power On by Keyboard.....	11
2.6 SCSI A/B Terminator Selection Setting.....	11
3. Connection	12
3.1 Floppy Disk Drive Connector.....	12
3.2 PCI E-IDE Disk Drive Connector	13
3.3 Parallel Port.....	14
3.4 Serial Ports.....	14
3.5 Keyboard/Mouse Connector.....	15
3.6 USB Port Connector	16
3.7 External Switches and Indicators	16
3.8 IrDA Infrared Interface Port	17

3.9	Fan Connector	17
3.10	PS-ON Connector.....	18
3.11	LAN RJ45 Connectors	18
3.12	VGA Connector	18
3.13	Audio Connectors	19
3.14	External LED Connector	20
3.15	CompactFlash Storage Card Socket.....	21
3.16	Ultra-2/3 68pin SCSI Connectors.....	22
3.17	ATX Connector	23

4. BIOS Setup 24

4.1	Introduction	24
4.2	Starting Setup	24
4.3	Using Setup	25
4.4	Main Menu	26
4.5	Standard CMOS Setup	29
4.6	Advanced BIOS Setup.....	33
4.7	Advanced Chipset Setup.....	38
4.8	Integrated Peripherals	42
4.9	Power Management Setup	46
4.10	PnP/PCI Configuration Setup	50
4.11	PC Health Status	53
4.12	Frequency/Voltage Control.....	54
4.13	Defaults Menu.....	55
4.14	Supervisor/User Password Setting	56

4.15 Exit Selecting57

Appendix A. WatchDog Timer 58

Appendix B. Address Mapping..... 60

Appendix C. ATX Power Supply 62

Appendix D. Backplane Slots Description..... 64

Appendix E. How to used Wake Up Function..... 65

1

Introduction

Welcome to the ROCKY-3782EVS Pentium® III, Celeron Single Board Computer. The ROCKY-3782EVS board is a PICMG form factor board, which comes equipped with high performance Pentium® III, Celeron™ , VIA Cyrix® Processor and advanced high performance multi-mode I/O, designed for the system manufacturers, integrators, or VARs that want to provide all the performance, reliability, and quality at a reasonable price.

In addition, the ROCKY-3782EVS provides on chip VGA. The VGA which provides up to 1600x1200 resolution. The VGA memory is share main memory.

An advanced high performance super AT I/O chip – ITE IT8712F is used in the ROCKY-3782EVS board. Both on-chip UARTs are compatible with the NS16C550. The parallel port and IDE interface are compatible with IBM PC/AT architecture's.

ROCKY-3782EVS uses Intel 82559 Fast Ethernet Multifunction PCI Controller as LAN controller. The 82559 is a fully integrated 10BASE-T/100BASE-TX LAN solution with high performance networking functions and low power features.

ROCKY-3782EVS uses the advanced INTEL Chipset,810E which is 100% LPC/PCI software compatible chipset. with PCI 2.2 standard.

1.1 Specifications :

- **CPU** : Celeron™ , Pentium® III(FPGA) , VIA Cyrix®C »
- **FBS** : Support 66/100/133 MHz(Auto Detect)
- **Bus** : PICMG Bus
- **DMA channels** : 7
- **Interrupt levels** : 15
- **Chipset** : Intel 810E(810/810DC-100)
- **RAM memory** : Dual 168-pin DIMM sockets support SDRAM module. The max memory is up to 512MB(SDRAM Speed is 100MHz Only).
- **Ultra ATA/33/66 IDE Interface** : Two PCI Enhance IDE hard drives. The south bridge ICH0/ICH supports Ultra ATA/33/66 IDE interface.
- **Floppy disk drive interface** : Single 2.88 MB, 1.44MB, 1.2MB, 720KB, or 360KB floppy disk drive.
- **Two high speed Series ports** : NS16C550 compatible UARTs
- **Bi-directional Parallel Port**
- **Built-in IT8712F to monitor power supply voltage and fan speed status.**
- **IrDA port** : Support Serial Infrared(SIR) and Amplitude Shift Keyed IR(ASKIR) interface.
- **USB port** : Support two USB ports for future expansion.
- **AC97 Codec** : Support two channel Left/Right Line IN/OUT, MIC IN, CD IN, and PC beep sound for buzzer.
- **Watch-Dog Timer** : can be set by 1,2,3...255 seconds/minutes period. Reset or NMI was generated when CPU did not periodically trigger the timer. Your program use **INT 15** control the watch-dog and generate a system reset(Detail see appendix A).
- **VGA Controller** : Embedded VGA controller, share main memory . Screen Resolution : up to 1600x1200 in 8-bit Color at 85Hz Refresh. 4MB display cache(Optional).

- **Dual Intel 82559 Fast Ethernet Multifunction PCI Controller** : IEEE 802.3u Auto-Negotiation support for 10BASE-T/100BASE-TX standard. Fast back-to-back transmission support with minimum interframe spacing. Connected to your LAN through RJ45 connector.
- **SYM53C1010-33/66 PCI-Dual Channel Ultra-160 SCSI Controller**
- **Keyboard connector**
- **IT8888F PCI To ISA Bridge**
- **Mouse** : PS/2 Mouse Port on-board.
- **Power Consumption** : 5V/5A (PIII 500, 64MDRAM, running 3D WINMARK on WIN98)
- **Operating Temperature** : 0° ~ 60°C (CPU needs Cooler)

1.2 What You Have

In addition to this *User's Manual*, the ROCKY-3782EVS package includes the following items:

- ROCKY-3782EVS Celeron®, Pentium® III Single Board Computer
- RS-232/Printer Cable x 1
- FDD Cable x 1
- Audio(MIC, LINE IN)/RS-232 x 1
- IDE HDD DMA66 Cable x 1
- Ultra-160 SCSI Cable x 2 (ROCKY-3782EVS Only)
- CD-ROM Driver x 1
- 6-pin Mini-Din to 5-pin Din Keyboard & PS2 Mouse Adapter Cable x 1


If any of these items is missing or damaged, contact the dealer from whom you purchased the product. Save the shipping materials and carton in case you want to ship or store the product in the future.

2

Installation

This chapter describes how to install the ROCKY-3782EVS. At first, the layout of ROCKY-3782EVS is shown, and the unpacking information that you should be careful is described. The jumpers and switches setting for the ROCKY-3782EVS's configuration, such as CPU type selection, system clock setting, and watch dog timer, are also included.

2.1 ROCKY-3782EVS's Layout

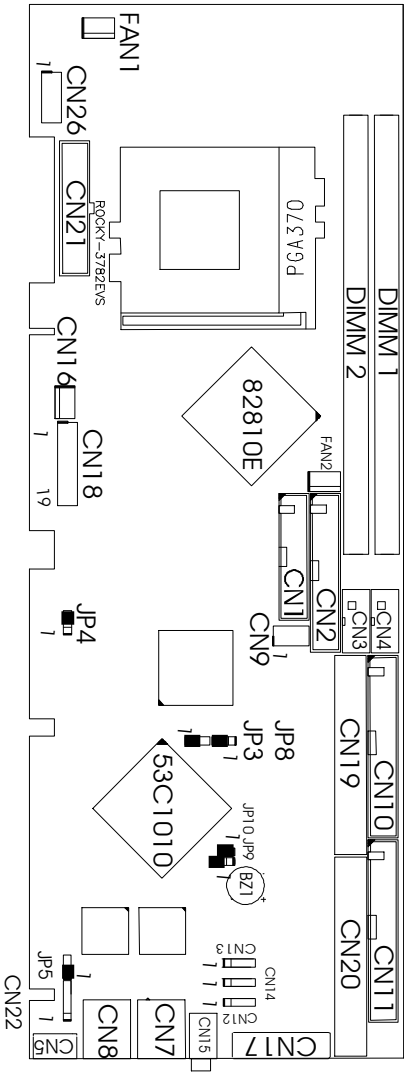


TOP SIZE

2.2 Clear CMOS Setup

If want to clear the CMOS Setup (for example forgot the password you should clear the setup and then set the password again.), you should close the JP3(2-3) about 3 seconds, then open again. Set back to normal operation mode.

- **JP3 : Clear CMOS Setup**

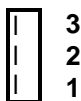


JP3	DESCRIPTION
1-2	Keep CMOS Setup (Normal Operation)
2-3	Clear CMOS Setup

2.3 BIOS Protection Setting

To protect the bios from writing, place the cap on the location 2-3.

- **JP4 : Flash Protection Setting**

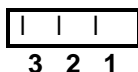

JP4	DESCRIPTION
2-3	Locked
1-2	Unlocked

2.4 CompactFlash Card Master/Slave Mode Setting

The CompactFlash socket is type I, and used IDE 2.

- **JP10 : Master/Slave Mode Setting**


JP10	DESCRIPTION
SHORT	MASTER
OPEN	SLAVE

2.5 System Power On by Keyboard when use ATX

Power Supply

Use keyboard to turn on the system, if ATX power supply are equipped. Make sure the option in CMOS SETUP is enabled.

- **JP5 : Power on by Keyboard**

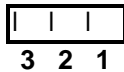

JP5	DESCRIPTION
1-2	Disabled
2-3	Enabled

2.6 SCSI Port A/B Terminator Selection Setting

Two SCSI terminators Port A and Port B are supported, JP8 is for Terminator Port A and JP9 is for Terminator Port B

- **JP8, JP9 : Terminator Enable/Disable Setting**



JP8, JP9	DESCRIPTION
2-3	Enable
1-2	Disable

3


Connection

This chapter describes how to connect peripherals, switches and indicators to the ROCKY-3782EVS board.

3.1 Floppy Disk Drive Connector

ROCKY-3782EVS board is equipped with a 34-pin daisy-chain driver connector cable.

• CN2 : FDC CONNECTOR

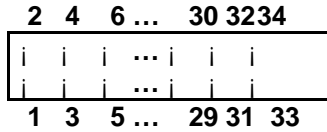

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	2	REDUCE WRITE
3	GROUND	4	N/C
5	GROUND	6	N/C
7	GROUND	8	INDEX#
9	GROUND	10	MOTOR ENABLE A#
11	GROUND	12	DRIVE SELECT B#
13	GROUND	14	DRIVE SELECT A#
15	GROUND	16	MOTOR ENABLE B#
17	GROUND	18	DIRECTION#
19	GROUND	20	STEP#
21	GROUND	22	WRITE DATA#
23	GROUND	24	WRITE GATE#
25	GROUND	26	TRACK 0#
27	GROUND	28	WRITE PROTECT#
29	N/C	30	READ DATA#
31	GROUND	32	SIDE 1 SELECT#
33	N/C	34	DISK CHANGE#


3.2 PCI E-IDE Disk Drive Connector

You can attach four IDE(Integrated Device Electronics) hard disk drives to the ROCKY-3782EVS IDE controller. IDE2 shares the same IDE channel with CompactFlash, so you must refer JP10 before setting the IDE2s device.

CN11 (IDE1) : Primary IDE Connector

CN10 (IDE2) : Secondary IDE Connector

• CN11/CN10 : IDE Interface Connector

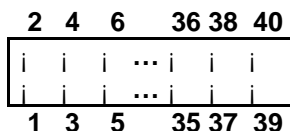


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	N/C	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	N/C	28	BALE - DEFAULT
29	N/C	30	GROUND - DEFAULT
31	INTERRUPT	32	IOCS16#-DEFAULT
33	SA1	34	N/C
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND

3.3 Parallel Port

This port is usually connected to a printer, The ROCKY-3782EVS includes an on-board parallel port, accessed through a 26-pin flat-cable connector CN1.

• **CN1 : Parallel Port Connector**

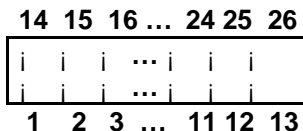


PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	STROBE#	2	DATA 0
3	DATA 1	4	DATA 2
5	DATA 3	6	DATA 4
7	DATA 5	8	DATA 6
9	DATA 7	10	ACKNOWLEDGE
11	BUSY	12	PAPER EMPTY
13	PRINTER SELECT	14	AUTO FORM FEED #
15	ERROR#	16	INITIALIZE
17	PRINTER SELECT LN#	18	GROUND
19	GROUND	20	GROUND
21	GROUND	22	GROUND
23	GROUND	24	GROUND
25	GROUND	26	NC

3.4 Serial Ports

The ROCKY-3782EVS offers two high speed NS16C550 compatible UARTs with 16 byte Read/Receive FIFO serial ports.

CN3 : COM1

CN4 : COM2

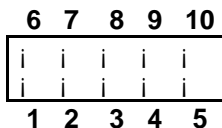

• **CN3/CN4 : Serial Port 10-pin Connector**

PIN NO.	DESCRIPTION
1	DATA CARRIER DETECT (DCD)
2	RECEIVE DATA (RXD)
3	TRANSMIT DATA (TXD)
4	DATA TERMINAL READY (DTR)
5	GROUND (GND)
6	DATA SET READY (DSR)
7	REQUEST TO SEND (RTS)
8	CLEAR TO SEND (CTS)
9	RING INDICATOR (RI)
10	N/C


3.5 Keyboard/Mouse Connector

The ROCKY-3782EVS provides 6-pin Min-DIN keyboard/mouse connector.

• **CN5 : 6-pin Mini-DIN Keyboard/Mouse Connector**

PIN NO.	DESCRIPTION
1	KEYBOARD DATA
2	MOUSE DATA
3	GROUND
4	+5V
5	KEYBOARD CLOCK
6	MOUSE CLOCK

• **CN22 : 5-pin External Keyboard Connector**

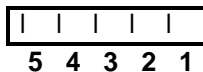

PIN NO.	DESCRIPTION
1	KEYBOARD CLOCK
2	KEYBOARD DATA
3	NC
4	GROUND
5	+5V

3.6 USB Port Connector

The ROCKY-3782EVS built in two USB(Spec. 1.1) ports for the future new I/O bus expansion.

CN9 : 2 ports USB Connector

Pin 1-4 for USB 0

Pin 5-8 for USB 1


1.	VCC	5.	GROUND
2.	DATA-	6.	DATA+
3.	DATA+	7.	DATA-
4.	GROUND	8.	VCC

3.7 External Switches and Indicators

There are several external switches and indicators for monitoring and controlling your CPU board. All the functions are in the CN18 connector.

CN18 Pin Assignment and Functions :

2 4 ... 18 20

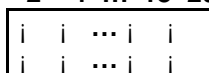


1 3 ... 17 19

FUNCTION	PIN NO.	DESCRIPTION
SPEAKER	1	SPK SIGNAL
	3	N/C
	5	N/C
	7	VCC
RESET	9	POWER GOOD
	10	GROUND
HDD LED	13	LED
	15	VCC
POWER BUTTON	17	POWER BUTTON
	19	GROUND
ATX POWER	12	GROUND
	14	N/C
	16	PS_ON#
	18	STANDBY VCC5V
POWER LED	20	STANDBY VCC5V
	2	VCC5V
RESERVE	4	N/C
	6	GROUND
	8	N/C
RESERVE	11	GROUND

3.8 IrDA Infrared Interface Port

The ROCKY-3782EVS built in a IrDA port which supports Serial Infrared(SIR) or Amplitude Shift Keyed IR(ASKIR) interface. When you use the IrDA port, you have to set COM2 as SIR or ASKIR mode in the BIOS's Peripheral Setup. Then the RS -232 mode of COM2 will be disabled.

- **CN6 : IrDA connector**

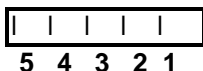


PIN NO.	DESCRIPTION
1	VCC
2	N/C
3	IR-RX
4	Ground
5	IR-TX

3.9 Fan Connector

The ROCKY-3782EVS provides CPU with cooling fan connector and chassis fan connector. These connectors can supply 12V/500mA to the cooling fan. There is a "rotation" pin in fan connector. This rotation pin is to get the fan's rotation signal to system. So the system BIOS could recognize the fan speed. Please be noted that only specific fan offers the rotation signal.

- **FAN1/FAN2 : CPU/System Fan Connector**

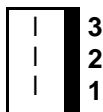

PIN NO.	DESCRIPTION
1	Ground
2	12V
3	Rotation Signal

3.10 PS-ON Connector

This connector is used to control the ATX power supply.

• **CN16 : PS-ON Connector**



1 2 3

PIN NO.	DESCRIPTION
1	+5V Standby
2	PS-ON
3	Ground

3.11 LAN RJ45 Connector

ROCKY-3782EVS is equipped with dual Intel 82559 10/100Mbps Ethernet Controllers. You can connect it to your LAN through RJ45 LAN connector. The pin assignments are as follows:

• **CN7/CN8 : LAN RJ45 Connector**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TX+	7.	N/C
2	TX-	8.	N/C
3.	RX+	9.	Speed +
4.	N/C	10.	Speed -
5	N/C	11.	Active +
6.	RX-	12.	Active -

3.12 VGA Connector


• **CN17 : 15-pin Female Connector**

1	RED	2	GREEN
3	BLUE	4	NC
5	GROUND	6	GROUND
7	GROUND	8	GROUND
9	NC	10	GROUND
11	NC	12	DDC DAT
13	HSYNC	14	VSYNC
15	DDCCLK		

3.13 Audio Connectors

The onboard AC97 Codec supports several audio functions. The audio connectors are described as below.

CN12/CN13/CN14 Connector

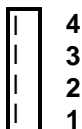

CN12 : LINE IN

1.	LEFT SIGNAL
2.	GROUND
3.	GROUND
4.	RIGHT SIGNAL

CN13 : CD IN

1.	CD LEFT SIGNAL
2.	GROUND
3.	GROUND
4.	CD RIGHT SIGNAL

CN14 : MIC IN

1.	SIGNAL
2.	GROUND
3.	GROUND
4.	VCC


CN15 : Left/Right Audio Output Connector for Speaker or Headphone.

1.	GROUND
2.	LEFT SIGNAL
3.	NC
4.	RIGHT SIGNAL
5.	NC

3.14 External LED Connector

The LED connector includes SCSI active LED, Ethernet Link/Active LED and Ethernet speed LED.

CN26 Connector

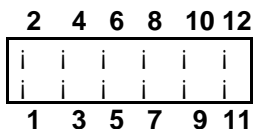

LED +	LED -	LED Function
2	1	SCSI Port A active
4	3	SCSI Port B active
6	5	LAN 2 Link/Active LED
8	7	LAN 2 Speed LED
10	9	LAN 1 Link/Active LED
12	11	LAN 1 Speed LED

LAN LED Description			
Description	LED ON	LED OFF	LED Flashing
Speed LED	100Mbps	10Mbps	NA
Link/Active LED	Link Ok	Link Fail	Sending or Receiving

3.15 CompactFlash Storage Card Socket

The ROCKY-3782EVS configures CompactFlash Storage Card in IDE Mode(Used IDE 2).

• **CN24 : CompactFlash Storage Card Socket pin assignment**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	26	CARD DETECT1
2	D3	27	D11
3	D4	28	D12
4	D5	29	D13
5	D6	30	D14
6	D7	31	D15
7	CS1#	32	CS3#
8	N/C	33	N/C
9	GROUND	34	IOR#
10	N/C	35	IOW#
11	N/C	36	OBLIGATORY TO PULL HIGH
12	N/C	37	IRQ15
13	VCC	38	VCC
14	N/C	39	MASTER/SLAVE
15	N/C	40	N/C
16	N/C	41	RESET#
17	N/C	42	IORDY
18	A2	43	N/C
19	A1	44	OBLIGATORY TO PULL HIGH
20	A0	45	ACTIVE#
21	D0	46	PDIAG#
22	D1	47	D8
23	D2	48	D9
24	N/C	49	D10
25	CARD DETECT2	50	GROUND

3.16 Ultra-160 68pin SCSI Connector

Two 68pin SCSI connectors are described as below.


- **CN19: Port A**
- **CN20: Port B**

CN19/CN20 : SCSI pin assignment

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+SD12	35	-SD12
2	+SD13	36	-SD13
3	+SD14	37	-SD14
4	+SD15	38	-SD15
5	+SDP1	39	-SDP1
6	+SD0	40	-SD0
7	+SD1	41	-SD1
8	+SD2	42	-SD2
9	+SD3	43	-SD3
10	+SD4	44	-SD4
11	+SD5	45	-SD5
12	+SD6	46	-SD6
13	+SD7	47	-SD7
14	+SDP0	48	-SDP0
15	GND	49	GND
16	DIFF SENSE	50	NC
17	VCC	51	VCC
18	VCC	52	VCC
19	NC	53	NC
20	GND	54	GND
21	+SATN	55	-SATN
22	GND	56	GND
23	+SBSY	57	-SBSY
24	+SACK	58	-SACK
25	+SRST	59	-SRST
26	+SMSG	60	-SMSG
27	+SSEL	61	-SSEL
28	+SCD	62	-SCD
29	+SREQ	63	-SREQ
30	+SIO	64	-SIO
31	+SD8	65	-SD8
32	+SD9	66	-SD9
33	+SD10	67	-SD10
34	+SD11	68	-SD11

3.17 ATX Connector

The ROCKY-3782EVS offers one standard ATX power connector **CN21**:

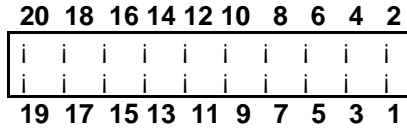

• **CN21: 20-pin Connector**

PIN NO.	DESCRIPTION
1	NC
2	NC
3	GND
4	+5V
5	GND
6	+5V
7	GND
8	Power Good
9	+5V SB
10	+12V
11	NC
12	-12V
13	GND
14	PSO#
15	GND
16	GND
17	GND
18	-5V
19	+5V
20	+5V

4

BIOS Setup

4.1 Introduction

This chapter discusses the Setup program built into the BIOS. The Setup program allows users to configure the system. This configuration is then stored in battery-backed CMOS RAM so that it retains the Setup information while the power is off.

4.2 Starting Setup

The BIOS is immediately active when you turn on the computer. While the BIOS is in control, the Setup program can be activated in one of two ways:

1. By pressing immediately after switching the system on, or
2. by pressing the key when the following message appears briefly at the bottom of the screen during the POST (Power On Self-Test).

Press DEL to enter SETUP.

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to...

PRESS F1 TO CONTINUE, DEL TO ENTER SETUP

4.3 Using Setup

In general, you can use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more details about how to navigate in the Setup program using the keyboard.

Key	Function
Up Arrow	Move to the previous item
Down Arrow	Move to the next item
Left Arrow	Move to the item on the left (menu bar)
Right Arrow	Move to the item on the right (menu bar)
Esc	Main Menu: Quit without saving changes Submenus: Exit Current page to the next higher level menu
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
Esc key	Main Menu -- Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F6 key	Load the fail-safe defaults from BIOS default table
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit

4.4 Main Menu

Once you enter the AwardBIOS™ CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and two exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Defaults
Advanced Chipset Features	Load Optimized Defaults
Integrated Peripherals	Set Supervisor Password
Power Management Setup	Set User Password
PnP/PCI Configurations	Save & Exit Setup
PC Health Status	Exit Without Saving
Esc : Quit ↑ ↓ ← → : Select Item	
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type... .	

Note that a brief description of each highlighted selection appears at the bottom of the screen.

4.4.1 Setup Items

The main menu includes the following main setup categories. Recall that some systems may not include all entries.

Standard CMOS Features

Use this menu for basic system configuration. See Section 4.5 for the details.

Advanced BIOS Features

Use this menu to set the Advanced Features available on your system. See Section 4.6 for the details.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system's performance. See section 4.7 for the details.

Integrated Peripherals

Use this menu to specify your settings for integrated peripherals. See section 4.8 for the details.

Power Management Setup

Use this menu to specify your settings for power management. See section 4.9 for the details.

PnP / PCI Configurations

This entry appears if your system supports PnP / PCI. See section 4.10 for the details.

PC Health Status

Use this menu to monitor your hardware.

Frequency/Voltage Control

Use this menu to specify your settings for frequency/voltage control. See section 4.12 for the details.

Load Fail-Safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate. See section 4.13 for the details.

Load Optimized Defaults

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While Award has designed the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs. See section 4.13 for the details.

Supervisor / User Password

Use this menu to set User and Supervisor Passwords. See section 4.14 for the detail.

Save & Exit Setup

Save CMOS value changes to CMOS and exit setup. See section 4.15 for the details.

Exit Without Save

Abandon all CMOS value changes and exit setup. See section 4.15 for the details.

4.5 Standard CMOS Setup

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software
Standard CMOS Features

Date: Mon, Feb 8 2000		Item Help
Time: 16:19:20		
➤ IDE Primary Master	Press Enter 2557 MB	Menu Level ➤
➤ IDE Primary Slave	Press Enter None	Change the day, month, year and century
➤ IDE Secondary Master	Press Enter None	
➤ IDE Secondary Slave	Press Enter None	
Drive A	1.44M, 3.5 in.	
Drive B	None	
Video	EGA/VGA	
Halt On	All,But Keyboard	
Based Memory	640K	
Extended Memory	64512K	
Total Memory	65536K	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

Figure 1: The Main Menu

Main Menu Selections

Item	Options	Description
Date	MM DD YYYY	Set the system date.
Time	HH : MM : SS	Set the system time
IDE Primary Master	Options are in its sub menu (described in Table 3)	Press <Enter> to enter the sub menu of detailed options
IDE Primary Slave	Options are in its sub menu (described in Table 3)	Press <Enter> to enter the sub menu of detailed options
IDE Secondary Master	Options are in its sub menu (described in Table 3)	Press <Enter> to enter the sub menu of detailed options
IDE Secondary Slave	Options are in its sub menu (described in Table 3)	Press <Enter> to enter the sub menu of detailed options
Drive A Drive B	None 360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in	Select the type of floppy disk drive installed in your system
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/Key	Select the situation in which you want the BIOS to stop the POST process and notify you
Base Memory	N/A	Displays the amount of conventional memory detected during boot up
Extended Memory	N/A	Displays the amount of extended memory detected during boot up
Total Memory	N/A	Displays the total memory available in the system

Table 2 Main Menu Selections

IDE Adapters

The IDE adapters control the hard disk drive. Use a separate sub menu to configure each hard disk drive.

Figure 2 shows the IDE primary master sub menu.

CMOS Setup Utility – Copyright © 19842000 Award Software
IDE Primary Master

IDE HDD Auto-Detection	Press Enter	Item Help
IDE Primary Master	Auto	Menu Level >>
Access Mode	Auto	
Capacity	2557 MB	To auto-detect the HDD's size, head... on this channel
Cylinder	4956	
Head	16	
Precomp	0	
Landing Zone	4955	
Sector	63	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

Figure 2 IDE Primary Master sub menu

Use the legend keys to navigate through this menu and exit to the main menu. Use Table 3 to configure the hard disk.

Item	Options	Description
IDE HDD Auto-detection	Press Enter	Press Enter to auto-detect the HDD on this channel. If detection is successful, it fills the remaining fields on this menu.
IDE Primary Master	None Auto Manual	Selecting manual' lets you set the remaining fields on this screen. Selects the type of fixed disk. "User Type" will let you select the number of cylinders, heads, etc. Note: PRECOMP=65535 means NONE !
Capacity	Auto Display your disk drive size	Disk drive capacity (Approximated). Note that this size is usually slightly greater than the size of a formatted disk given by a disk checking program.
Access Mode	CHS LBA Large Auto	Choose the access mode for this hard disk
The following options are selectable only if the IDE Primary Master' item is set to Manual'		
Cylinder	Min = 0 Max = 65535	Set the number of cylinders for this hard disk.
Head	Min = 0 Max = 255	Set the number of read/write heads
Precomp	Min = 0 Max = 65535	**** Warning: Setting a value of 65535 means no hard disk
Landing zone	Min = 0 Max = 65535	****
Sector	Min = 0 Max = 255	Number of sectors per track

Table 3 Hard disk selections

4.6 Advanced BIOS Features

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

CMOS Setup Utility – Copyright © 1984– 2000 Award Software
Advanced BIOS Features

		Item Help
Virus Warning	Disabled	
CPU Internal Cache	Enabled	
External Cache	Enabled	Menu Level ➤
CPU L2 Cache ECC Checking	Enabled	
Quick Power On Self Test	Disabled	Allows you to choose the
First Boot device	Floppy	VIRUS warning feature for
Second Boot device	HDD-0	IDE Hard Disk boot sector
Third Boot device	SCSI	protection. If this function is
Boot other device	Enabled	enabled and someone
Swap Floppy Drive	Disabled	attempt to write data into
Boot Up Floppy Seek	Disable	this area, BIOS will show a
Boot Up NumLock Status	On	warning message on screen
Gate A20 Option	Fast	and alarm beep
Typematic Rate Setting	Disabled	
Typematic Rate (Chars/Sec)	6	
Typematic Delay (Msec)	250	
Security Option	Setup	
OS Select For DRAM > 64MB	Non-	
OS2		
Report NO FDD For Win 95	No	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

Virus Warning

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
Disabled	No warning message will appear when anything attempts to access the boot sector or hard disk partition table.

CPU Internal Cache/External Cache

These two categories speed up memory access. However, it depends on CPU/chipset design.

Enabled	Enable cache
Disabled	Disable cache

CPU L2 Cache ECC Checking

This item allows you to enable/disable CPU L2 Cache ECC checking.

The choice: Enabled, Disabled.

Quick Power On Self Test

This category speeds up Power On Self Test (POST) after you power up the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.

Enabled	Enable quick POST
Disabled	Normal POST

First/Second/Third/Other Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.

The Choice: Floppy, LS120, HDD0-3, SCSI, CDROM, ZIP100, LAN, Disabled.

Swap Floppy Drive

If the system has two floppy drives, you can swap the logical drive name assignments.

The choice: Enabled/Disabled.

Boot Up Floppy Seek

Seeks disk drives during boot up. Disabling speeds boot up.

The choice: Enabled/Disabled.

Boot Up NumLock Status

Select power on state for NumLock.

The choice: On/Off.

Gate A20 Option

Select if chipset or keyboard controller should control GateA20.

Normal	A pin in the keyboard controller controls GateA20
Fast	Lets chipset control GateA20

Typematic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected.

The choice: Enabled/Disabled.

Typematic Rate (Chars/Sec)

Sets the number of times a second to repeat a key stroke when you hold the key down.

The choice: 6, 8, 10, 12, 15, 20, 24, 30.

Typematic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke.

The choice: 250, 500, 750, 1000.

Security Option

Select whether the password is required every time the system boots or only when you enter setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

OS Select For DRAM > 64MB

Select the operating system that is running with greater than 64MB of RAM on the system.

The choice: Non-OS2, OS2.

Report No FDD For Win 95

Whether report no FDD for Win 95 or not.

The choice: Yes, No.

4.7 Advanced Chipset Features

CMOS Setup Utility – Copyright © 1984– 2000 Award Software
Advanced Chipset Features

SDRAM CAS Latency Time	3	Item Help
SDRAM Cycle Time Tras/Trc	6/8	
SDRAM RAS-to-CAS Delay	3	Menu Level ➤
SDRAM RAS Precharge Time	3	
System BIOS Cacheable		
Disabled		
Video BIOS Cacheable	Disabled	
Memory Hole At 15M-16M	Disabled	
Delay Transaction	Disabled	
Power-supply Type	AT	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It also coordinates communications between the conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system.

DRAM Settings

The first chipset settings deal with CPU access to dynamic random access memory (DRAM). The default timings have been carefully chosen and should only be altered if data is being lost. Such a scenario might well occur if your system had mixed speed DRAM chips installed so that greater delays may be required to preserve the integrity of the data held in the slower memory chips.

SDRAM CAS Latency Time

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing.

The Choice: 2, 3

SDRAM Cycle Time T_{ras}/T_{rc}

Select the number of SCLKs for an access cycle.

The Choice: 5/7, 6/8.

SDRAM RAS-to-CAS Delay

This field lets you insert a timing delay between the CAS and RAS strobe signals, used when DRAM is written to, read from, or refreshed. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.

The Choice: 2, 3.

SDRAM RAS Precharge Time

If an insufficient number of cycles is allowed for the RAS to accumulate its charge before DRAM refresh, the refresh may be incomplete and the DRAM may fail to retain data. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.

The Choice: 2, 3.

System BIOS Cacheable

Selecting *Enabled* allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

The choice: Enabled, Disabled.

Video BIOS Cacheable

Select Enabled allows caching of the video BIOS , resulting in better system performance. However, if any program writes to this memory area, a system error may result.

The Choice: Enabled, Disabled.

Memory Hole At 15M-16M

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements.

The Choice: Enabled, Disabled.

CPU Latency Timer

Enabled :CPU cycle will only be Deferred after in has been in a ‘Snoop Stall’ for 31 clocks and another ADS# has arrived.

Disabled: CPU cycle will only be Deferred immediately after the GMCH receives another ADS#.

The Choice: Enabled, Disabled.

Delay Transaction

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1.

The Choice: Enabled, Disabled.

Power-Supply Type

This item controls the power-supply type to AT or ATX.

The Choice: AT,ATX.

4.8 Integrated Peripherals

CMOS Setup Utility – Copyright © 1984– 2000 Award Software
Integrated Peripherals

On-Chip Primary PCI IDE	Enabled	Item Help
On-Chip Secondary PCI IDE	Enabled	
IDE Primary Master PIO	Auto	Menu Level >
IDE Primary Slave PIO	Auto	If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/write per sector the drive can support
IDE Secondary Master PIO	Auto	
IDE Secondary Slave PIO	Auto	
IDE Primary Master UDMA	Auto	
IDE Primary Slave UDMA	Auto	
IDE Secondary Master UDMA	Auto	
IDE Secondary Slave UDMA	Auto	
USB Controller	Disabled	
USB Keyboard Support	Disabled	
Init Display First	PCI Slot	
AC97 Audio	Auto	
IDE HDD Block Mode	Enabled	
POWER ON Function ONLY	BUTTON	
x KB Power On Password	Enter	
x Hot Key Power ON	Ctrl-F1	
Onboard FDC Controller	Enabled	
↑↓←→ Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

There are more items not show in this screen. These items will appear when you move down them the last item on screen.

On-Chip Primary/Secondary PCI IDE

The integrated peripheral controller contains an IDE interface with two IDE channels. Select Enabled to activate each channel separately.

The choice: Enabled, Disabled.

IDE Primary/Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

The Choice: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

IDE Primary/Secondary Master/Slave UDMA

Ultra DMA-33/66 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA-33/66, select Auto to enable BIOS support.

The Choice: Auto, Disabled.

USB Controller

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.

The choice: Enabled, Disabled.

USB Keyboard Support

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard.

The choice: Enabled, Disabled.

Init Display First

This item allows you to decide to active whether PCI Slot or on-chip VGA first

The choice: PCI Slot, Onboard .

AC97 Audio

This item allows you to decide to enable/disable the 810E chipset family to support AC97 Audio.

The choice: Auto, Disabled.

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

The choice: Enabled, Disabled

POWER ON Function

This POWER On Function allows you to select following items.

The choice: Password, Hot KEY, Mouse Move, Mouse Click, Any Key, BUTTON ONLY, Keyboard 98

Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install and-in FDC or the system has no floppy drive, select Disabled in this field.

The choice: Enabled, Disabled.

Onboard Serial Port 1/Port 2

Select an address and corresponding interrupt for the first and second serial ports.

The choice: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

UART Mode Select

Select a serial port 2 operation mode.

The choice: Normal, IrDA, ASKIR, SCR

Onboard Parallel Port

Select an address and corresponding interrupt for the parallel ports.

The choice: 378/IRQ7, 278/IRQ5, 3BC/IRQ7, Disabled,

Parallel Port Mode

Select a parallel operation mode.

The choice: SPP, EPP, ECP,ECP+EPP

Watch-Dog Timer Unit Select

Select the Watch-Dig Timer unit.

The choice: Second, Minute

4.9 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

CMOS Setup Utility – Copyright © 1984– 2000 Award Software
Power Management Setup

ACPI function	Disabled	Item Help
ACPI Suspend Type	S1(POS)	
Power Management	User Define	Menu Level ➤
Video Off Method	DPMS	
Video Off In Suspend	Yes	
Suspend Type	Stop Grant	
MODEM Use IRQ	3	
Suspend Mode	Disabled	
HDD Power Down	Disabled	
Soft-Off by PWR-BTTN	Instant-Off	
Power On by Ring	Disabled	
Resume by Alarm	Disabled	
x Date(of month)Alarm	0	
x Time(hh:mm:ss)Alarm	0 0 0	
** Reload Global Timer Events **		
Primary IDE 0	Disabled	
Primary IDE 1	Disabled	
Secondary IDE 0	Disabled	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

There are more items not show in this screen. These items will appear when you move down them the last item on screen.

ACPI Function

This item allows you to enable/disable the Advanced Configuration and Power Management (ACPI).

The choice: Enabled, Disabled.

ACPI Suspend Type

This item allows you to S1(Power ON Suspend)/S3(Suspend To RAM) the Advanced Configuration and Power Management (ACPI).

The choice: S1(POS), S3(STR).

Power Management

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

1. HDD Power Down
2. Doze Mode
3. Suspend Mode

There are four selections for Power Management, three of which have fixed mode settings.

Disable (default)	No power management. Disables all four modes
Min. Power Saving	Minimum power management. Doze Mode = 1 hr. Standby Mode = 1 hr., Suspend Mode = 1 hr., and HDD Power Down = 15 min.
Max. Power Saving	Maximum power management -- ONLY AVAILABLE FOR SL CPU's . Doze Mode = 1 min., Standby Mode = 1 min., Suspend Mode = 1 min., and HDD Power Down = 1 min.
User Defined	Allows you to set each mode individually. When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

Video Off Method

This determines the manner in which the monitor is blanked.

V/H SYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS	Initial display power management signaling.

Video Off In Suspend

This determines the manner in which the monitor is blanked.

The choice: Yes, No.

SuspendType

Select the Suspend Type.

The choice: PWRON Suspend, Stop Grant.

MODEM Use IRQ

This determines the IRQ in which the MODEM can use.

The choice: 3, 4, 5, 7, 9, 10, 11, NA.

Suspend Mode

When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

The choice: 1Min, 2Min, 4Min, 8Min, 12Min, 20Min, 30Min, 40Min, 1Hour, Disabled.

HDD Power Down

When enabled and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

The choice: 1Min, 2Min, 3Min, 4Min, 5Min, 6Min, 7Min, 8Min, 9Min, 10Min, 11Min, 12Min, 13Min, 14Min, 15Min, Disabled.

Soft-Off by PWR-BTTN

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has ‘hung.’

The choice: Delay 4 Sec, Instant-Off.

Power On by Ring

This item is Disabled or Enabled. This function can power on by ring.

The choice: Enabled, Disabled.

Resume by Alarm

This item is Disabled or Enabled. This function can wake-up system by date or time.

PM Events

PM events are I/O events whose occurrence can prevent the system from entering a power saving mode or can awaken the system from such a mode. In effect, the system remains alert for anything which occurs to a device which is configured as Enabled , even when the system is in a power down mode.

Primary IDE 0

Primary IDE 1

Secondary IDE 0

Secondary IDE 1

FDD, COM, LPT Port

PCI PIRQ[A-D] #

4.10 PnP/PCI Configuration Setup

This section describes configuring the PCI bus system. PCI, or **P**ersonal **C**omputer **I**nterconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

CMOS Setup Utility – Copyright © 19842000 Award Software
PnP/PCI Configurations

PnP OS Installed	No	Item Help
Reset Configuration Data	Disabled	----- Menu Level >
Resources Controlled By Auto(ESCD)		
x IRQ Resources	Press	Default is Disabled. Select Enabled to reset Extended System Configuration
Enter		Data(ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot
x DMA Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

PnP OS Installed

This item allows you to determine install PnP OS or not.

The choice: Yes, No.

Reset Configuration Data

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system can not boot.

The choice: Enabled, Disabled .

Resource controlled by

The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows®95. If you set this field to "manual" choose specific resources by going into each of the sub menu that follows this field (a sub menu is preceded by a "➤").

The choice: Auto(ESCD), Manual.

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

IRQ3/4/5/7/9/10/11/12/14/15 assigned to

This item allows you to determine the IRQ assigned to the ISA bus and is not available to any PCI slot. Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture.

The Choice: PCI Device, Reserved.

DMA Resource

When resources are controlled manually, assign each system DMA channel a type, depending on the type of device using the DM channel.

DMA 0/1/3/5/6/7 assigned to

Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture.

Choices are Legacy ISA and PCI/ISA PnP.

PCI/VGA Palette Snoop

Leave this field at Disabled.

Choices are Enabled, Disabled.

4.11 PC Health Status

CMOS Setup Utility – Copyright © 19842000 Award Software
PC Health Status

CPU V-Core	1.58V	Item Help
CPU VTT	1.49V	-----
System 3.3V	3.32V	Menu Level ➤
System 5V	4.99V	
System 12V	12.40V	
System -5V	(-) 5.03V	
System -12V	(-) 12.31V	
System 5V-SB	4.92V	
CPU Die temperature	46°C J	
System Temperature	0°C J	
System FAN Speed	0RPM	
CPU FAN Speed	5353RPM	

↑↓←→ Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit
F1:General Help
F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults

4.12 Frequency/Voltage Control

CMOS Setup Utility – Copyright © 19842000 Award Software
Frequency/Voltage Control

Auto Detect DIMM/PCI Clk	Disabled	Item Help
Spread Spectrum	Disabled	-----
CPU Clock Ratio	X 5.5	Menu Level ➤

↑↓←→ Move Enter: Select +/-PU/PD: Value F10:Save ESC: Exit
F1:General Help
F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults

Auto Detect DIMM/PCI Clk

This item allows you to enable/disable auto detect DIMM/PCI Clock.

The choice: Enabled, Disabled.

Spread Spectrum

This item allows you to enable/disable the spread spectrum modulate.

The choice: Enabled, Disabled.

CPU Clock Ratio

This item allows you to select CPU clock ratio.

The choice: 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5, 7, 7.5, 8.

4.13 Defaults Menu

Selecting 'Defaults' from the main menu shows you two options which are described below

Load Fail-Safe Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

Load Fail-Safe Defaults (Y/N) ? **N**

Pressing Y loads the BIOS default values for the most stable, minimal-performance system operations.

Load Optimized Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

Load Optimized Defaults (Y/N) ? **N**

Pressing Y loads the default values that are factory settings for optimal performance system operations.

4.14 Supervisor/User Password Setting

You can set either supervisor or user password, or both of them. The differences between are:

supervisor password :

can enter and change the options of the setup menus.

user password :

just can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration. Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option (see Section 3). If the Security option is set to password will be required both at boot and at entry to Setup. If set to "Setup", prompting only occurs when trying to enter Setup.

4.15 Exit Selecting

Save & Exit Setup

Pressing <Enter> on this item asks for confirmation:

Save to CMOS and EXIT (Y/N)? **Y**

Pressing “Y” stores the selections made in the menus in CMOS – a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

Exit Without Saving

Pressing <Enter> on this item asks for confirmation:

Quit without saving (Y/N)? **Y**

This allows you to exit Setup without storing in CMOS any change. The previous selections remain in effect. This exits the Setup utility and restarts your computer.

Appendix A. WatchDog Timer

The WatchDog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working correctly, hardware on the board will either perform a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the WatchDog Timer:

INT 15H:

AH – 6FH
<u>Sub-function:</u>
AL – 2 : Set the Watchdog Timer's period
BL : Time-out value (Its unit--second or minute, is dependent on the item "WatchDog Timer unit select" in CMOS setup).

You have to call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer will start counting down. While the timer value reaches zero, the system will reset. To ensure that this reset condition does not occur, the WatchDog Timer must be periodically refreshed by calling sub-function 2. However the Watchdog timer will be disabled if you set the time-out value to be zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

Note: when exiting a program it is necessary to disable the WatchDog Timer, otherwise the system will reset.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
;
W_LOOP:
    MOV  AX, 6F02H      ;setting the time-out value
    MOV  BL, 30         ;time-out value is 48 seconds
    INT  15H
;
; ADD YOUR APPLICATION PROGRAM HERE
;
    CMP  EXIT_AP, 1     ;is your application over?
    JNE  W_LOOP         ;No, restart your application

    MOV  AX, 6F02H     ;disable Watchdog Timer
    MOV  BL, 0         ;
    INT  15H
;
; EXIT
;
```

Appendix B. Address Mapping

IO Address Map

I/O address Range	Description
000-01F	DMA Controller #1
020-021	Interrupt Controller #1, Master
040-05F	8254 timer
060-06F	8042 (Keyboard Controller)
070-07F	Real time Clock, NMI Mask
080-09F	DMA Page Register
0A0-0BF	Interrupt Controller #2
0C0-0DF	DMA Controller #2
0F0	Clear Math Coprocessor Busy
0F1	Reset Math Coprocessor
0F2	Core logic programming configuration
0F8-0FF	Math Coprocessor
1F0-1F8	Fixed Disk
200-207	Game I/O
278-27F	Parallel Printer Port 2 (LPT3)
2E8-2EF	Serial Port 4
2F8-2FF	Serial Port 2
300-31F	Prototype Card
360-36F	Reserved
378-37F	Parallel Printer Port 1 (LPT2)
3B0-3BF	Monochrome Display and Printer Adapter (LPT1)
3C0-3CF	Reserved
3D0-3DF	Color/Graphics Monitor Adapter
3E8-3EF	Serial Port 3
3F0-3F7	Diskette Controller
3F8-3FF	Serial Port 1

1st MB Memory Address Map

Memory address	Description
00000-9FFFF	System memory
A0000-BFFFF	VGA buffer
C0000-C7FFF	VGA BIOS
C8000-CBFFF	SCSI
F0000-FFFFF	System BIOS
1000000-	Extend BIOS


*Default setting

IRQ Mapping Table

IRQ0	System Timer	IRQ8	RTC clock
IRQ1	Keyboard	IRQ9	Available
IRQ2	Cascade to IRQ Controller	IRQ10	Available
IRQ3	COM2	IRQ11	Available
IRQ4	COM1	IRQ12	PS2 mouse
IRQ5	Available	IRQ13	FPU
IRQ6	FDC	IRQ14	Primary IDE
IRQ7	Printer	IRQ15	Secondary IDE

DMA Channel Assignments


Channel	Function
0	Available
1	Available
2	Floppy disk (8-bit transfer)
3	Available
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

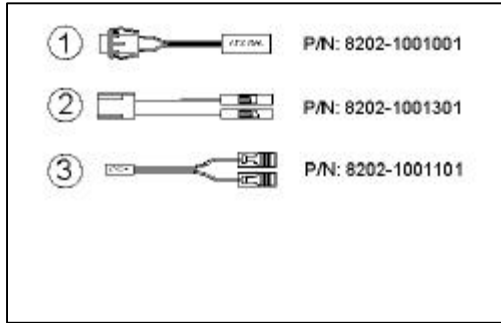

B. For the backplanes with ATX power supply connector

For some SBC without ATX power ON/OFF function, then you can control the ATX power supply through backplane's PS ON connector. Refer to the figure below: for the backplanes with ATX connector, the connection can be made simply as following:

1. Connect the ON/OFF (ordinary one) switch to Pin 2 (PS ON) and Pin 3 (GND) of connector CN2
2. You may now turn the power ON/OFF by the power switch

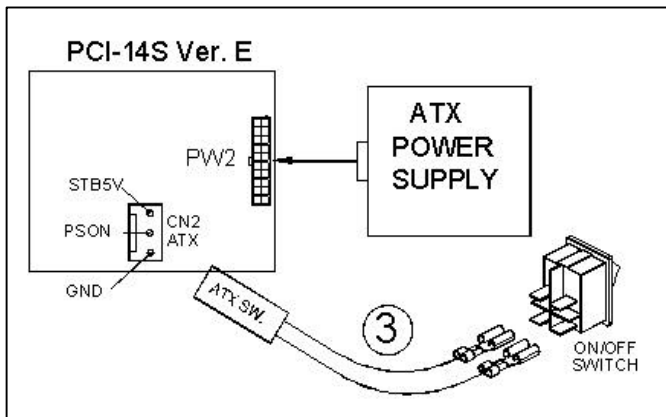

Appendix D. Backplane Slots Description


The ROCKY-3782EVS's PCI1 to PCI3 are PC I-master. The slot 4 is PCI-slave (If it comes without onboard SCSI, this slot becomes PCI-master).

Example: PCI-14S3 V:E1

The backplane PCI-14S3 has four PCI slots - PCI1 to PCI4. When ROCKY-3782EVS is installed to PCI-14S3's ISA10 or ISA7,

PCI1 to PCI3 are PCI-master and PCI4 is PCI-slave (If ROCKY-3782EV is used, this slot becomes PCI-master).

PCI-14S3's Layout

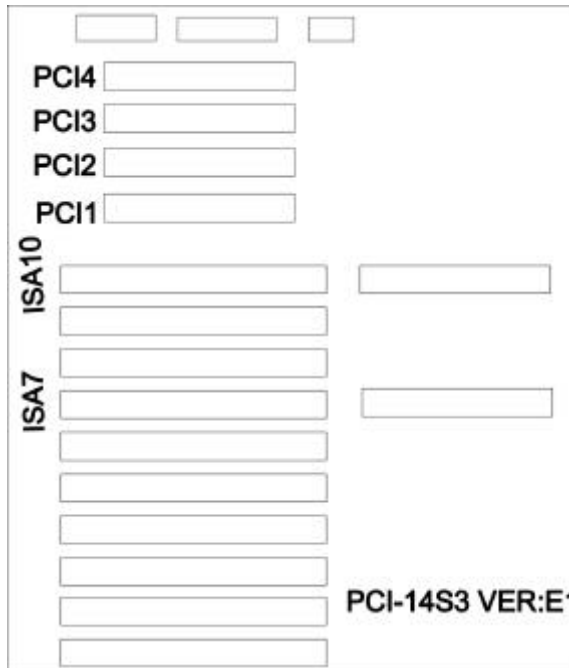

Appendix E. How to use Wake-Up Function

The ROCKY-3782EVS provides two kind of Wake Up Function. This page describes how to use Modem Wake-Up and LAN Wake-Up function.

Wake-Up function is working while you use ATX power supply,

Wake-Up By Modem Ring On:

You must set the option Power On By Ring of CMOS SETUP to be enabled. The ATX power supply will be switched on when there is a ring signal detected on pin 'RI' of serial port.

Wake-Up On LAN:

When your computer is in power-down status, you can see LAN Link/Active LED is flashing. This status indicates that the LAN chip has entered standby mode and waits for Wake-Up signal. You can use other computers to wake up your computer by sending ID to it.

ID: ID is the address of your system LAN. Every LAN chip has a factory-set ID which you can find it from network information in WINDOWS.

IDs format is xx -xx-xx-xx-xx-xx

Example ID: 00905C21D4