

**PEAK 600VL**  
**Single Board Computer**

**User's Guide**

*All brand names are registered trademarks of their owners.*

@Copyright 2000

All Rights Reserved

Manual edition 1.0, July 2000

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

# Table of Contents

## How to Use This Guide

### Chapter 1. Introduction

1.1 Specifications.....	-3
1.2 What you have from the package	1-6

### Chapter 2. Switches and Connectors

2.1 Switches.....	2-1
2.2 Connectors.....	2-5

### Chapter 3. Capability Expanding

3.1 System Memory.....	3-1
3.2 Cache Memory .....	3-3
3.3 Change CPU	3-3

### Chapter 4. Award BIOS Setup

4.1 Entering Setup.....	4-1
4.2 The Main Menu .....	4-4
4.3 Standard CMOS Setup .....	4-7
4.4 BIOS Features Setup. ....	-11
4.5 Chipset Features Setup.....	4-16
4.6 Power Management Setup.....	4-21
4.7 PCI & On board I/O setup.....	4-26
4.8 Integrated Peripherals	-28
4.9 Supervisor/User Password Setting	4-31
4.10 IDE HDD Auto Detection .....	4-33
4.11 Power On Boot.....	4-36
4.12 BIOS Reference-POST Message.....	-37
4.13 BIOS Reference-POST Code .....	-42
4.14 BIOS Default Drive Table	. 4-48

### Chapter 5. VGA Driver Installation Procedure

5.1 Windows 95/98 Drivers Setup Procedure .....	5-1
5.2 Windows NT Drivers Setup Procedure	...5-10

## **Chapter 6. LAN Driver Installation Procedure**

5.1 Windows 95/98 Drivers Setup Procedure	.....6-1
5.2 Windows NT Drivers Setup Procedure	6-11

## **Appendix 1 Watch Dog Timer**

## **Appendix 2 Memory Mapping**

# How to use this guide

This manual is written to help you use PEAK 600VL. It describes how to arrange various settings on the Pentium CPU board to meet your requirements. It is briefed as follows:

**Chapter 1**, “Introduction” gives an overview of the product specifications. It also tells you what are included in the product package.

**Chapter 2**, “Switches and Connectors” describes the definitions and positions of Jumpers and Connectors that you may easily configure and set up per your requirement.

**Chapter 3**, “Capability Expanding” describes how to change or expand the CPU Board by changing the system memory, cache memory, and CPU to get more power out from the CPU board.

**Chapter 4**, “Award BIOS Setup” describes how to use the advanced PCI/Green BIOS to control almost every feature of the PCA-6551/VE, including the watchdog timer.

**Chapter 5**, “VGA Driver Installation Procedure” gives instructions for installing and operating the software drivers on the display disk included in your package.

**Chapter 6**, “LAN Driver Installation Procedure” provides the detailed information on Ethernet configuration and shows you how to change the configuration match your application requirements.

**The Appendix** describes how to set up the Watchdog Timer (WDT) and gives an example to program the WDT.

## Chapter 1

### Introduction

Welcome to the PEAK 600VL Socket 370 single board computer. It is a half-size FC-PGA Pentium®-based single board computer with VGA and Ethernet.

The PEAK 600VL boosts embedded applications to new heights, especially where size is a paramount concern. At the same time, it also effectively eliminates the constraints in performance which exist in most traditional embedded architectures.

The PEAK 600VL has the evergreen Intel 440 BX PCI set built-in. The 440 BX can support 66 MHz as well as 100 MHz front side bus. All the original Socket 370 based designs for the Celeron™ CPU running 66 MHz FSB now require major revamping to reliably run with the advanced Pentium III based Pentium III, even though the Pentium III uses the same socket. The **Pentium® III with FC-PGA package** is Intel's first high performance CPU which reverts to the socket approach. This makes high performance in half-size computing possible, and the PEAK 600VL is already the performance leader.

There are two 168-pin DIMMs reserved on the PEAK 600VL. The total memory support is 512 MB, which is the largest in its kind. The VGA has an onboard AGP interface, and the C&T 69000 controller is used. The on chip video memory is 2 MB, the graphics/video performance is high enough for most industrial applications. The Realtek 10/100Base-T Ethernet controller is also onboard. It operates via a PCI interface, which guarantees high-speed communication. These onboard devices with high-speed interfaces (either via AGP or PCI) are important because they must match the power of the Pentium® III.

The PEAK 600VL also has a standard SBC features built-in. These include ISAMAX to support numerous ISA cards typically required for CTI applications. This makes the PEAK 600VL one of the best and most powerful engines for a variety of CTI environments. The high-precision RTC with battery is reserved to guarantee precise timing and scheduling. A socket for DOC<sup>®</sup> is also reserved for a solid state disk up to 144 MB. However, due to height constraints, it only supports up to a 24 MB DOC<sup>®</sup>. Other features such as 2S1P, IDEX1 up to mode 4 performance, and an FDD connector are also included. We are proud of our PEAK 600VL, which underscores our contribution to the IPC market. The PEAK 600VL will play a crucial role in being an IPC master which can react quickly as rapid advances in technologies occur. The Pentium III based CPU is so sophisticated that it is continuing to challenge the skills of SBC designers.

## 1.1 Specifications

- **System architecture**

Intel® Socket 370 Celeron™/Pentium III CPU architecture, CPU up to 700+ MHz

66/100 MHz bus supported

CE, FCC Class A certified

Equipped with VGA, 100Base-TX

PCI V2.1 compliant

PICMG 1.0 compliant

Half-size SBC with ISA gold fingers

- **CPU support**

Intel® Socket 370 CPU (PGA socket)

Intel® Celeron™/Pentium III for Socket 370 up to 700 MHz with 66/100 MHz external bus

- **Cache memory**

128/256 KB Level 2 cache (pipeline burst SRAM) on-die

- **Main memory**

Supports SDRAM only

Up to 512 MB (max.)

168-pin DIMM socket x 2

ECC support (single bit error correction / multiple bit error reporting)

- **BIOS**

Award System BIOS supported

2Mbit Flash ROM

C&T VGA BIOS

- **Chipset**

Intel® 82440BX PCI set

2<sup>nd</sup> generation PII Chipset with MMX support

PCI V2.1 concurrent PCI

Optimized SDRAM support

- **VGA**

C&T 69000 VGA controller (mini VGA package)  
2 MB SDRAM embedded or 4 MB SDRAM  
CRT and flat panel displays supported  
AGP interface

- \* **C&T 69000 controller**

Max resolution	Color	Max Refresh rate
800 x 600	True color	85 Hz
1024 x 768	High	85 Hz
1280 x 1024	256	60 Hz

Dual displays supported, MPEG I/II playback supported  
Drivers support: Windows 95/98, Windows NT 4.0

- **LAN**

RTL-8139B Ethernet controller  
10Base-T / 100Base-TX supported, full Duplex  
Complies with PCI V2.1  
Driver support:  
Dos/Windows, NetWare, Windows 95/98, Windows NT 4.0, SCO Open  
Server 5.0  
RJ-45 x 1

- **Onboard I/O**

Winbond 83977-TF Super I/O onboard  
SIO x 2, with 2 x 16C550 UARTs, 10-pin connector x 1  
PIO x 1, bidirectional, EPP/ECP supported, 26-pin x 1  
Floppy disk controller: 5.25 360 KB / 1.2 MB;  
3.5 720 KB / 1.2 MB / 1.44 MB / 2.88 MB supported,  
34-pin x 1  
One PCI IDE hard disk interface: Supports up to two enhanced IDE devices up  
to PIO mode 4 and DMA Master mode 2. Also  
supports Ultra DMA 33  
On-chip keyboard, mouse controller  
Onboard 5-pin header for keyboard x 1  
Onboard buzzer x 1  
Onboard USB with 6-pin header x1  
Onboard 2-pin header for reset switch, 4-pin for speaker, 5-pin for  
keylock power daughterboard

- **I/O connectors**

- VGA port

- LAN RJ-45 connector (change to PS/2 mouse port if LAN is not required)

- COM1 DB-9 connector

- PS/2 keyboard connector

- (PS/2 connector is for both mouse and keyboard if LAN connector is required)

- **Onboard RTC**

- High precision clock/calendar with battery backup

- **Onboard solid state disk socket**

- Socket reserved for M-Systems DiskOnChip<sup>®</sup> (DOC)

- Memory size up to 144 MB single chip

- Drivers support DOS, Windows, Win 95/98 and NT

- **ISA MAX**

- Built-in ISA MAX to support more ISA add-on cards (up to 20)

- **Watchdog Timer**

- 1, 2, 4, 8, 16, 32, 64 second time-out intervals

- **Dimensions (W x D)**

- 185 x 122 mm

- **Power requirements**

- +5 V @ 14 A (max)

- +12 V @ 200 mA (max)

- **Environment**

- Operating temperature: 0 ~ 60 °C

- Storage temperature: -20 ~ 80 °C

- Relative humidity: 10 ~ 90% (non-condensing)

- **Certification**

- CE approved

- FCC Class A

## 1.2 Packing List

Before you begin installing your cards, please make sure that the following materials have been shipped:

- PEAK 600VL single board computer x 1
- Printer and SIO cable x 1
- FDC cable x 1
- IDE cable x 1
- C&T 69000 VGA driver utility disk x 1
- RTL 8139B LAN driver utility disk x 3
- Y-cable for keyboard and mouse
- CPU fan x 1

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

## Chapter 2

# Switches and Connectors

This chapter gives the definitions and shows where to locate the positions of jumpers and connectors.

### 2-1 Switches

Jumpers on the CPU board are used to select options for certain features. To select any option, cover the jumper cap over (short) or remove it from (open) the jumper pins according to the follows instructions. (see figure 2-1, 2-2 for jumper positions)

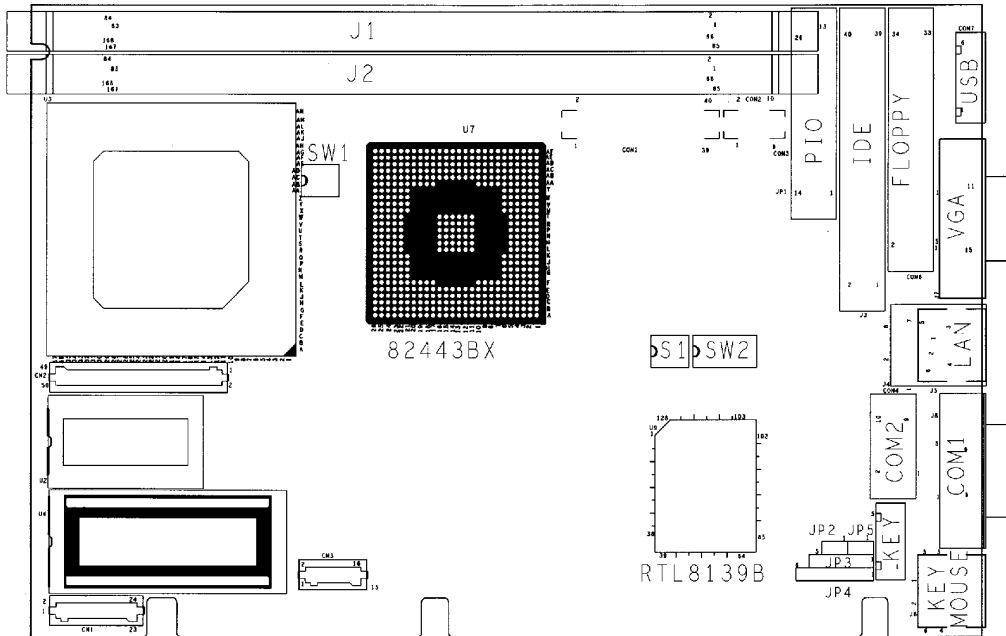


Figure 2-1: Jumper Positions

### Switches Setting Table (\*: default setup)

Pipeline	*IOQ depth of 4	IOQ depth of 1
SW1.1	1 2 3 4	1 2 3 4
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	OFF	OFF

CMOS CLEAR	Enable
SW2.4	1 2 3 4 5 6 7 8
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	OFF
	*Disable
	1 2 3 4 5 6 7 8
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	OFF

Host Frequency	*66MHz	100MHz
SW1.4	1 2 3 4	1 2 3 4
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
	OFF	OFF

Note: The user must change 100MHz under CMOS/chipset feature set up.

**DISK ON Chip**

<b>M-SYSTEM Address</b>	<b>C0000</b>	1 2 3 4 5 6 7 8
		<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
		<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SW2.1	ON	OFF
SW2.2	ON	
SW2.3	ON	

<b>M-SYSTEM Address</b>	<b>C8000</b>	1 2 3 4 5 6 7 8
		<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
		<input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SW2.1	ON	OFF
SW2.2	ON	
SW2.3	OFF	

<b>M-SYSTEM Address</b>	<b>D0000</b>	1 2 3 4 5 6 7 8
		<input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
		<input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SW2.1	ON	OFF
SW2.2	OFF	
SW2.3	ON	

<b>M-SYSTEM Address</b>	<b>*D8000</b>	1 2 3 4 5 6 7 8
		<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
		<input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SW2.1	ON	OFF
SW2.2	OFF	
SW2.3	OFF	

<b>M-SYSTEM Address</b>	<b>Disable</b>	1 2 3 4 5 6 7 8
		<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
		<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SW2.1	OFF	OFF
SW2.2	X	
SW2.3	X	

BIOS Refresh	*Enable							
SW2.5	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	OFF							
	Disable							
	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	OFF							

LAN Chip Function	*Enable	1	2	3	4	5	6	7	8
SW2.6	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SW2.7	OFF	OFF							

LAN Chip Function	Disable	1	2	3	4	5	6	7	8
SW2.6	OFF	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SW2.7	ON	OFF							

## 2-2 Connectors

Connectors on the CPU Board provide interfaces to other devices.

Connector	Function	Remark
J1	DIMM1 Socket	
J2	DIMM2 Socket	
J3	IDE Connector	
J4	LAN RJ45 connector	
J6	PS/2 Keyboard/Mouse Connector	
J7	VGA Connector	
J8	COM 1 Connector	
JP2	H/W Reset	
JP3	Keylock	
JP5	IDE LED	
CN1, CN2, CN3	Power Module Connector	
CON3	Printer Connector	
CON4	COM 2 connector	
CON5	Keyboard Connector	
CON6	Floppy Connector	
CON7	USB Connector	

## Pin definitions of connectors

- J3: IDE Interface Connector

PIN No.	Description	PIN No.	Description
1	Reset#	2	Ground
3	Data 7	4	Data 8
5	Data 6	6	Data 9
7	Data 5	8	Data 10
9	Data 4	10	Data 11
11	Data 3	12	Data 12
13	Data 2	14	Data 13
15	Data 1	16	Data 14
17	Data 0	18	Data 15
19	Ground	20	N/C
21	DMA REQ	22	Ground
23	IOW#	24	Ground
25	IOR#	26	Ground
27	IOCHRDY	28	Pull Down
29	DMA ACK	30	Ground
31	Interrupt	32	N/C
33	SA1	34	N/C
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD Active#	40	Ground

- J4: LAN connector (RJ-45)

PIN No.	Description
1	TXO+
2	TXO-
3	RXI+
4	TERMPLANE
5	TERMPLANE
6	RXI-
7	TERMPLANE
8	TERMPLANE

- J6: 6-Pin Mini-DIN Keyboard Connector (PS/2 Type)

PIN No.	Description
1	Keyboard Data
2	Mouse/Data
3	Ground
4	+5V
5	Keyboard Clock
6	Mouse/Clock

- J7: VGA Connector

PIN No.	Description
1	RED
2	Green
3	Blue
4	Pull up 1K to 5V
5	GND
6	GND
7	GND
8	GND
9	+5V
10	GND
11	Pull up 1K to 5V
12	Display data channel data
13	Horizontal Sync
14	Vertical Sync
15	Display Data Channel Clock

- J8: Serial Port Connector -D-Sub 9-Pin

PIN No.	Description
1	Data Carrier Detect (DCD)
2	Receive Data (RXD)
3	Transmit Data (TXD)
4	Data Terminal Ready (DTR)
5	Ground (GND)
6	Data Set Ready (DSR)
7	Request to Send (RTS)
8	Clear to Send (CTS)
9	Ring Indicator (RI)

- JP2: Reset Switch

PIN No.	Description
1	External Reset
2	Ground

- JP3: Key lock

PIN No.	Description
1	+5V
2	N/C
3	Ground
4	Key lock
5	Ground

- CON3: Parallel Port Connector

PIN No.	Description	PIN No.	Description
1	Strobe#	2	Data 0
3	Data 1	4	Data 2
5	Data 3	6	Data 4
7	Data 5	8	Data 6
9	Data 7	10	Acknowledge
11	Busy	12	Paper Empty
13	Printer Select	14	Auto Form Feed#
15	Error#	16	Initialize
17	Printer Select IN#	18	Ground
19	Ground	20	Ground
21	Ground	22	Ground
23	Ground	24	Ground
25	Ground		

- CON 4: Serial Port Connector -D-Sub 9-Pin

<b>PIN No.</b>	<b>Description</b>
1	Data Carrier Detect (DCD)
2	Receive Data (RXD)
3	Transmit Data (TXD)
4	Data Terminal Ready (DTR)
5	Ground (GND)
6	Data Set Ready (DSR)
7	Request to Send (RTS)
8	Clear to Send (CTS)
9	Ring Indicator (RI)
10	GND

- CON5: Keyboard Connector

<b>PIN No.</b>	<b>Description</b>
1	Keyboard Clock
2	Keyboard Data
3	N/C
4	Ground
5	+5V

- CON 6: FDC Connector

<b>PIN No.</b>	<b>Description</b>	<b>PIN No.</b>	<b>Description</b>
1	Ground	2	Density Select bit 0
3	Ground	4	N/C
5	N/C	6	Density Select bit 1
7	Ground	8	Index#
9	Ground	10	Motor Enable A#
11	Ground	12	Drive Select B#
13	Ground	14	Drive Select A#
15	Ground	16	Motor Enable B#
17	Ground	18	Direction#
19	Ground	20	Step#
21	Ground	22	Write Data#
23	Ground	24	Write Gate#
25	Ground	26	Track 0#
27	Ground	28	Write Protect#
29	N/C	30	Read Data#
31	Ground	32	Head Side Select#
33	Ground	34	Disk Change#

- CON7: USB Connector

<b>PIN No.</b>	<b>Description</b>
1	VCC
2	SBD1-
3	SBD1+
4	SBD0-
5	SBD0+
6	Ground

## Chapter 3

# Capability Expanding

This chapter explains how you can expand capability of your CPU board in such aspects as system memory, cache memory, and CPU.

### 3-1 System Memory

Your system DRAM is provided by 168 pin DIMM's (Dual In-line Memory Modules) on the CPU board. The CPU board contains two memory banks corresponding to connector DIMM1 and DIMM2.

The table below shows possible DIMM configurations for the memory banks and the figure helps you correctly install the DIMM modules. See Figure 3-2 for memory bank's location.

<b>DIMM 1</b>	<b>DIMM 2</b>	<b>Total Memory</b>
16MB	--	16MB
16MB	16MB	32MB
32MB	--	32MB
32MB	32MB	64MB
64MB	--	64MB
64MB	64MB	128MB
128MB	--	128MB
128MB	128MB	256MB
256MB	--	256MB
256MB	256MB	512MB

The DIMM used SDRAM memory. Please be noted that if the 100MHz CPU external lock is turned on, the memory should be SDRAM only and PC-100 complied.

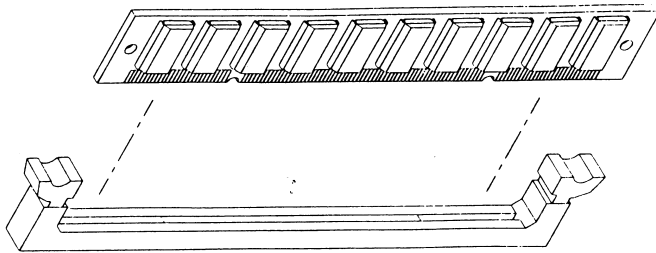


Figure 3-1 Installing DIMM

### **3-2 The Cache Memory**

The PEAK 600VL series only support the high speed pipeline burst SRAM. CPU On-die second level (L2) cache.

### **3-3 Change CPU**

The PEAK 600VL uses the 321 pin PGA socket rather than the ZIF socket, so it needs force to push or pull the CPU into or out from the socket. Normally, you have to use some tools to pull the CPU out from the socket. To put on a new CPU, please place the new CPU on the middle of the socket, orienting its beveled corner to line up with the socket beveled corner. Make sure the pins of the CPU fit evenly to the socket openings, then press the CPU until all the pins fit into the socket. Be sure to re-arrange the DIP switch setting for the correct clock and Core/Bus ratio. The PEAK 600VL supports many kinds of CPU , please refer to the DIP switch setting table for the right arrangement.

## Chapter 4 AWARD BIOS Setup

Award's BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed RAM (CMOS RAM) so that it retains the Setup information when the power is turned off.

### *Entering Setup*

Power on the computer and press <Del> immediately will allow you to enter Setup. The other way to enter Setup is to power on the computer, when the below message appears briefly at the bottom of the screen during the POST (Power On Self Test), press <Del> key or simultaneously press <Ctrl>, <Alt>, and <Esc> keys.

TO ENTER SETUP BEFORE BOOT PRESS <CTRL-ALT-ESC> OR <DEL>  
KEY

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to,

PRESS <F1> TO CONTINUE, <CTRL-ALT-ESC> OR <DEL> TO ENTER  
SETUP

<i>Control Keys</i>
---------------------

Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item in the left hand
Right arrow	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
PgUp / " key	Increase the numeric value or make changes
PgDn / "- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
(Shift)F2 key	Change color from total 16 colors. F2 to select color forward, (Shift) F2 to select color backward
F3 key	Reserved
F4 key	Reserved
F5 key	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
F6 key	Load the default CMOS value from BIOS default table, only for Option Page Setup Menu
F7 key	Load the Setup default , only for Option Page Setup Menu
F8 key	Reserved
F9 key	Reserved
F10 key	Save all the CMOS changes, only for Main Menu

## *Getting Help*

### Main Menu


The on-line description of the highlighted setup function is displayed at the bottom of the screen.

### Status Page Setup Menu/Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <F1> or <Esc>.

## The Main Menu

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (Figure 1) will appear on the screen. The Main Menu allows you to select from ten setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

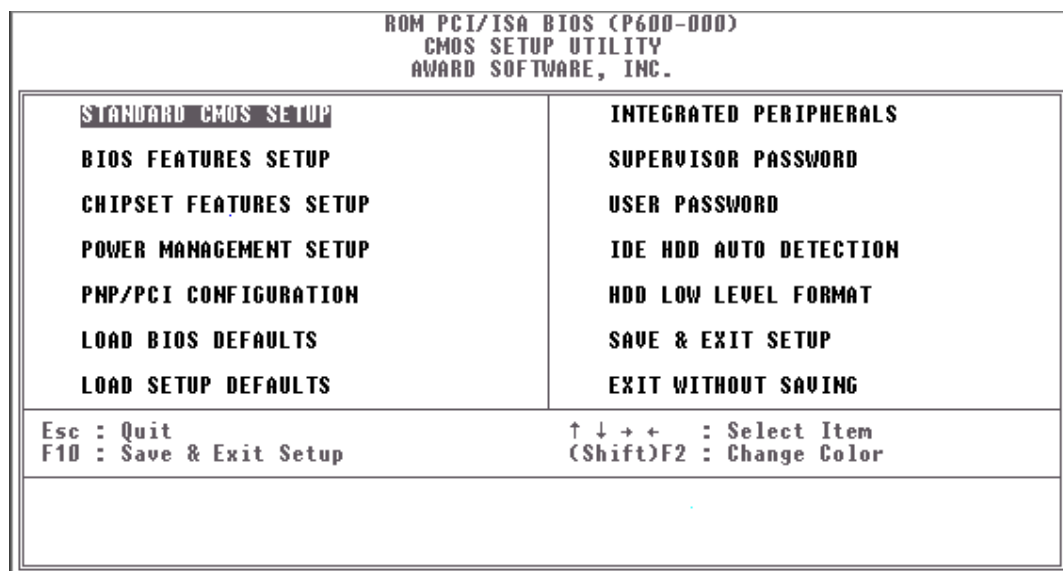

### Standard CMOS setup

This setup page includes all the items in a standard compatible BIOS. See Page 4-7 to Page 4-10 for details.

### BIOS features setup

This setup page includes all the items of Award special enhanced features. See Page 4-11 to Page 4-15 for details.

### **Chipset features setup**

This setup page includes all the items of chipset special features. See Page 4-16 to Page 4-20 for details.

### **Power Management setup**

This category determines how much power consumption for system after selecting below items. Default value is Disable. See Page 4-21 to Page 4-25 for details.

### **PNP/PCI CONFIGURATION**

This category specifies the assignment of all the IRQ and DMA . See Page 4-26 to Page 4-27 for details.

### **Load BIOS defaults**

BIOS defaults indicates the most appropriate value of the system parameter which the system would be in minimum performance. The OEM manufacturer may change the defaults through MODBIN before the binary image burn into the ROM.

### **Load setup defaults**

Chipset defaults indicates the values required by the system for the maximum performance. The OEM manufacturer may change to defaults through MODBIN before the binary image burn into the ROM.

### **Integrated Peripherals System Environment**

This category allows you to set up all the on board I/O controllers like IDE, SCSI, FDC, etc.,. See Page 4-28 to Page 4-30

### **Password Setting**

Change, set, or disable password of supervisor or user. It allows you to limit access to the system and Setup, or just to Setup. See Page 4-31 for details.

**IDE HDD auto detection**

Automatically configure hard disk parameters. See Page 4-32 to Page 4-35.

**Save & Exit Setup**

Save CMOS value changes to CMOS and exit setup.

**Exit without saving**

Abandon all CMOS value changes and exit setup.

## Standard CMOS Setup Menu

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Figure 2 Standard CMOS Setup Menu (Support Enhanced IDE)

ROM PCI / ISA BIOS (PEAK 600VL)  
STANDARD CMOS SETUP  
AWARD SOFTWARE, INC.

Date (mm:dd:yy) : Mon, Dec 13 1999	
Time (hh:mm:ss) : 16: 48: 33	
Daylight Saving : Disabled	
<u>HARDDISKS</u>	<u>CYLS. HEADS PRECOMP LANDZONE SECTORS MODE</u>
Drive C : Auto ( 0Mb)	0 0 0 0 0 Auto
Drive D : Auto ( 0Mb)	0 0 0 0 0 Auto
Drive A : 1.44M, 3.5in.	
Drive B : None	
Floppy 3 Mode Support : Disabled	
LCD&CRT : Both	Base Memory: 640K
Halt On : All , But keyboard	Extended Memory: 261120K
	Other Memory: 384K
	Total Memory: 262144K
ESC : Quit	↑ ↓ → ← : Select Item
F1 : Help	(Shift) F2 : Change Color
	PU / PD / + / - : Modify

## Date

The date format is <day>, <date> <month> <year>. Press <F3> to show the calendar.

Day	The day of week, from Sun to Sat, determined by the BIOS, is read only
date	The date, from 1 to 31 (or the maximum allowed in the month), can key in the numerical / function key
month	The month, Jan through Dec
year	The year, depend on the year of BIOS

## Time

The time format is <hour> <minute> <second>, which accepts both function key or numerical key. The time is calculated based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

## Primary Master/Primary Slave

The categories identify the types of drives that have been installed in the computer. There are 45 predefined types and 2 user definable types are for Enhanced IDE BIOS. Type 1 to Type 45 are predefined. Type User is user-definable.

Press PgUp/<+> or PgDn/<-> to select a numbered hard disk type or type the number and press <Enter>. Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category. If your hard disk drive type is not matched or listed, you can use Type User to define your own drive type manually.

If you select Type User, related information is asked to be entered to the following items. Enter the information directly from the keyboard and press <Enter>. This information should be provided in the documentation from your hard disk vendor or the system manufacturer.

If the controller of HDD interface is ESDI, the selection shall be type 1  
If the controller of HDD interface is SCSI, the selection shall be one  
If the controller of HDD interface is CD-ROM, the selection shall be one

CYLS.	number of cylinders
HEADS	number of heads
PRECOMP	write precom
LANDZONE	landing zone
SECTORS	number of sectors
MODE	HDD access mode

If a hard disk has not been installed select NONE and press <Enter>.

### Drive A type/Drive B type

The category identifies the types of floppy disk drive A or drive B that have been installed in the computer.

None	No floppy drive installed
360K, 5.25 in	5-1/4 inch PC-type standard drive; 360 kilobyte capacity
1.2M, 5.25 in	5-1/4 inch AT-type high-density drive; 1.2 megabyte capacity
720K, 3.5 in	3-1/2 inch double-sided drive; 720 kilobyte capacity
1.44M, 3.5 in	3-1/2 inch double-sided drive; 1.44 megabyte capacity
2.88M, 3.5 in	3-1/2 inch double-sided drive; 2.88 megabyte capacity

### Video

The category selects the type of adapter used for the primary system monitor that must match your video display card and monitor. Although secondary monitors are supported, you do not have to select the type in Setup.

You have two ways to boot up the system:

1. When VGA as primary and monochrome as secondary, the selection of the video type is VGA Mode
2. When monochrome as primary and VGA as secondary, the selection of the video type is monochrome Mode

EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SEGA, or PGA monitor adapters.
CGA 40	Color Graphics Adapter, power up in 40 column mode
CGA 80	Color Graphics Adapter, power up in 80 column mode
MONO	Monochrome adapter, includes high resolution monochrome adapters

### **Error Halt**

The category determines whether the computer will stop if an error is detected during power up.

No errors	Whenever the BIOS detects a non-fatal error the system will be stopped and you will be prompted.
All errors	The system boot will not be stopped for any error that may be detected.
All, But Keyboard	The system boot will not stop for a keyboard error; it will stop for all other errors.
All, But Diskette	The system boot will not stop for a disk error; it will stop for all other errors.
All, But Disk/Key	The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

### **Memory**

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

#### Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system. The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

#### Extended Memory

The BIOS determines how much extended memory is present during the POST. This is the amount of memory located above 1MB in the CPU's memory address map.

#### Other Memory

This refers to the memory located in the 640K to 1024K address space. This is memory that can be used for different applications. DOS uses this area to load device drivers to keep as much base memory free for application programs. Most use for this area is Shadow RAM.

Total Memory

System total memory is the sum of basic memory, extended memory, and other memory.

## BIOS Features Setup Menu

ROM PCI/ISA BIOS (PEAK 600VL)  
 BIOS FEATURES SETUP  
 AWARD SOFTWARE, INC.

Virus Warning : Disabled CPU Internal Cache : Enabled External Cache : Enabled CPU L2 Cache ECC Checking : Enabled  Quick Power on self test : Disabled Boot Sequence : A,C,SCSI Swap Floppy Drive : Disabled Boot up Floppy Seek : Disabled Boot up Numlock Status : OFF Gate A20 Option : Fast Typematic Rate Setting : Enabled Typematic Rate (Chars/Sec) : 30 Typematic Delay (Msec) : 250 Security Option : Setup PCI/VGA Palette Snoop : Disabled OS Select For DRAM 64MB : Non-OS2 HDD S.M.A.R.T. capability : Disabled	Video BIOS Shadow : Enabled C8000-CBFFF Shadow : Disabled CC000-CFFFF Shadow : Disabled D0000-D3FFF Shadow : Disabled D4000-D7FFF Shadow : Disabled D8000-DBFFF Shadow : Disabled DC000-DFFFF Shadow : Disabled  ESC : Quit                    ↑↓←→: Select Item F1 : Help                    PU/PD/+/-: Modify F5 : Old Values            (Shift) F2: Color F6 : Load BIOS Defaults F7 : Load Setup Defaults
---	---

### Virus Warning

This category flashes on the screen. During and after the system boots up, any attempt to write to the boot sector or partition table of the hard disk drive will halt the system and the following error message will appear, in the mean time, you can run an anti-virus program to locate the problem.

**! WARNING !**  
 Disk boot sector is to be modified  
 Type "Y" to accept write or "N" to abort write  
 Award Software, Inc.

Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
---------	---

Disabled	No warning message to appear when anything attempts to access the boot sector or hard disk partition table.
----------	---

Note: This function is available only for DOS and other OSes that do not trap INT13.

### CPU Internal Cache/External Cache

These two categories speed up memory access. However, it depends on CPU/chipset design. The default value is Enable. If your CPU without Internal Cache then this item CPU Internal Cache will not be show.

Enabled	Enable cache
Disabled	Disable cache

### Quick Power On Self Test

This category speeds up Power On Self Test (POST) after you power on the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.

Enabled	Enable quick POST
Disabled	Normal POST

### Boot Sequence

This category determines which drive computer searches first for the disk operating system (i.e., DOS). Default value is A,C.

C,A	System will first search for hard disk drive then floppy disk drive.
A,C	System will first search for floppy disk drive then hard disk drive.

Note: This function is only available for IDE type  
For SCSI type is always boot from A.

### Boot Up Floppy Seek

During POST, BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks while 760K, 1.2M and 1.44M are all 80 tracks.

Enabled	BIOS searches for floppy disk drive to determine if it is 40 or 80 tracks. Note that BIOS can not tell from 720K, 1.2M or 1.44M drive type as they are all 80 tracks.
---------	---

Disabled	BIOS will not search for the type of floppy disk drive by track number. Note that there will not be any warning message if the drive installed is 360K.
----------	---

### Boot Up NumLock Status

The default value is On.

On	Keypad is number keys
Off	Keypad is arrow keys

### Typematic Rate Setting

This determines the typematic rate.

Enabled	Enable typematic rate and typematic delay programming
Disabled	Disable typematic rate and typematic delay programming. The system BIOS will use default value of this 2 items and the default is controlled by keyboard.

### Typematic Rate (Chars/Sec)

6	6 characters per second
8	8 characters per second
10	10 characters per second
12	12 characters per second
15	15 characters per second
20	20 characters per second
24	24 characters per second
30	30 characters per second

### Typematic Delay (Msec)

When holding a key, the time between the first and second character displayed.

250	250 msec
500	500 msec
750	750 msec

1000	1000 msec
------	-----------

### Security Option

This category allows you to limit access to the system and Setup, or just to Setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

### PCI/VGA Palette Snoop

It determines whether the MPEG ISA/VESA VGA Cards can work with PCI/VGA or not.

Enabled	When PCI/VGA working with MPEG ISA/VESA VGA Card.
Disabled	When PCI/VGA not working with MPEG ISA/VESA VGA Card.

### OS Select for DRAM > 64MB

This segment is specifically created for OS/2 when DRAM is larger than 64MB. If your operating system is OS/2 and DRAM used is larger the 64MB, you have to select S 2 otherwise, non-OS2, default is NON-OS2.

### Video BIOS Shadow

It determines whether video BIOS will be copied to RAM, however, it is optional from chipset design. Video Shadow will increase the video speed.

Enabled	Video shadow is enabled
Disabled	Video shadow is disabled

### **C8000 - CFFFF Shadow/D8000 - DFFFF Shadow**

These categories determine whether optional ROM will be copied to RAM by 16K byte or 32K byte per/unit and the size depends on chipset.

Enabled	Optional shadow is enabled
Disabled	Optional shadow is disabled

Note: 1. for C8000-DFFFF option-ROM on PCI BIOS , BIOS will automatically enable the shadow RAM. User does not have to select the item.

2. IDE second channel control:

Enable : enable secondary IDE port and BIOS will assign IRQ15 for this port.

Disable: disable secondary IDE port and IRQ15 is available for other device.

The item is optional only for PCI BIOS.

3. Some of the sound cards have an onboard CD-ROM controller which uses IDE Secondary Port. In order to avoid PCI IDE conflict, the IDE secondary channel control has to select “disable” then CD-ROM can work.

## Chipset Features Setup Menu

Since the features in this section are related to the chipset in the CPU board and all are optimized, you are not recommended to change the default settings in the setup table, unless you know very detailed of the chipset features.

ROM PCI/ISA BIOS (PEAK 600VL)  
CHIPSET FEATURES SETUP  
AWARD SOFTWARE, INC.

Auto Configuration	: Enabled	Auto Detect DIMM/PCI Clk	: Enabled
EDO DRAM Speed	: 60ns	Spread Spectrum	: Disabled
Selection			
EDO CASx# MA Wait State	: 2	CPU Host Clock (CPU/PCI)	: Default
EDO RASx# Wait State	: 2		
SDRAM Control by	: Manual		
SDRAM RAS-to-CAS	: 3		
Delay			
SDRAM RAS Precharge	: 3		
Time			
SDRAM CAS latency Time	: 3		
SDRAM Precharge Control	: Disabled		
DRAM Data Integrity Mode	: Non-ECC		
System BIOS Cacheable	: Enabled		
Video BIOS Cacheable	: Enabled		
8 Bit I/O Recovery Time	: 1		
16 Bit I/O Recovery Time	: 1		
Memory Hole At 15M-16M	: Disabled	ESC : Quit	↑ ↓ → ← : Select Item
Passive Release	: Disabled	F1 : Help	PU/PD/+/- : Modify
Delayed Transaction	: Disabled	F5 : Old Values	(Shift) F2 : Color
AGP Aperture Size (MB)	: 64	F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

This section describes features of the Intel 440BX PCIsset. If your system contains a different chipset, this section will bear little resemblance to what you see on your screen.

ADVANCED OPTIONS. The parameters in this screen are for system designers, service personnel, and technically competent users only. Do not reset these values unless you understand the consequences of your changes.

NOTE: This chapter describes all fields offered by Award Software in this screen. Your system board designer may omit or modify some fields.

### **Auto Configuration**

Auto Configuration selects predetermined optimal values of chipset parameters. When Disabled, chipset parameters revert to setup information stored in CMOS. Many fields in this screen are not available when Auto Configuration is Enabled.

The Choice: Enabled, Disabled.

### **EDO DRAM Speed Selection**

The DRAM timing is controlled by the DRAM Timing Registers. The timings programmed into this register are dependent on the system design. Slower rates may be required in certain system designs to support loose layouts or slower memory.

50ns	DRAM Timing Type.
60ns	DRAM Timing Type.

### **EDO CASx# MA Wait State**

You could select the timing control type of EDO DRAM CAS MA (memory address bus). The choice: 1, 2.

### **EDO RASx# MA Wait State**

You could select the timing control type of EDO DRAM RAS MA (memory address bus). The choice: 1, 2.

### **SDRAM RAS-to-CAS Delay**

You can select RAS to CAS Delay time in HCLKs of 2/2 or 3/3. The system board designer should set the values in this field, depending on the DRAM installed. Do not

change the values in this field unless you change specifications of the installed DRAM or the installed CPU. The Choice: 2, 3.

### **SDRAM RAS Precharge Time**

Defines the length of time for Row Address Strobe is allowed to precharge. The Choice: 2, 3

### **SDRAM CAS latency Time**

You can select CAS latency time in HCLKs of 2/2 or 3/3. The system board designer should set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU. The choice: 2, 3.

### **DRAM Data Integrity Mode**

Select Parity or ECC (error-correcting code), according to the type of installed DRAM. The Choice: Non-ECC, ECC.

### **System BIOS Cacheable**

Select Enabled allows caching of the system BIOS ROM at F000h-FFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

Enabled	BIOS access cached
Disabled	BIOS access not cached

### **Video BIOS Cacheable**

Select Enabled allows caching of the video BIOS ROM at C0000h-F7FFFh, resulting in better video performance. However, if any program writes to this memory area, a system error may result.

Enabled	Video BIOS access cached
Disabled	Video BIOS access not cached

### **Video RAM Cacheable**

Select Enabled allows caching of the video RAM , resulting in better system performance. However, if any program writes to this memory area, a system error may result.

### **8 Bit I/O Recovery Time**

The recovery time is the length of time, measured in CPU clocks, which the system will delay after the completion of an input/output request. This delay takes place because the CPU is operating so much faster than the input/output bus that the CPU must be delayed to allow for the completion of the I/O. This item allows you to determine the recovery time allowed for 8 bit I/O. Choices are from NA, 1 to 8 CPU clocks.

### **16 Bit I/O Recovery Time**

This item allows you to determine the recovery time allowed for 16 bit I/O. Choices are from NA, 1 to 4 CPU clocks.

### **Memory Hole At 15M-16M**

In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory space below 16 MB.

Enabled	Memory hole supported.
Disabled	Memory hole not supported.

### **Passive Release**

When Enabled, CPU to PCI bus accesses are allowed during passive release. Otherwise, the arbiter only accepts another PCI master access to local DRAM. The choice: Enabled, Disabled.

### **Delayed Transaction**

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1. The choice: Enabled, Disabled.

### **AGP Aperture Size (MB)**

Select the size of the Accelerated Graphics Port (AGP) aperture. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation. See [www.agpforum.org](http://www.agpforum.org) for AGP information.

The choice: 4, 8, 16, 32, 64, 128, 256

#### **Auto Detect DIMM/PCI Clk**

This item auto detect the clock generator. The unused pins of DIMM/PCI Clk are disabled. The amplitudes of the radiated electromagnetic emissions are reduced. Choices: Enabled, Disabled.

#### **Spread Spectrum Modulated**

The Clock Generator generates a clock that is frequency modulated in order to increase the bandwidth that it occupies. By increasing the bandwidth of the fundamental and its harmonics, the amplitudes of the radiated electromagnetic emissions are reduced.

Choices: Enabled, Disabled.

<i>Power Management Setup</i>
-------------------------------

The Power management setup will appear on your screen like this:

ROM PCI/ISA BIOS (PEAK 600VL) POWER MANAGEMENT SETUP AWARD SOFTWARE, INC.																																									
<table style="width: 100%; border-collapse: collapse;"> <tr><td>ACPI function</td><td>: Disabled</td></tr> <tr><td>Power Management</td><td>: User Define</td></tr> <tr><td>PM Control by APM</td><td>: Yes</td></tr> <tr><td>Video Off Method</td><td>: Blank Screen</td></tr> <tr><td>Video Off After</td><td>: Standby</td></tr> <tr><td>Doze Mode</td><td>: Disable</td></tr> <tr><td>Standby Mode</td><td>: Disable</td></tr> <tr><td>Suspend Mode</td><td>: Disable</td></tr> <tr><td>HDD Power Down</td><td>: Disable</td></tr> <tr><td>Throttle Duty Cycle</td><td>: 62.5%</td></tr> <tr><td>PCI/VGA Act-Monitor</td><td>: Disabled</td></tr> <tr><td>IRQ 8 Break Suspend</td><td>: Disabled</td></tr> </table>	ACPI function	: Disabled	Power Management	: User Define	PM Control by APM	: Yes	Video Off Method	: Blank Screen	Video Off After	: Standby	Doze Mode	: Disable	Standby Mode	: Disable	Suspend Mode	: Disable	HDD Power Down	: Disable	Throttle Duty Cycle	: 62.5%	PCI/VGA Act-Monitor	: Disabled	IRQ 8 Break Suspend	: Disabled	<table style="width: 100%; border-collapse: collapse;"> <tr><td colspan="2" style="text-align: center;">** Reload Global Timer Events **</td></tr> <tr><td>IRQ[3-7, 9-15], NMI</td><td>: Disabled</td></tr> <tr><td>Primary IDE 0</td><td>: Disabled</td></tr> <tr><td>Primary IDE 1</td><td>: Disabled</td></tr> <tr><td colspan="2"> </td></tr> <tr><td>Floppy Disk</td><td>: Disabled</td></tr> <tr><td>Serial Port</td><td>: Enabled</td></tr> <tr><td>Parallel Port</td><td>: Disabled</td></tr> </table>	** Reload Global Timer Events **		IRQ[3-7, 9-15], NMI	: Disabled	Primary IDE 0	: Disabled	Primary IDE 1	: Disabled			Floppy Disk	: Disabled	Serial Port	: Enabled	Parallel Port	: Disabled
ACPI function	: Disabled																																								
Power Management	: User Define																																								
PM Control by APM	: Yes																																								
Video Off Method	: Blank Screen																																								
Video Off After	: Standby																																								
Doze Mode	: Disable																																								
Standby Mode	: Disable																																								
Suspend Mode	: Disable																																								
HDD Power Down	: Disable																																								
Throttle Duty Cycle	: 62.5%																																								
PCI/VGA Act-Monitor	: Disabled																																								
IRQ 8 Break Suspend	: Disabled																																								
** Reload Global Timer Events **																																									
IRQ[3-7, 9-15], NMI	: Disabled																																								
Primary IDE 0	: Disabled																																								
Primary IDE 1	: Disabled																																								
Floppy Disk	: Disabled																																								
Serial Port	: Enabled																																								
Parallel Port	: Disabled																																								
		ESC : Quit                      ↑ ↓ → ← : Select Item F1 : Help                        PU/PD/+/- : Modify F5 : Old Values                (Shift) F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults																																							

### Power Management

This category determines how much power consumption for system after selecting below items. Default value is Disable. The following pages tell you the options of each item & describe the meanings of each options.

Item	Options	Descriptions
A.Power Management	1. Disable	Global Power Management will be disabled
	2. User Define	Users can configure their own power management
	3. Min Saving	Pre-defined timer values are used such that all timers are in their MAX value
	4. Max Saving	Pre-defined timer values are used such that all timers MIN value
B. Video Off Option	1. Always On	System BIOS will never turn off the screen
	2. Suspend->Off	Screen off when system is in SUSPEND mode
	3. Susp, stby->Off	Screen off when system is in STANDBY or SUSPEND mode
	4. All Modes ->Off	Screen off when system is in DOZE, STANDBY or SUSPEND mode
C. Video Off Method	1. Blank Screen	The system BIOS will only blanks off the screen when disabling video
	2. V/H SYN C+Blank	In addition to (1), BIOS will also turn off the V-SYNC & H-SYNC signals from VGA cards to monitor
	3. DPMS Supported	This function is enabled for only the VGA card supporting DPMS
		Note: Green monitors detect the V/H SYNC signals to turn off its electron gun

D. Switch Function	1. Break	The External Suspend Switch is reack”
	2. Wake	The External Suspend Switch is ake”
	2. 1 Min 2 Min 4 Min 6 Min 8 Min 10 Min 20 Min 30 Min 40 Min 1 Hr	Defines the continuous idle time before the system entering DOZE mode.  if any item defined in (J) is enabled & active, DOZE timer will be reloaded
		Note: Normally,STANDBY mode puts the system into low speed or 8 MHz, screen may be off depend on (E)
E. Doze Speed(div by) Stdby speed (div by)	1/8 2/8 3/8 4/8 5/8 6/8 7/8 8/8	System full speed could be divided by the optional integers, the bigger the number the slower the speed under Doze or standby mode
F. Modem Use IRQ	3,4,5,7,9 4,10,11,NA	For external modem, 3 or 4 will be used for card type modem. It is up to card definition. Default is 3.
G. Standby Mode (* ) Remark 1	1. Disable	System will never enter STANDBY mode
	2. 10 sec 1 Min 10 Min 30 Min 1 Hour 2 Hour 20 Min	Defines the continuous idle time before the system entering STANDBY mode.  if any item defined in (J) is enabled & active, STANDBY timer will be reloaded

		Note: Normally,STANDBY mode puts the system into low speed or 8 MHz, screen may be off depend on (E)

H. Doze (* Remark 1	1. Disable	System will never enter STANDBY mode
	2. 1 Min 2 Min 4 Min 6 Min 8 Min 10 Min 20 Min 30 Min 40 Min 1 Hr	Defines the continuous idle time before the system entering STANDBY mode.  if any item defined in (J) is enabled & active, STANDBY timer will be reloaded
		Note: Normally,STANDBY mode puts the system into low speed or 8 MHz, screen may be off depend on (E)
I. Suspend Mode (* Remark 1	1. Disable	System will never enter SUSPEND mode
	2. 1 Min 2 Min 4 Min 6 Min 8 Min 10 Min 20 Min 30 Min 40 Min 1 Hr	Defines the continuous idle time before the system entering SUSPEND mode.  if any item defined in (J) is enabled & active, SUSPEND timer will be reloaded
		Note: Normally,SUSPEND mode puts the system

		into low speed or 8 MHz, clock is stopped, screen may be off depend on (E)
J. HDD Off After:	1. Disable 2. 10 Sec 1 Min 10 Min 30 Min 1 Hour 2 Hour 4 Hour	HDD motor will not off Defines the continuous HDD idle time before the HDD entering power saving mode (motor off)
K. VGA Activity  IRQ3 (COM 2) IRQ4 (COM 1) IRQ5 (LPT 2) IRQ6 (Floppy Disk) IRQ7 (LPT 1) IRQ8 (RTC Alarm) IRQ9 (IRQ2 Redir) IRQ10 (Reserved) IRQ11 (Reserved) IRQ12 (PS/2 Mouse) IRQ13 (Coprocessor) IRQ14 (Hard Disk) IRQ15 (Reserved)	1. Disabled 2. Enabled	
L. Power Bottom Over Ride	1. Delay 4 Sec 2. Instant off	

\* Remark 1: All items mark with (\*) in this menu, will be loaded with predefined values as long as the item Power Management is not configured to User Defined'

These items are:

Item System Doze , System Standby & System Suspend'

# Remark 2: Although the item HDD Power Down is not controlled by item Power Management in terms of timer value, the HDD (s) will not power down if the global power management is disabled!

## PnP/PCI Configuration

This section describes configuring the PCI bus system. PCI, or **P**eripheral **C**omponent **I**nterconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

ROM PCI/ISA BIOS (P600-000) PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.	
PNP OS Installed : No Resources Controlled By : Manual Reset Configuration Data : Disabled  IRQ-3 assigned to : PCI/ISA PnP IRQ-4 assigned to : PCI/ISA PnP IRQ-5 assigned to : PCI/ISA PnP IRQ-7 assigned to : PCI/ISA PnP IRQ-9 assigned to : PCI/ISA PnP IRQ-10 assigned to : PCI/ISA PnP IRQ-11 assigned to : PCI/ISA PnP IRQ-12 assigned to : PCI/ISA PnP IRQ-14 assigned to : PCI/ISA PnP IRQ-15 assigned to : PCI/ISA PnP DMA-0 assigned to : PCI/ISA PnP DMA-1 assigned to : PCI/ISA PnP DMA-3 assigned to : PCI/ISA PnP DMA-5 assigned to : PCI/ISA PnP DMA-6 assigned to : PCI/ISA PnP DMA-7 assigned to : PCI/ISA PnP	Assign IRQ For VGA : <b>Enabled</b> Slot 1 Use IRQ No. : Auto Slot 2 Use IRQ No. : Auto Onboard LAN use IRQ : Auto Onboard VGA use IRQ : Auto  Used MEM base addr : N/A  Assign IRQ For USB : Disabled  ESC : Quit            ↑↓↓+ : Select Item F1 : Help            PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults

### **PNP OS Installed**

This item allows you to determine install PnP OS or not.  
Choices are Yes and No.

### **Resource Controlled by**

The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows® 95.  
Choices are *Auto* and *Manual* (default).

### **Reset Configuration Data**

This item allows you to determine reset the configuration data or not.  
Choices are *Enabled* and *Disabled* (default).

### **IRQ/DMA Assigned To**

This item allows you to determine the IRQ / DMA assigned to the ISA bus and is not available to any PCI slot. (Legacy ISA) or PnP for both ISA and PCI.  
Choices are *Legacy ISA* and *PCI/ISA PnP*.

### **PCI IRQ Activated by**

This sets the method by which the PCI bus recognizes that an IRQ service is being requested by a device. Under all circumstances, you should retain the default configuration unless advised otherwise by your system manufacturer.  
Choices are *Level* (default) and *Edge*.

## *Integrated Peripherals*

ROM PCI / ISA BIOS (PEAK 600VL)  
INTEGRATED PERIPHERALS  
AWARD SOFTWARE, INC.

<p>IDE HDD Block Mode : Enabled</p> <p>IDE Primary Master PIO : Auto</p> <p>IDE Primary Slave PIO : Auto</p> <p>IDE Secondary Master PIO : Auto</p> <p>IDE Secondary Slave : Auto</p> <p>UDMA</p> <p>On-Chip Primary PCI IDE : Enabled</p> <p>USB Keyboard Support : Enabled</p> <p>KBC input clock : 8 MHz</p> <p>Onboard FDC Controller : Enabled</p> <p>Onboard Serial Port 1 : 3F8/IRQ4</p> <p>Onboard Serial Port 2 : 2F8/IRQ3</p> <p>Onboard Parallel Port : 378/IRQ7</p> <p>Parallel Port Mode : SPP</p>	<p>ESC : Quit                    ↑ ↓ → ← : Select Item</p> <p>F1 : Help                    PU/PD/+/- : Modify</p> <p>F5 : Old Values            (Shift) F2 : Color</p> <p>F6 : Load BIOS Defaults</p> <p>F7 : Load Setup Defaults</p>
--	---

### IDE HDD Block Mode

This allows your hard disk controller to use the fast block mode to transfer data to and from your hard disk drive (HDD).

Enabled	IDE controller uses block mode.
Disabled (Default)	IDE controller uses standard mode.

### **IDE Primary/Secondary Master/Slave PIO**

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

### **IDE Primary/Secondary Master/Slave UDMA**

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/33, select Auto to enable BIOS support. The Choice: Auto (Default), Disabled

### **On-Chip Primary/Secondary PCI IDE**

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Enabled (Default) to activate each channel separately.

### **Onboard PCI SCSI Chip**

This item allows you to determine whether onboard PCI SCSI chip is enabled (Default) or not.

### **USB Keyboard Support**

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard. The Choice: Enabled, Disabled (Default).

### **Onboard FDC Controller**

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install and-in FDC or the system has no floppy drive, select Disabled in this field. Choices: Enabled (Default), Disabled.

### **Onboard Serial Port 1/Port 2**

This item allows you to determine access onboard serial port 1/port 2 controller with which I/O address. The Choice: 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto (Default).

### **UART 2 Mode**

This item allows you to determine which Infra Red (IR) function of onboard I/O chip. The Choice: Standard (Default), IrDA1.0, ASK-IR, IrDA1.1

### **Duplex Select**

This item allows you to select the IR function when your select the UART 2 Mode is IrDA1.0, ASK-IR, IrDA1.1  
Choices are Half, Full.

### **TxD, RxD Active**

This item allows you to determine the active of RxD, TxD.  
Choices are i, Hi o, Lo o, Hi i, Lo

### **Onboard Parallel Port**

Select a logical LPT port name and matching address for the physical parallel (printer) port. The choice: 378H/IRQ7 (Default), 278H/IRQ5, 3BCH/IRQ7, Disabled.

### **Parallel Port Mode**

Select an operating mode for the onboard parallel port. Select Compatible or Extended unless you are certain both your hardware and software support EPP or ECP mode.

The choice: SPP, ECP+EPP1.7, EPP1.7+SPP, EPP1.9+SPP, ECP, ECP+EPP1.9 (Default), and Normal.

### **ECP Mode Use DMA**

Select a DMA channel for the port.  
Choices are 3 (Default), 1.

## *Supervisor/User Password Setting*

You can set either supervisor or user password, or both of them. The differences between are:

supervisor password : can enter and change the options of the setup menus.  
user password : just can enter but do not have the right to change the options of the setup menus.

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

### ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

### PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option (see Section 4). If the Security option is set to system the password will be required both at boot and at entry to Setup. If set to setup prompting only occurs when trying to enter Setup.



## IDE HDD Auto Detection

The Enhance IDE features was included in all Award BIOS. Below is a brief description of this feature.

### 1. Setup Changes

<I> Auto-detection

BIOS setup will display all possible modes that supported by the HDD including NORMAL, LBA & LARGE.

if HDD does not support LBA modes, no BA ption will be shown.

Users can select a mode which is appropriate for them.

ROM/PCI/ISA BOPS (2XXXXXXX)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.

HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master :								
Select Primary Master Option (N = Skip) : N								
	OPTION	SIZE	CYLS	HEADS	PRECOMP	LANDZONE	SECTORS	MODE
	1(Y)	516	1120	16	65535	1119	59	NORMAL
	2	516	524	32	0	1119	63	LBA
	3	516	560	32	65535	1119	59	LARGE

<II> Standard CMOS Setup

		<u>CYLS</u>	<u>Heads</u>	<u>Precomp</u>	<u>Landzone</u>	<u>Sector</u>	<u>Mode</u>
Primary Master:	User (516MB)	1120	16	65535	1119	59	Normal
Primary Slave:	None (203MB)	684	16	65535	685	38	-----
Secondary Master:	None	0	0	0	0	0	0



The maximum HDD size supported by LBA mode is 8.4 Gigabytes which is obtained by the following formula:

$$\begin{array}{r}
 \text{no. Cylinder} \qquad \qquad \qquad ( 1024) \\
 \times \text{ no. Head} \qquad \qquad \qquad ( 255) \\
 \times \text{ no. Sector} \qquad \qquad \qquad ( 63) \\
 \times \text{ bytes per sector} \qquad \qquad \qquad ( 512) \\
 \hline
 \qquad \qquad \qquad \qquad \qquad \qquad 8.4 \text{ Gigabytes}
 \end{array}$$

LARGE mode

Extended HDD access mode supported by Award Software.

Some IDE HDDs contain more than 1024 cylinder without LBA support (in some cases, user do not want LBA). The Award BIOS provides another alternative to support these kinds of HDD!

Example of LARGE mode:

CYLS.	HEADS	SECTOR	MODE
1120	16	59	NORMAL
560	32	59	LARGE

BIOS tricks DOS (or other OS) that the number of cylinders is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside INT13h in order to access the right HDD address the right HDD address!

Maximum HDD size:

$$\begin{array}{r}
 \text{no. Cylinder} \qquad \qquad \qquad ( 1024) \\
 \times \text{ no. Head} \qquad \qquad \qquad ( 32) \\
 \times \text{ no. Sector} \qquad \qquad \qquad ( 63) \\
 \times \text{ bytes per sector} \qquad \qquad \qquad ( 512) \\
 \hline
 \qquad \qquad \qquad \qquad \qquad \qquad 1 \text{ Gigabytes}
 \end{array}$$



(3) Remarks

To support LBA or LARGE mode of HDDs, there must be some softwares involved. All these softwares are located in the Award HDD Service Routine(INT 13h). It may be failed to access a HDD with LBA (LARGE) mode selected if you are running under a Operating System which replaces the whole INT 13h.

## *Power-On Boot*

After you have made all the changes to CMOS values and the system cannot boot with the CMOS values selected in Setup, restart the system by turning it OFF then ON or Pressing the "RESET" button on the system case. You may also restart by simultaneously press <Ctrl>, <Alt>, and <Delete> keys. Upon restart the system, immediately press <Insert> to load BIOS default CMOS value for boot up.

## *BIOS Reference - POST Message*

During the Power On Self Test (POST), if the BIOS detects an error requiring you to do something to fix, it will either sound a beep code or display a message.

If a message is displayed, it will be accompanied by:

PRESS F1 TO CONTINUE, CTRL-ALT-ESC OR DEL TO ENTER SETUP

### **POST Beep**

Currently there is only one beep code in BIOS. This code indicates that a video error has occurred and the BIOS cannot initialize the video screen to display any additional information. This beep code consists of a single long beep followed by two short beeps.

### **Error Messages**

One or more of the following messages may be displayed if the BIOS detects an error during the POST. This list includes messages for both the ISA and the EISA BIOS.

#### **CMOS BATTERY HAS FAILED**

CMOS battery is no longer functional. It should be replaced.

#### **CMOS CHECKSUM ERROR**

Checksum of CMOS is incorrect. This can indicate that CMOS has become corrupt. This error may have been caused by a weak battery. Check the battery and replace if necessary.

### **DISK BOOT FAILURE, INSERT SYSTEM DISK AND PRESS ENTER**

No boot device was found. This could mean that either a boot drive was not detected or the drive does not contain proper system boot files. Insert a system disk into Drive A: and press <Enter>. If you assumed the system would boot from the hard drive, make sure the controller is inserted correctly and all cables are properly attached. Also be sure the disk is formatted as a boot device. Then reboot the system.

### **DISKETTE DRIVES OR TYPES MISMATCH ERROR - RUN SETUP**

Type of diskette drive installed in the system is different from the CMOS definition. Run Setup to reconfigure the drive type correctly.

### **DISPLAY SWITCH IS SET INCORRECTLY**

Display switch on the motherboard can be set to either monochrome or color. This indicates the switch is set to a different setting than indicated in Setup. Determine which setting is correct, and then either turn off the system and change the jumper, or enter Setup and change the VIDEO selection.

### **DISPLAY TYPE HAS CHANGED SINCE LAST BOOT**

Since last powering off the system, the display adapter has been changed. You must configure the system for the new display type.

### **EISA Configuration Checksum Error PLEASE RUN EISA CONFIGURATION UTILITY**

The EISA non-volatile RAM checksum is incorrect or cannot correctly read the EISA slot. This can indicate either the EISA non-volatile memory has become corrupt or the slot has been configured incorrectly. Also be sure the card is installed firmly in the slot.

### **EISA Configuration Is Not Complete PLEASE RUN EISA CONFIGURATION UTILITY**

The slot configuration information stored in the EISA non-volatile memory is incomplete.

Note: When either of these errors appear, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

#### **ERROR ENCOUNTERED INITIALIZING HARD DRIVE**

Hard drive cannot be initialized. Be sure the adapter is installed correctly and all cables are correctly and firmly attached. Also be sure the correct hard drive type is selected in Setup.

#### **ERROR INITIALIZING HARD DISK CONTROLLER**

Cannot initialize controller. Make sure the cord is correctly and firmly installed in the bus. Be sure the correct hard drive type is selected in Setup. Also check to see if any jumper needs to be set correctly on the hard drive.

#### **FLOPPY DISK CNTRLR ERROR OR NO CNTRLR PRESENT**

Cannot find or initialize the floppy drive controller. make sure the controller is installed correctly and firmly. If there are no floppy drives installed, be sure the Diskette Drive selection in Setup is set to NONE.

#### **Invalid EISA Configuration**

#### **PLEASE RUN EISA CONFIGURATION UTILITY**

The non-volatile memory containing EISA configuration information was programmed incorrectly or has become corrupt. Re-run EISA configuration utility to correctly program the memory.

NOTE: When this error appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

#### **KEYBOARD ERROR OR NO KEYBOARD PRESENT**

Cannot initialize the keyboard. Make sure the keyboard is attached correctly and no keys are being pressed during the boot.

If you are purposely configuring the system without a keyboard, set the error halt condition in Setup to HALT ON ALL, BUT KEYBOARD. This will cause the BIOS to ignore the missing keyboard and continue the boot.

### **Memory Address Error at ...**

Indicates a memory address error at a specific location. You can use this location along with the memory map for your system to find and replace the bad memory chips.

### **Memory parity Error at ...**

Indicates a memory parity error at a specific location. You can use this location along with the memory map for your system to find and replace the bad memory chips.

### **MEMORY SIZE HAS CHANGED SINCE LAST BOOT**

Memory has been added or removed since the last boot. In EISA mode use Configuration Utility to reconfigure the memory configuration. In ISA mode enter Setup and enter the new memory size in the memory fields.

### **Memory Verify Error at ...**

Indicates an error verifying a value already written to memory. Use the location along with your system's memory map to locate the bad chip.

### **OFFENDING ADDRESS NOT FOUND**

This message is used in conjunction with the I/O CHANNEL CHECK and RAM PARITY ERROR messages when the segment that has caused the problem cannot be isolated.

### **OFFENDING SEGMENT:**

This message is used in conjunction with the I/O CHANNEL CHECK and RAM PARITY ERROR messages when the segment that has caused the problem has been isolated.

### **PRESS A KEY TO REBOOT**

This will be displayed at the bottom screen when an error occurs that requires you to reboot. Press any key and the system will reboot.

### **PRESS F1 TO DISABLE NMI, F2 TO REBOOT**

When BIOS detects a Non-maskable Interrupt condition during boot, this will allow you to disable the NMI and continue to boot, or you can reboot the system with the NMI enabled.

### **RAM PARITY ERROR - CHECKING FOR SEGMENT ...**

Indicates a parity error in Random Access Memory.

### **Should Be Empty But EISA Board Found PLEASE RUN EISA CONFIGURATION UTILITY**

A valid board ID was found in a slot that was configured as having no board ID.

NOTE; When this error appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

### **Should Have EISA Board But Not Found PLEASE RUN EISA CONFIGURATION UTILITY**

The board installed is not responding to the ID request, or no board ID has been found in the indicated slot.

NOTE: When this error appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

### **Slot Not Empty**

Indicates that a slot designated as empty by the EISA Configuration Utility actually contains a board.

NOTE: When this error appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

**SYSTEM HALTED, (CTRL-ALT-DEL) TO REBOOT ...**

Indicates the present boot attempt has been aborted and the system must be rebooted. Press and hold down the CTRL and ALT keys and press DEL.

**Wrong Board In Slot**

**PLEASE RUN EISA CONFIGURATION UTILITY**

The board ID does not match the ID stored in the EISA non-volatile memory.

NOTE: When this error appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

## *BIOS Reference - POST Codes*

**Note:** EISA POST codes are typically output to port address 300h.  
ISA POST codes are output to port address 80h.

POST (hex)	Description
C0	1. Turn off OEM specific cache, shadow... 2. Initialize all the standard devices with default values standard devices includes: -DMA controller (8237) -Programmable Interrupt Controller (8259) -Programmable Interval Timer (8254) -RTC chip
C1	Auto-detection of onboard DRAM & Cache
C3	1. Test system BIOS checksum 2. Test the first 256K DRAM 3. Expand the compressed codes into temporary DRAM area including the compressed System BIOS & Option ROMs
C5	Copy the BIOS from ROM into E0000-FFFFFF shadow RAM so that POST will go faster
01-02	Reserved
03	Initialize EISA registers (EISA BIOS only)
04	Reserved
05	1. Keyboard Controller Self-Test 2. Enable Keyboard Interface
06	Reserved
07	Verifies CMOS basic R/W functionality
BE	Program defaults values into chipset according to the MODBINable Chipset Default Table
09	1. Program the configuration register of Cyrix CPU according to the MODBINable Cyrix Register Table 2. OEM specific cache initialization (if needed)

0A	<ol style="list-style-type: none"><li>1. Initialize the first 32 interrupt vectors with corresponding Interrupt handlers     Initialize INT no from 33-120 with Dummy(Suprious) Interrupt Handler</li><li>2. Issue CPUID instruction to identify CPU type</li><li>3. Early Power Management initialization (OEM specific)</li></ol>
----	---

✿ **This POST code is for boot block**

<b>POST (hex)</b>	<b>Description</b>
C0	1. Turn off OEM specific cache, shadow... 2. Initialize all the standard devices with default values standard devices includes: -DMA controller (8237) -Programmable Interrupt Controller (8259) -Programmable Interval Timer (8254) -RTC chip
C1	Auto-detection of onboard DRAM & Cache
C3	Checking checksum of compressed code
C5	Copy the BIOS from ROM into E0000-FFFFFF shadow RAM so that POST will go faster
01	Clear base memory 0~640K
0C	Initial interrupt vector 00-1FH
0D	Initial ISA VGA
41H	Enable FDD and detect media type
FF H	Boot from FDD

✿ **This page is for Non-Compressed Version only**

01-02	Reserved
C0	Turn off OEM specific cache, shadow...
03	1. Initialize EISA registers (EISA BIOS only) 2. Initialize all the standard devices with default values Standard devices includes: -DMA controller (8237) -Programmable Interrupt Controller (8259) -Programmable Interval Timer (8254) -RTC chip
04	Reserved
05	1. Keyboard Controller Self-Test 2. Enable Keyboard Interface
06	Reserved
07	Verifies CMOS basic R/W functionality
BE	Program defaults values into chipset according to the MODBINable Chipset Default Table
C1	Auto-detection of onboard DRAM & Cache
C5	Copy the BIOS from ROM into E0000-FFFFFF shadow RAM so that POST will go faster
08	Test the first 256K DRAM
09	1. Program the configuration register of Cyrix CPU according to the MODBINable Cyrix Register Table 2. OEM specific cache initialization (if needed)
0A	1. Initialize the first 32 interrupt vectors with corresponding Interrupt handlers Initialize INT no from 33-120 with Dummy(Suprious) Interrupt Handler 2. Issue CUID instruction to identify CPU type 3. Early Power Management initialization (OEM specific)

- ✿ The following POST Codes are for all of Compress Version & Non-Compress Version

POST (hex)	Description
0B	<ol style="list-style-type: none"> <li>1. Verify the RTC time is valid or not</li> <li>2. Detect bad battery</li> <li>3. Read CMOS data into BIOS stack area</li> <li>4. PnP initializations including (PnP BIOS only) <ul style="list-style-type: none"> <li>-Assign CSN to PnP ISA card</li> <li>-Create resource map from ESCD</li> </ul> </li> <li>5. Assign IO &amp; Memory for PCI devices (PCI BIOS only)</li> </ol>
0C	Initialization of the BIOS Data Area (40 : 00 – 40:FF)
0D	<ol style="list-style-type: none"> <li>1. Program some of the Chipset value according to Setup. (Early Setup Value Program)</li> <li>2. Measure CPU speed for display &amp; decide the system clock speed</li> <li>3. Video initialization including Monochrome, CGA, EGA/VGA. If no display device found, the speaker will beep which consists of one single long beep followed by two short beeps.</li> </ol>
0E	<ol style="list-style-type: none"> <li>1. Initialize the APIC (Multi-Processor BIOS only)</li> <li>2. Test video RAM (If Monochrome display device found)</li> <li>3. Show messages including: <ul style="list-style-type: none"> <li>-Award Logo, Copyright string, BIOS Date code &amp; Part No.</li> <li>-OEM specific sign on messages</li> <li>-Energy Star Logo (Green BIOS ONLY)</li> <li>-CPU brand, type &amp; speed</li> <li>-Test system BIOS checksum(Non-Compress Version only)</li> </ul> </li> </ol>
0F	DMA channel 0 test
10	DMA channel 1 test
11	DMA page registers test
12-13	Reserved
14	Test 8254 Timer 0 Counter 2.
15	Test 8259 interrupt mask bits for channel 1

16	Test 8259 interrupt mask bits for channel 2
17	Reserved
19	Test 8259 functionality
1A-1D	Reserved
1E	If EISA NVM checksum is good, execute EISA initialization (EISA BIOS only)
1F-29	Reserved
30	Detect Base Memory & Extended Memory Size
31	1. Test Base Memory from 256K to 640K 2. Test Extended Memory from 1M to the top of memory
32	1. Display the Award Plug & Play BIOS Extension message (PnP BIOS only) 2. Program all onboard super I/O chips (if any) including COM ports, LPT ports, FDD port... according to setup value
33-3B	Reserved
3C	Set flag to allow users to enter CMOS Setup Utility
3D	1. Initialize Keyboard 2. Install PS2 mouse

POST(hex)	Description
3E	Try to turn on Level 2 cache Note: Some chipset may need to turn on the L2 cache in this stage. But usually, the cache is turn on later in POST 61h
3E	Try to turn on Level 2 cache Note: Some chipset may need to turn on the L2 cache in this stage. But usually, the cache is turn on later in POST 61h
BF	1. Program the rest of the Chipset value according to Setup. (Later Setup Value Program) 2. If auto-configuration is enabled, programmed the chipset with pre-defined values in the MODBINable Auto-Table
41	Initialize floppy disk drive controller
42	Initialize Hard drive controller
43	If it is a PnP BIOS, initialize serial & parallel ports
44	Reserved
45	Initialize math coprocessor.
46-4D	Reserved
4E	If there is any error detected (such as video, kb...), show all the error messages on the screen & wait for user to press <F1> key
4F	1. If password is needed, ask for password 2. Clear the Energy Star Logo (Green BIOS only)
50	Write all CMOS values currently in the BIOS stack area back into the CMOS
51	Reserved
52	1. Initialize all ISA ROMs 2. Later PCI initializations (PCI BIOS only) -assign IRQ to PCI devices -initialize all PCI ROMs 3. PnP Initializations (PnP BIOS only) -assign IO, Memory, IRQ & DMA to PnP ISA devices -initialize all PnP ISA ROMs 4. Program shadows RAM according to Setup settings 5. Program parity according to Setup setting 6. Power Management Initialization -Enable/Disable global PM -APM interface initialization
53	1. If it is NOT a PnP BIOS, initialize serial & parallel ports 2. Initialize time value in BIOS data area by translate the RTC time value into a timer tick value
60	Setup Virus Protection (Boot Sector Protection) functionality according to Setup settin

## *BIOS Default Drive Table*

This is a current list of the drive type table contained in Setup.

Type	Size (MB)	Cylinders	Heads	Sectors	Write Precomp	Land Zone	Example Model
1	10	306	4	17	128	305	TEAC SD510, MMI 112, 5412
2	20	615	4	17	300	615	Seagate ST225, ST4026
3	30	615	6	17	300	615	
4	62	940	8	17	512	940	
5	46	940	6	17	512	940	
6	20	615	4	17	None	615	Seagate ST125, Tandon TM262
7	30	462	8	17	256	511	
8	30	733	5	17	None	733	Tandon TM 703
9	112	900	15	17	None	901	
10	20	820	3	17	None	820	
11	35	855	5	17	None	855	
12	49	855	7	17	None	855	
13	20	306	8	17	128	319	Disctron 526, MMI M125
14	42	733	7	17	None	733	
15		Reserved					
16	20	612	4	17	0	663	Microscience HH725, Syquest 3250, 3425
17	40	977	5	17	300	977	
18	56	977	7	17	None	977	
19	59	1024	7	17	512	1023	
20	30	733	5	17	300	732	
21	42	733	7	17	300	732	
22	30	306	5	17	300	733	Seagate ST4038
23	10	977	4	17	0	336	

PEAK 600VL User Guide

24	40	1024	5	17	None	976	Seagate ST4051
25	76	1224	9	17	None	1023	Seagate ST4096
26	71	1224	7	17	None	1223	Maxtor 2085
27	111	1224	11	17	None	1223	Maxtor 2140, Priam S14
28	152	1024	15	17	None	1223	Maxtor 2190, Priam S19
29	68	1024	8	17	None	1023	Maxtor 1085, Micropolis 1325
30	93	918	11	17	None	1023	Maxtor 1105 1120, 4780
31	83	925	11	17	None	1023	Maxtor 1170
32	69	1024	9	17	None	926	CDC 9415
33	85	1024	10	17	None	1023	
34	102	1024	12	17	None	1023	
35	110	1024	13	17	None	1023	
36	119	1024	14	17	None	1023	
37	17	1024	2	17	None	1023	
38	136	1024	16	17	None	1023	
39	114	918	15	17	None	1023	Maxtor 1140, 4380
40	40	820	6	17	None	820	Seagate ST251
41	42	1024	5	17	None	1023	Seagate 4053 Miniscribe 3053/6053
42	65	1024	5	26	None	1023	Miniscribe 3053/6053 RLL
43	40	809	6	17	None	852	Miniscribe 3650
44	61	809	6	26	None	852	Miniscribe 3675 RLL
45	100	776	8	33	None	775	Conner CP3104
46	203	684	16	38	None	685	Conner CP3204
User							

## Chapter 5

# VGA Driver Installation Procedure

### 5-1 Windows 95/98 Drivers Setup Procedure

1. In the Windows 95/98 screen, click "Start". Select "Settings", and then click the "Control Panel" icon.



Figure 5-1: Opening the Windows Control Panel

2. When installing Windows 95, and "Add New Hardware Wizard" window will appear. Select "Next".



Figure 5-2: Starting the Add New Hardware wizard

3. Windows will search for any new Plug and Play device on your system. Your screen may go blank during this process. Select "Next".

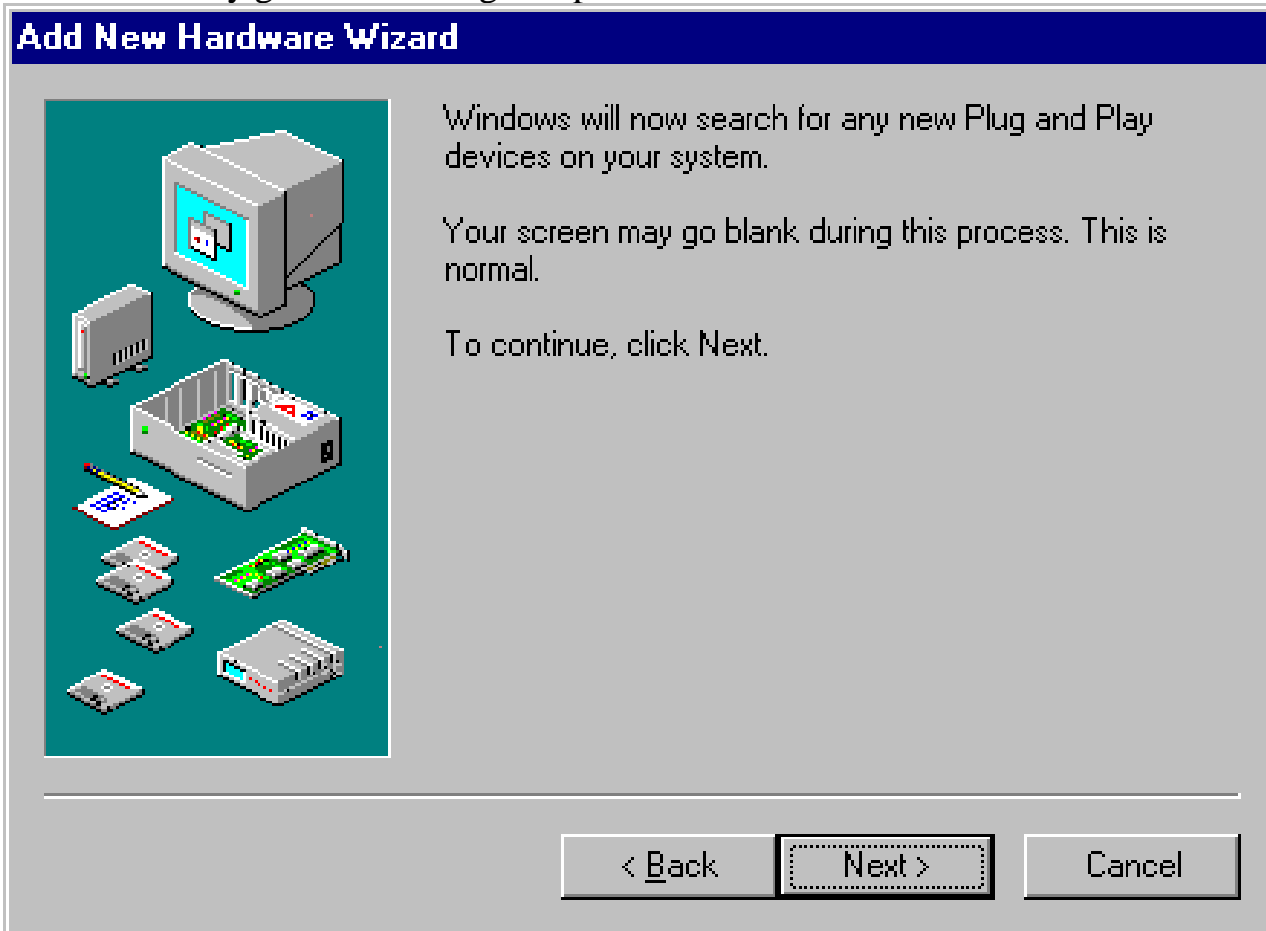


Figure 5-3: Searching for new Plug and Play devices

4. Please If you choose "Yes (Recommended)" and press "Next", the Hardware Wizard will help you find the new hardware.  
If the Hardware Wizard cannot find the new hardware, or if you want to set up the VGA driver by yourself, then select "No, I want to select the hardware from a list" and press "Next".



Figure 5-4: Selecting the hardware from the list

5. In the "Hardware types." list, select "Display adapters" and press "Next".



Figure 5-5: Choosing Display adapters from the Hardware types list

6. Select "Have Disk" and press "Next".

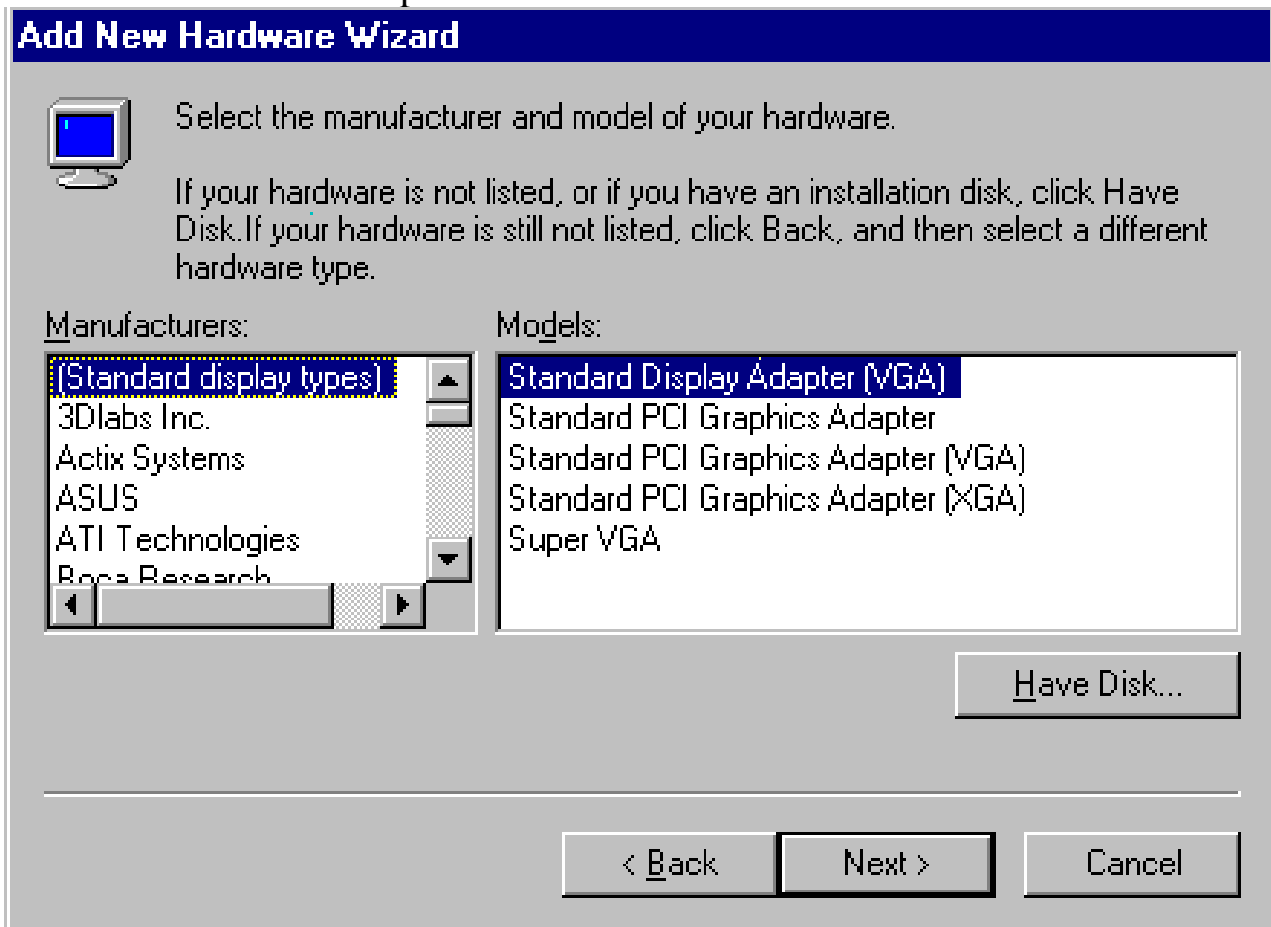


Figure 5-6: Selecting Have Disk...

7. Click "Browse".

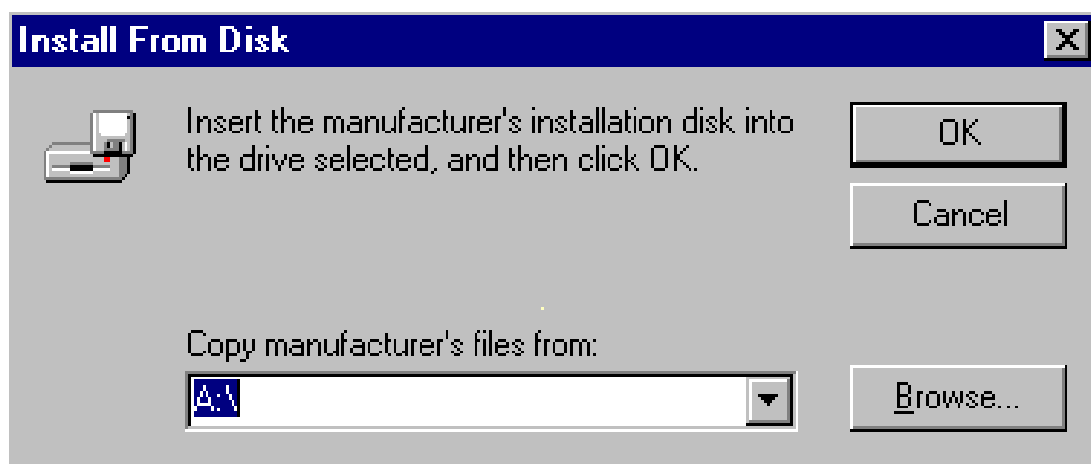


Figure 5-7: Clicking the Browse button in the Install From Disk box

8. Select "

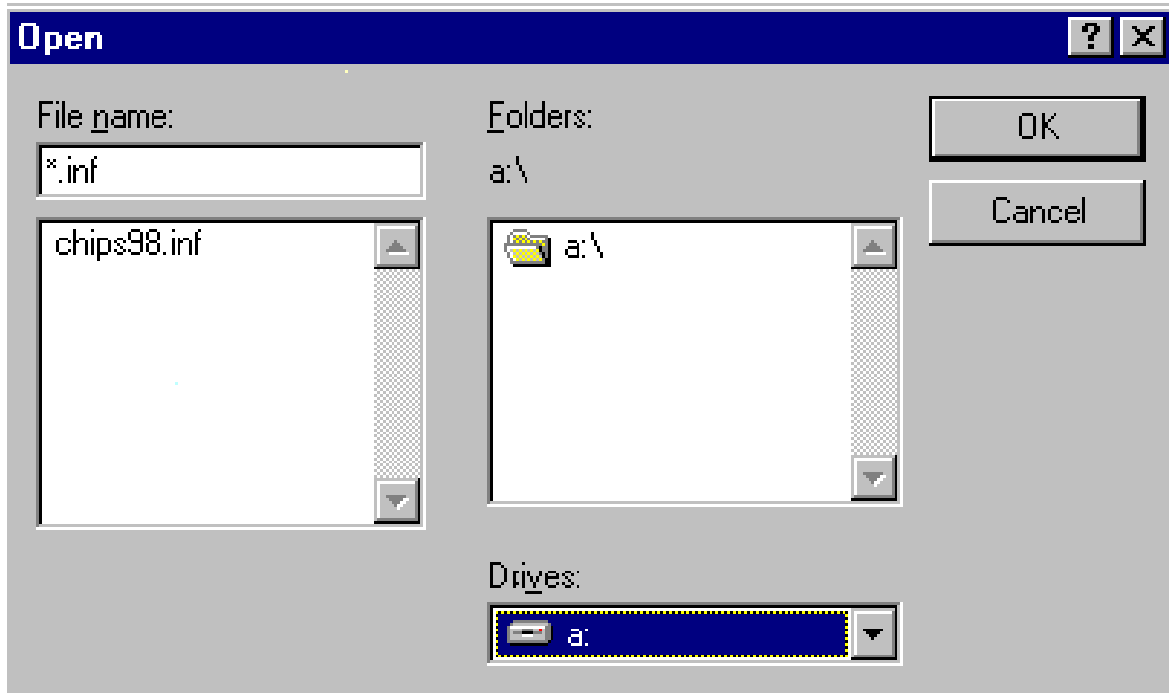


Figure 5-8: Select "chips98.inf" and click "OK".

9. Select "Chips and Tech, 69000 PCI" and click "OK".

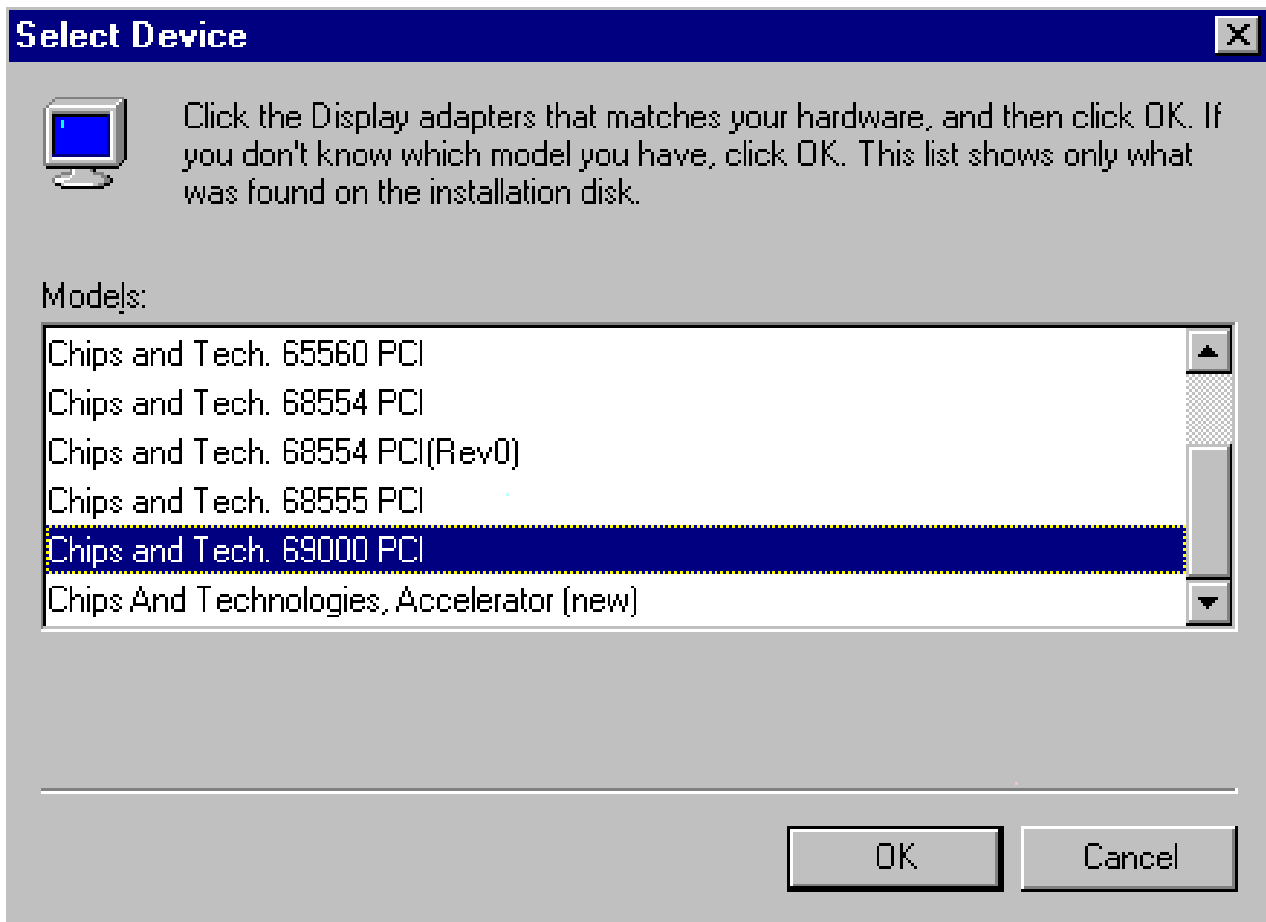


Figure 5-9: Selecting Chips and Tech, 69000 PCI and clicking OK

10. Click "Next".



Figure 5-10: Clicking the *Next* button to start copying the driver

11. Click "Finish" to complete the setup procedure.



Figure 5-11: Clicking *Finish* to complete the setup procedure

## 5-2 Windows NT Drivers Setup Procedure

1. In the "Control Panel" screen, select the "Display" icon and click "Display Type".

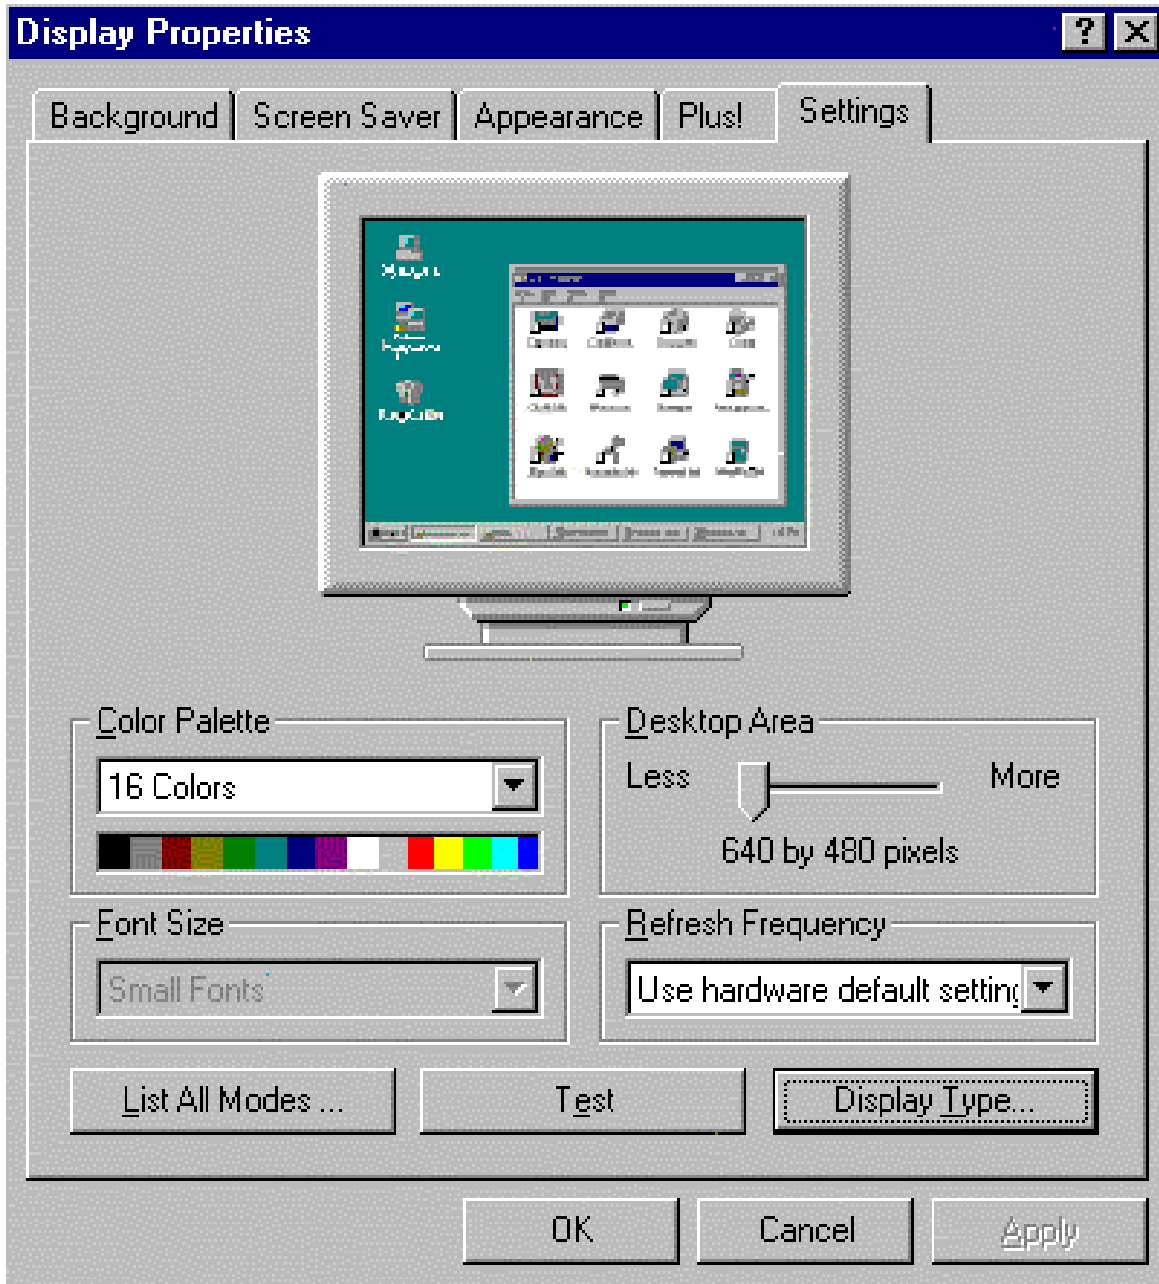


Figure 5-12: Opening Display Type from the Windows Control Panel

2. Click "Change".

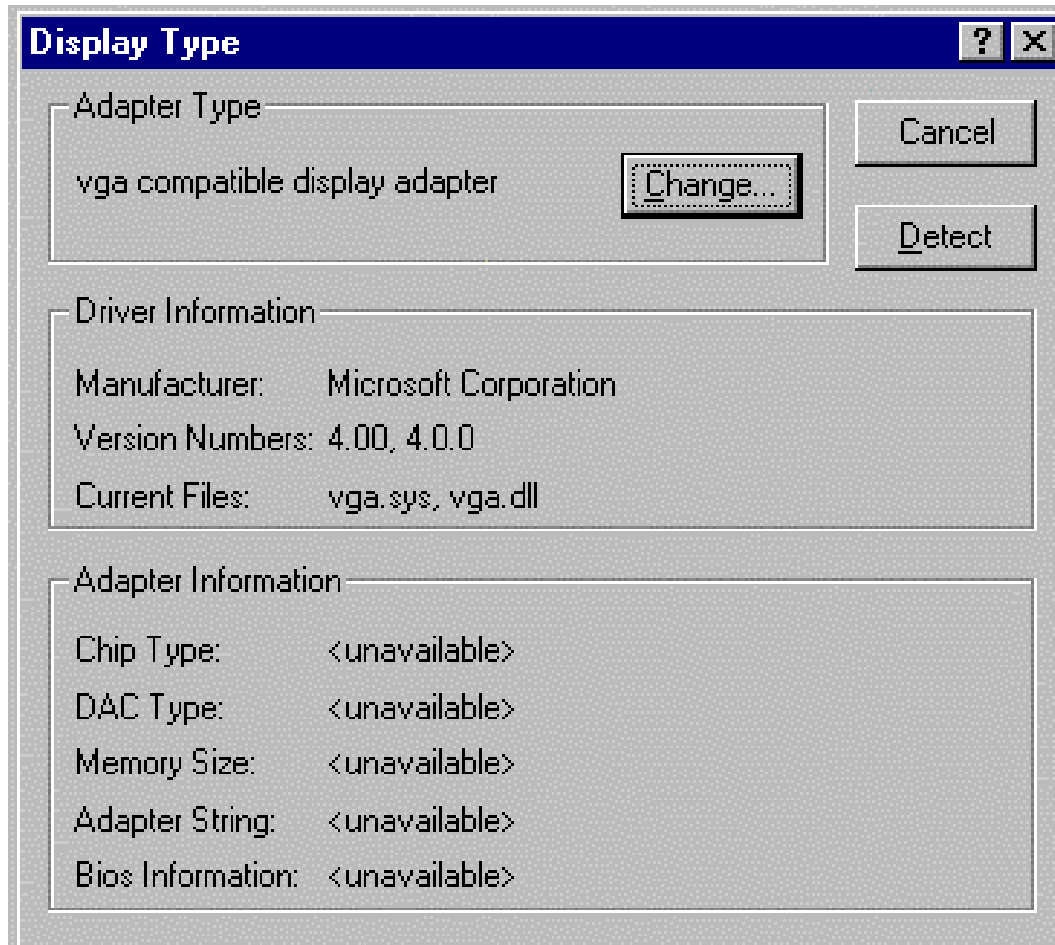


Figure 5-13: Clicking the Change button with Display Type

3. Click "Have Disk".

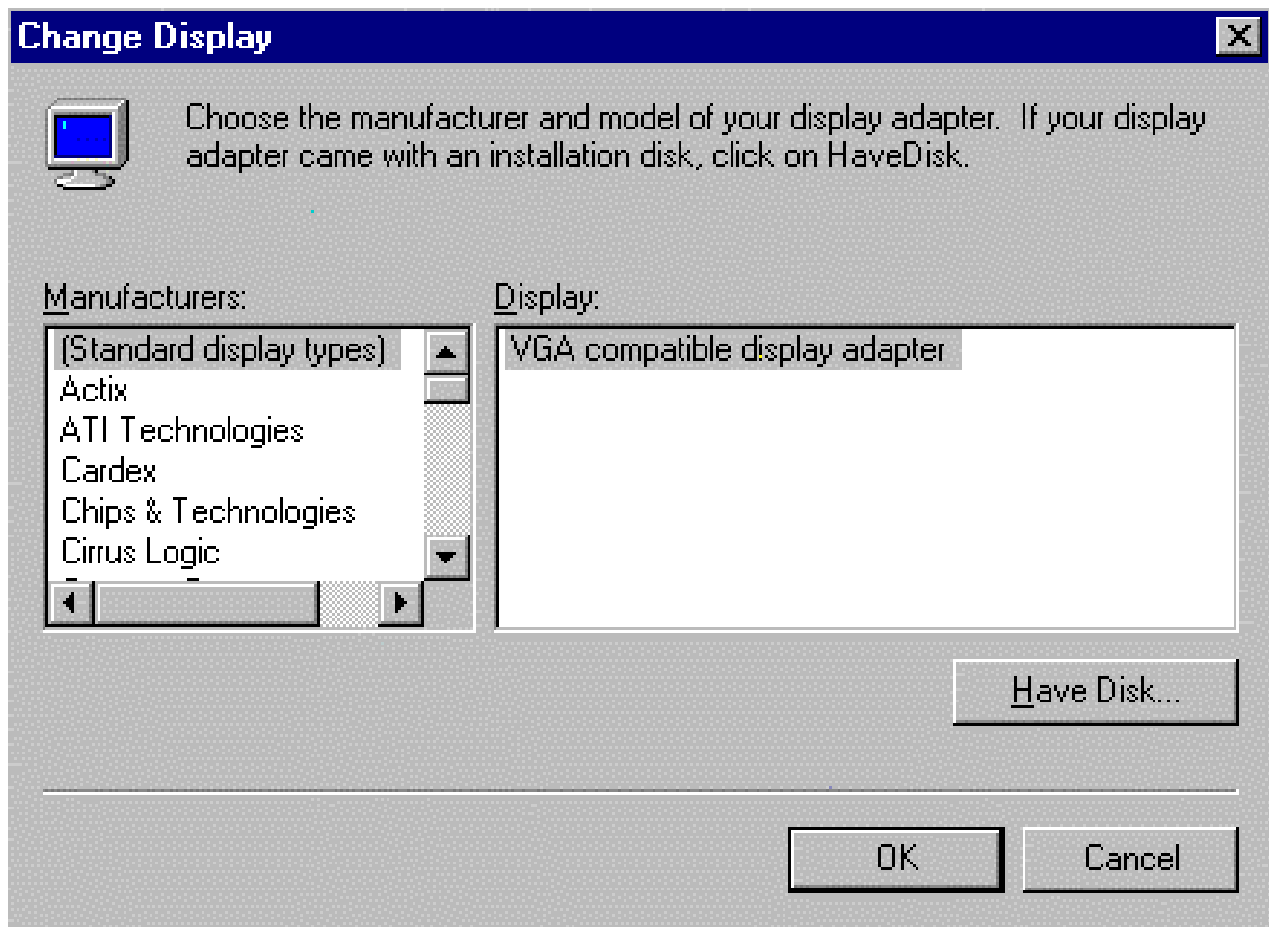


Figure 5-14: Clicking the Have Disk button

4. Click "Browse" to look for the driver program.

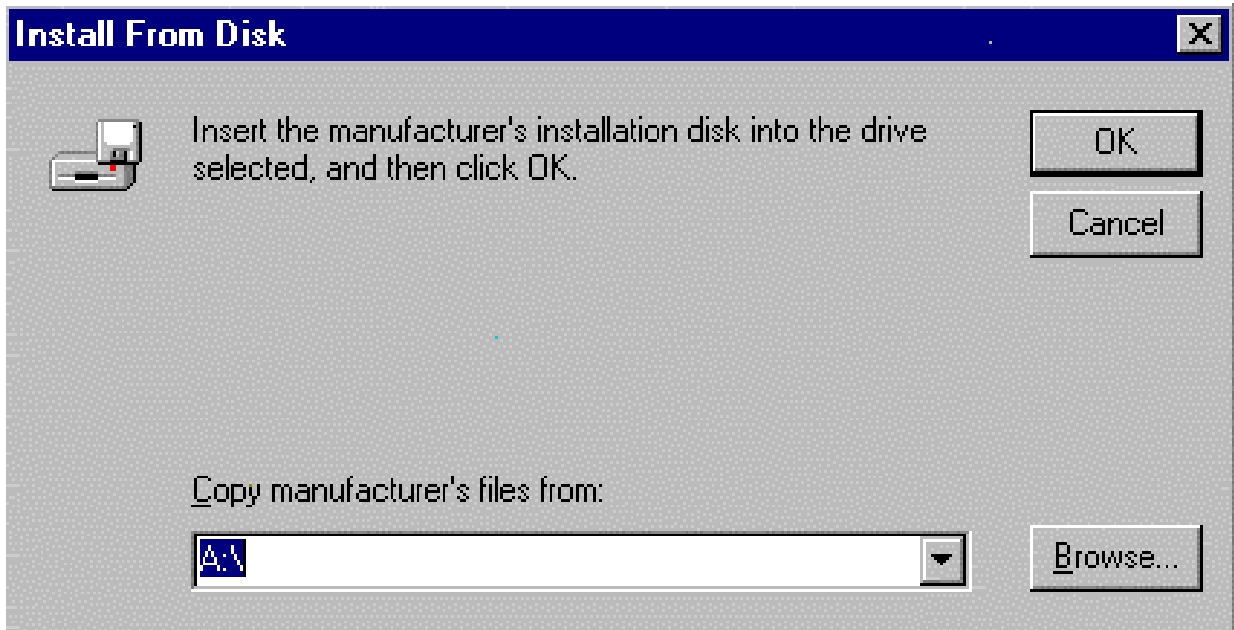


Figure 5-15: Clicking the Browse button

5. Select "Chip Video Accelerator [65545/48/50/54/55 68554 69000]" and click "OK".

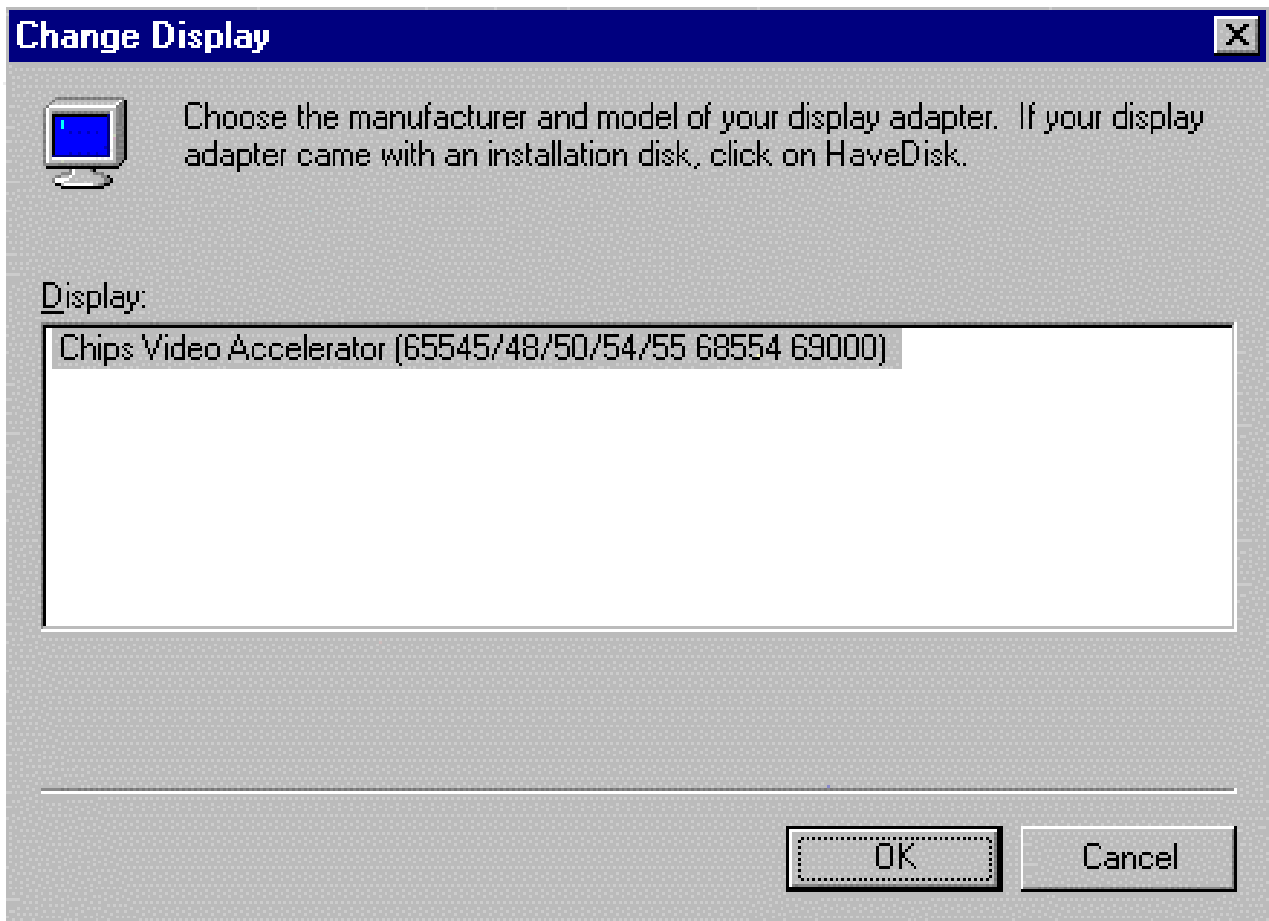


Figure 5-16: Selecting Chip Video Accelerator [65545/48/50/54/55 68554 69000] and clicking ok

6. When the driver has been successfully installed, click "OK".



Figure 5-17: Clicking the OK button after the driver has been installed

## Chapter 6

# LAN Driver Installation Procedure

### 6-1 Windows 95/98 Drivers Setup Procedure

1. In the Windows 95/98 screen, click "Start". Select "Settings", and then click the "Control Panel" icon.



Figure 6-1: Opening the Windows Control Panel

2. Select "Next".

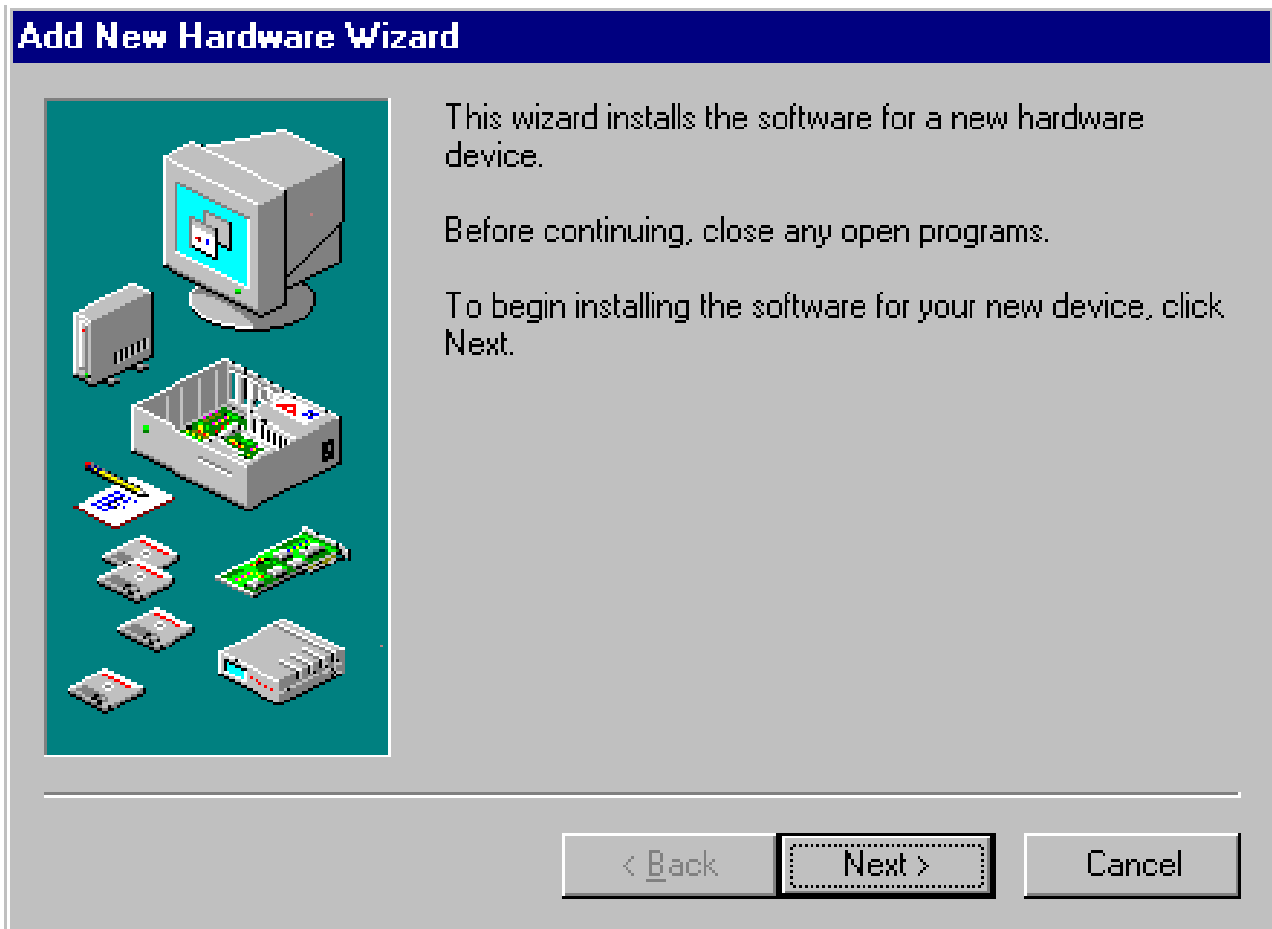


Figure 6-2: Clicking the *Next* button to start the Add New Hardware wizard

3. Select "Next".



Figure 6-3: Clicking the *Next* button

4. If the device is in the list, select "PCI Ethernet Controller" and press "Next".



Figure 6-4: Selecting the hardware from the list

7. Follow the instructions on the screen and click "Have Disk".

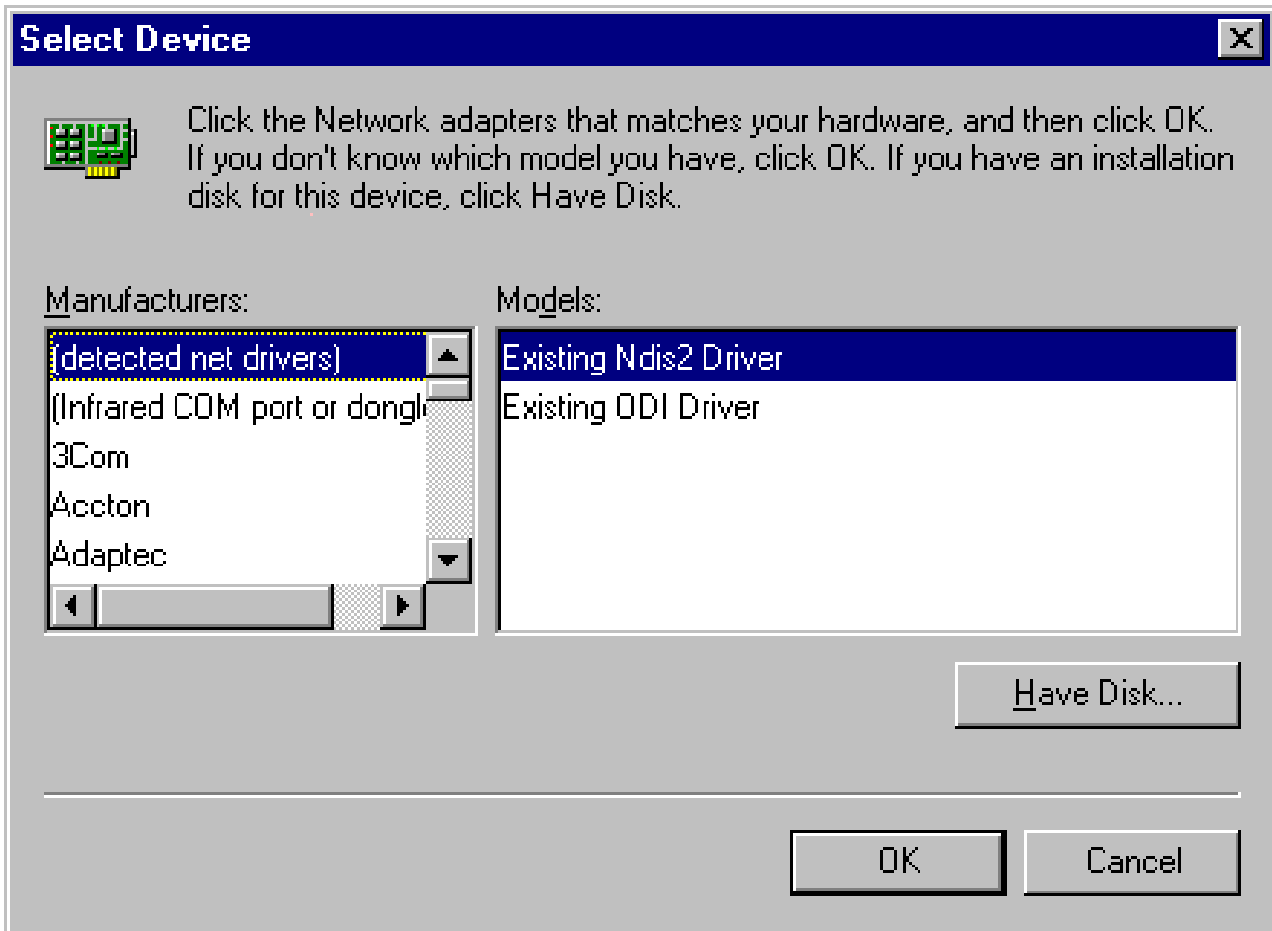


Figure 7-5: Choosing *Have Disk*

8. Click "Browse".

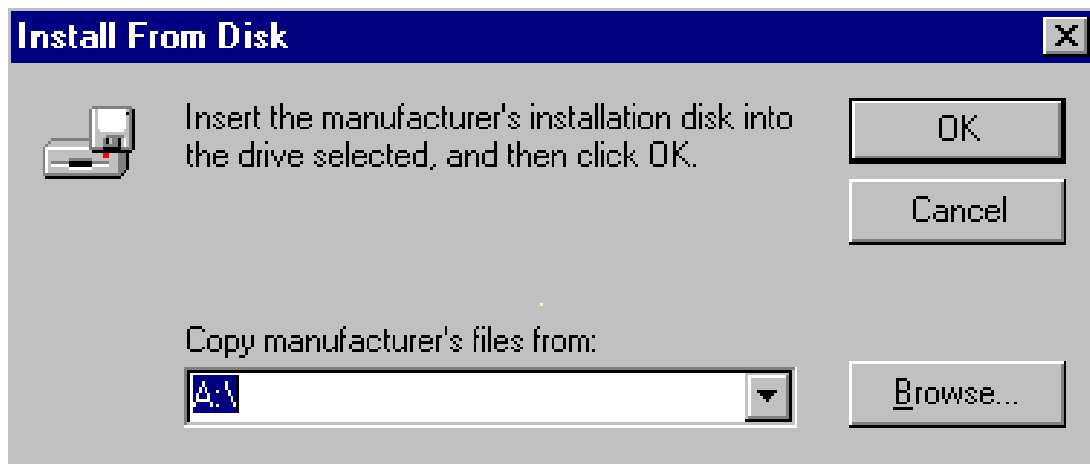


Figure 6-8: Clicking the *Browse* button

9. Select "netrts5.inf" and click "OK".

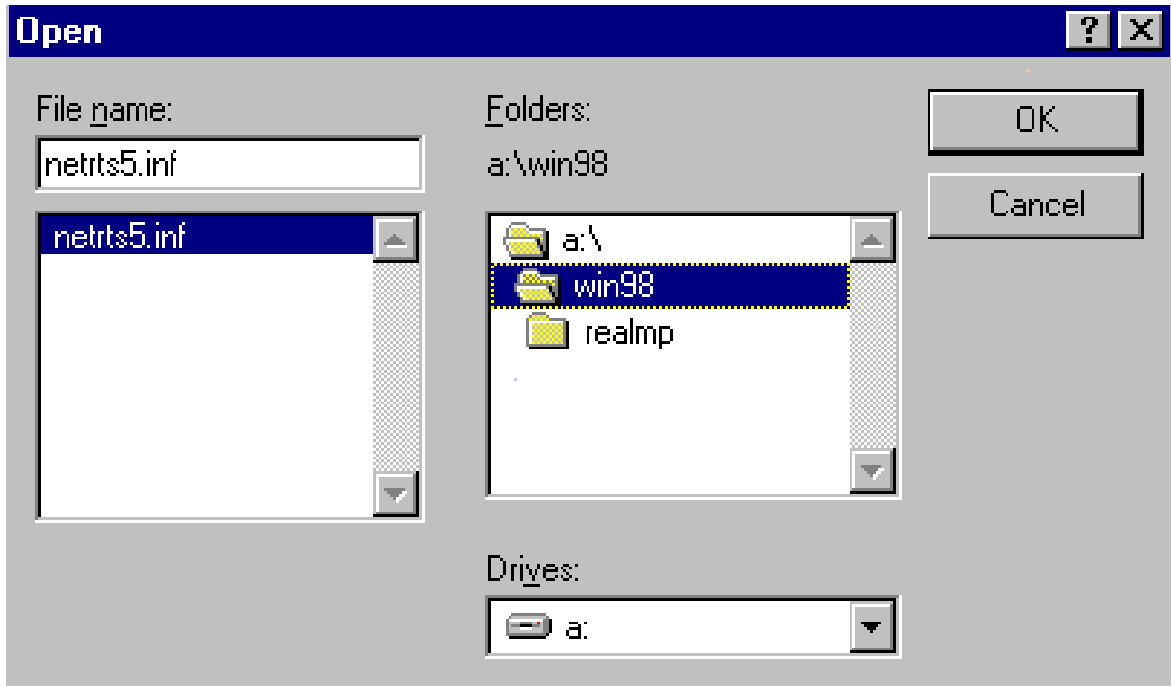


Figure 6-9: Choosing the device drive *netrts5.inf*

10. Click "OK".

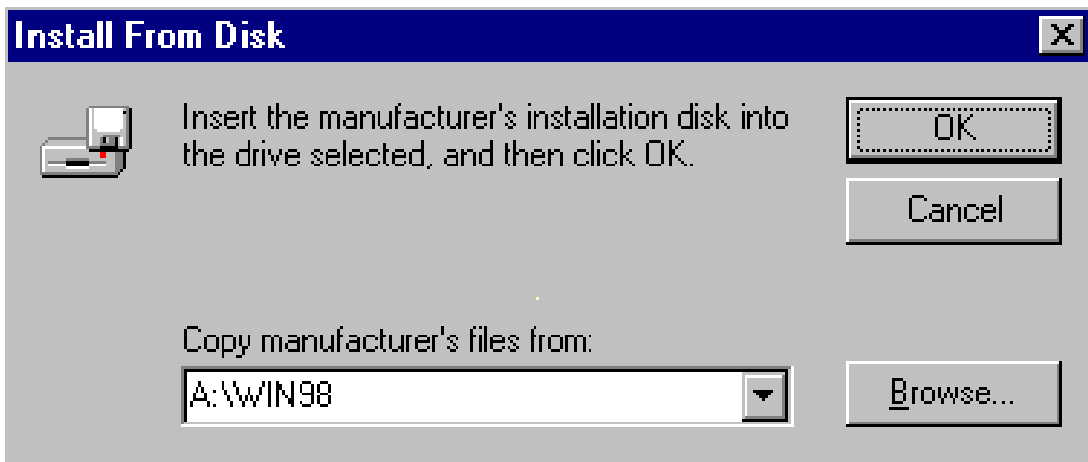


Figure 6-10: Clicking the *OK* button

11. Select "Realtek RTL8139[A/B/C/8130] PCI Fast Ethernet NIC" and press "OK".

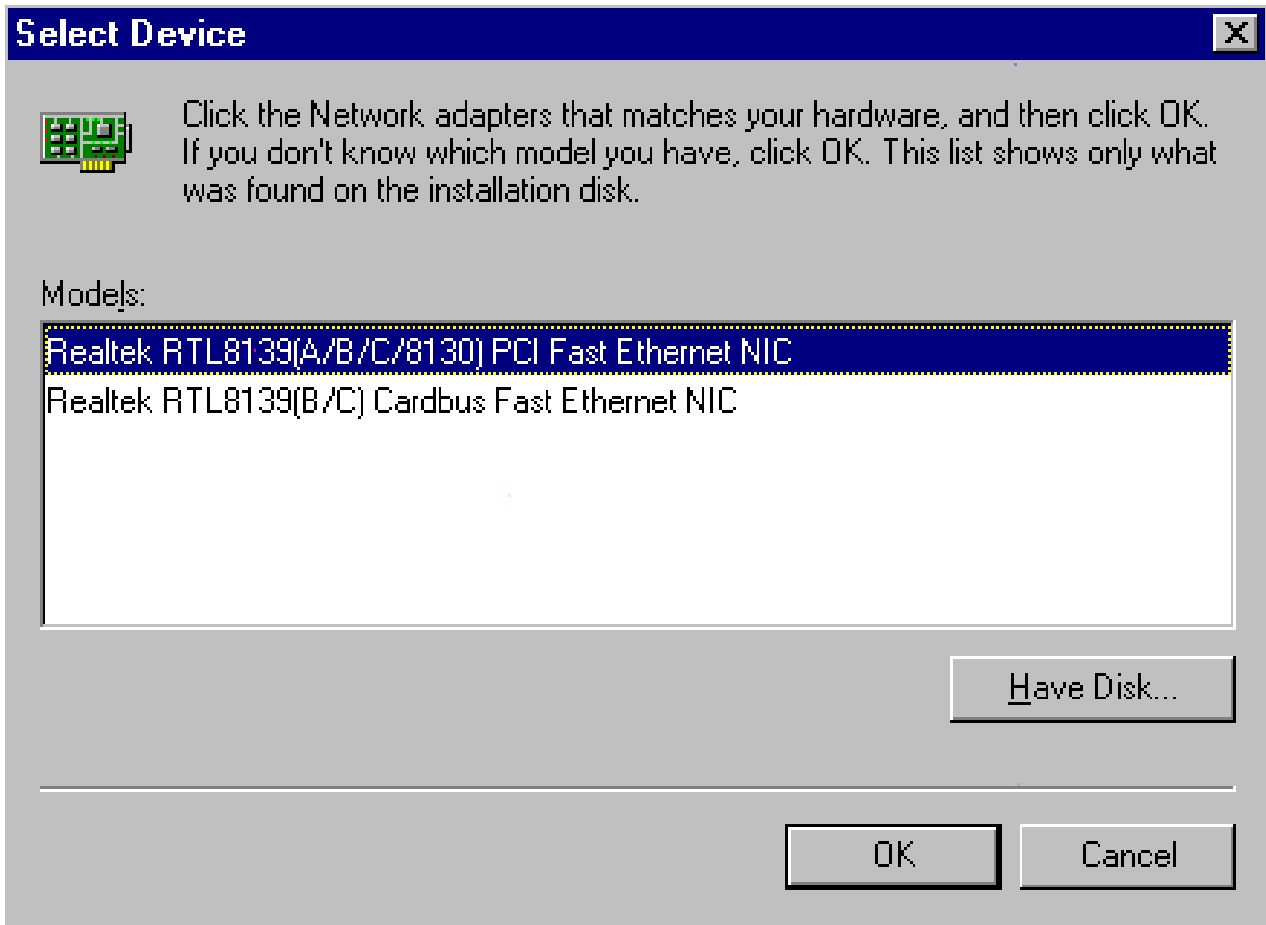


Figure 6-11: Choosing the model and clicking *ok*

12. Click "Next".



Figure 6-12: Clicking the *Next* button

13. Click "Finish" to complete the setup procedure.



Figure 6-13: Clicking *Finish* to complete the setup procedure

## 6-2 Windows NT Drivers Setup Procedure

1. In the "Windows NT" screen, click "Start" and select "Settings". Then click the "Control Panel" icon to select "Network".

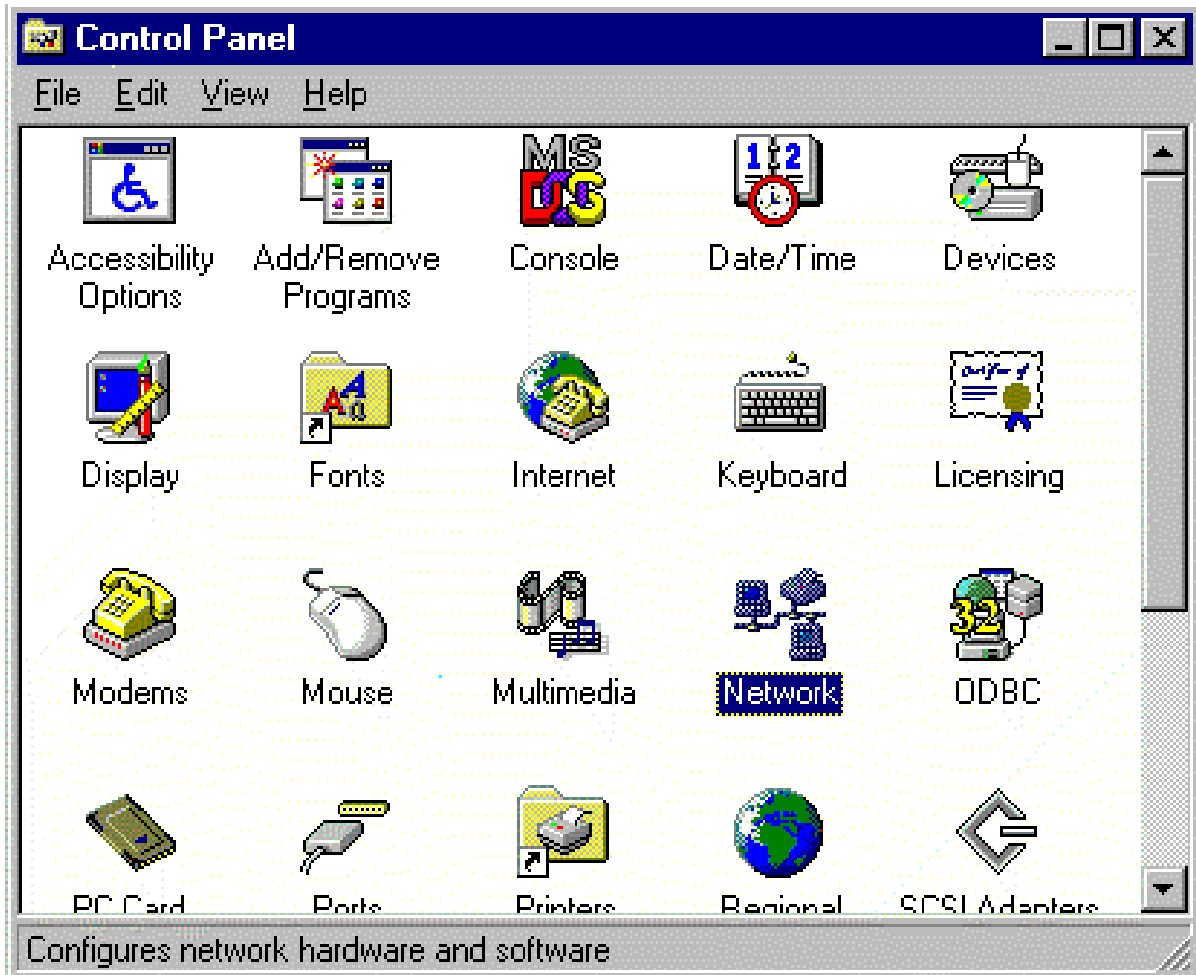


Figure 6-14: Double-clicking the Network icon in the Control Panel

2. Click "Add" to add your new driver.

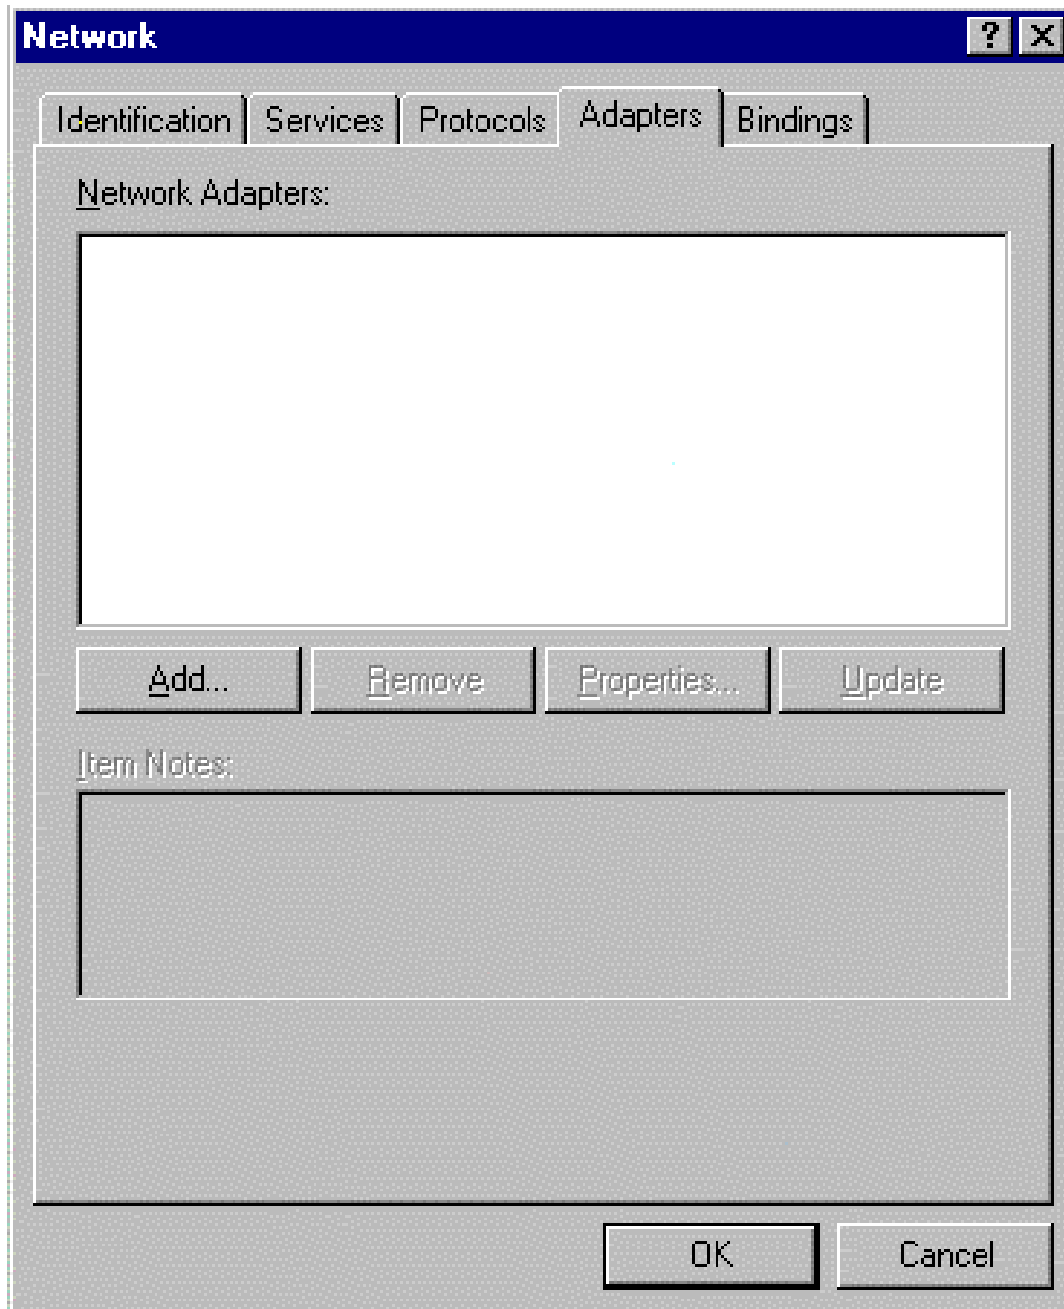


Figure 6-15: Clicking the Add button

3. Select "Have Disk" to find the Network Adapters Driver program.

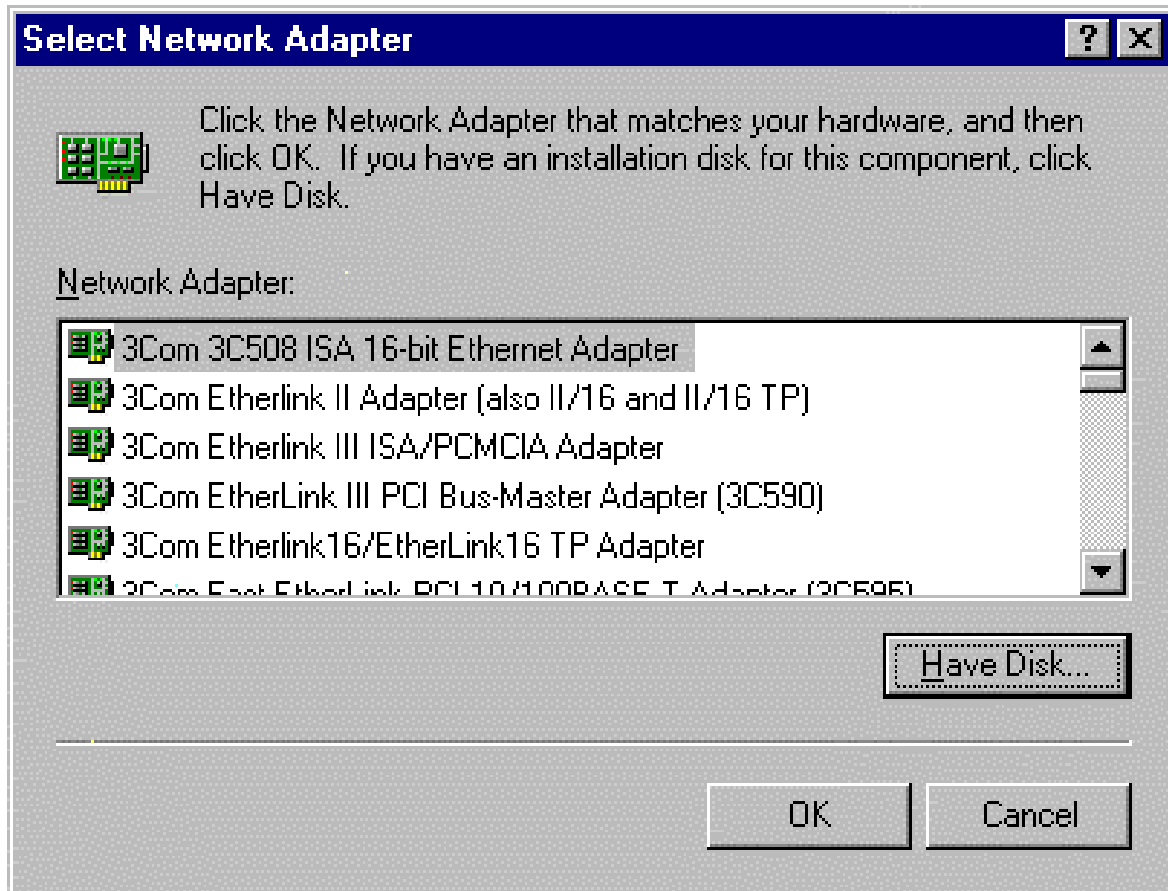


Figure 6-16: Clicking *Have Disk*

4. Click "OK".

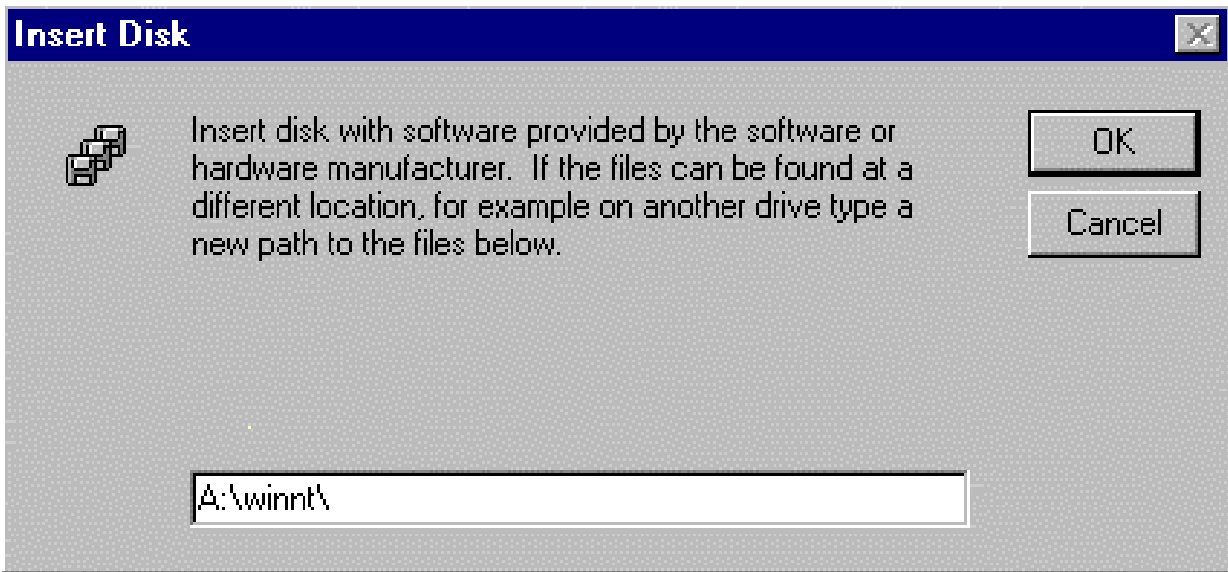


Figure 6-17: Clicking the *OK* button

5. Click "OK".

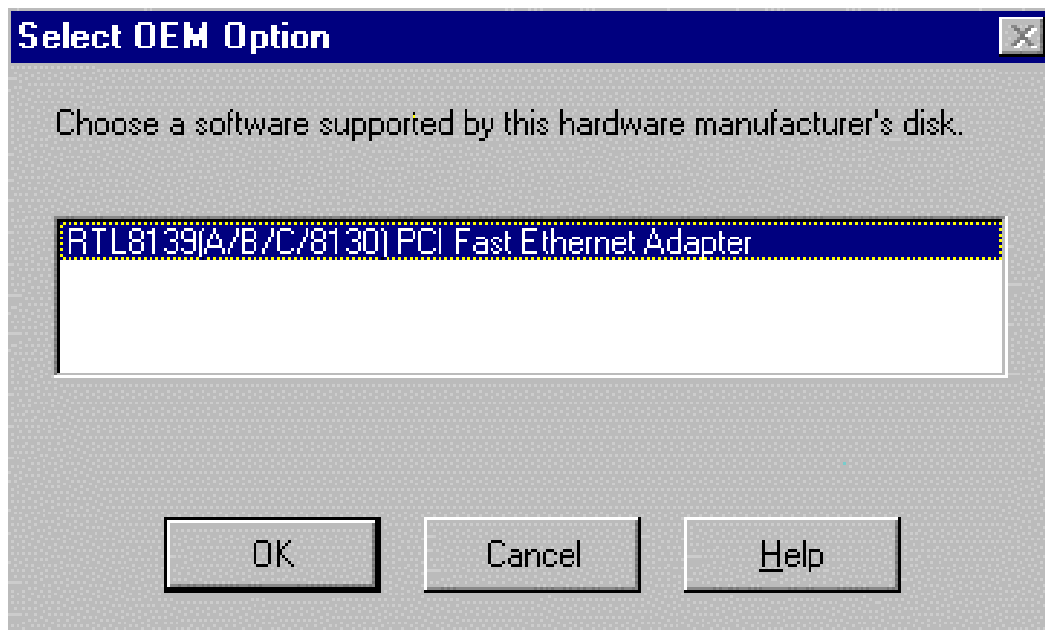


Figure 6-18: Clicking *OK*

6. Click "OK".

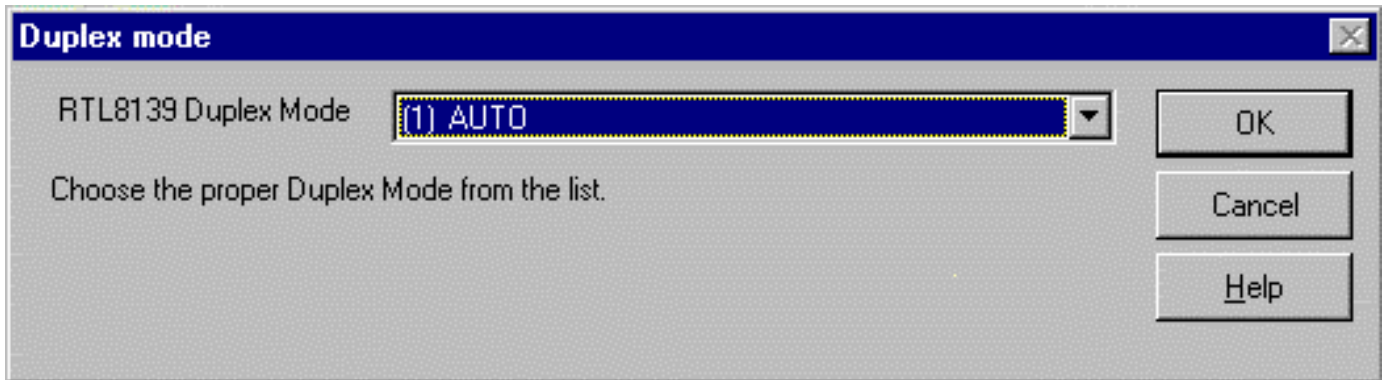


Figure 6-19: Choosing the *OK* button

## Appendix 1

### Watch Dog Timer

#### Watch Dog Timer Working Procedure

The Watch Dog Timer (WDT) is the special hardware device. The WDT function is to monitor the computer system whether work normally, otherwise, it will have some measures to fix up the system.

It contains a receivable SQW signal from RTC, and could set time and can clear the counter function. When time is up, WDT can send Reset or NMI signal.

Operator has to write a value into WDT Configuration Register (Write the control value to the Configuration Port), and clear WDT counter (read the Configuration Port).


#### Watch Dog Timer character and function

WDT Configuration port	F2	Default at F2
Watch Dog Timer	Disabled Enabled	1. Default at disabled 2. Enabled for user's programming
WDT Time out active for	Reset NMI	Default at Reset
WDT Active Time	1 sec 2 sec 4 sec 8 sec 16 sec 32 sec 64 sec	Default at 64 sec

## Watch Dog Timer Control Register

The Watch Dog Timer Control Register is to control the WDT working mode. You can write the value to WDT Configuration Port.

The following is the Control Register bit definition.

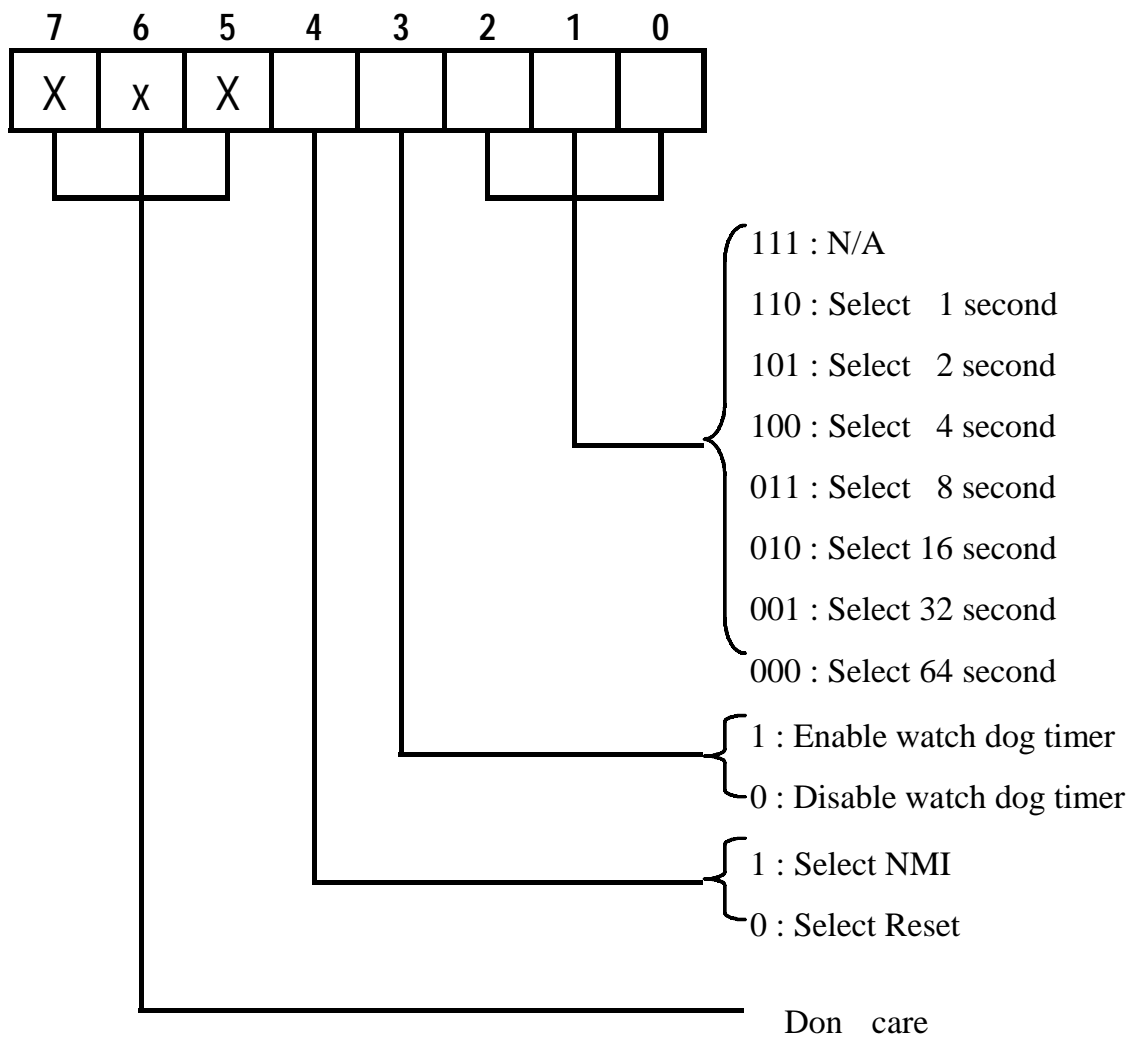

## Watch Dog Timer Programming Procedure

- **Power on or reset the system**

The initial value of WDT Control Register (D4~D0) is zero, when power is on or reset the system. The following means the initial value of WDT ( 00000000b ) :

Bit	Value	Mean
4	0	Select Reset
3	0	Disable watch dog timer
2, 1, 0	0 0 0	Select 64 second

- **Initialize the SQW of RTC (set SQW output period=0.5 second)**

To initialize the SQW of RTC processor is to set the SQW signal which is output period=0.5 second. It offers the basic frequency of the WDT counter.

The following is an example of **initializing the SQW signal program** in Intel 8086 assembly language.

```
; (Generate SQW = 0.5 Sec.)  
Mov dx, 70h  
Mov ax, 0Ah  
Out dx, al      ; Out port 70h = 0Ah  
Mov dx, 71h  
Mov ax, 2Fh  
Out dx, al      ; Out port 71h = 2Fh  
; (enable the SQW output)  
Mov dx, 70h  
Mov ax, 0Bh  
Out dx, al      ; Out port 70h = 0Bh
```

```
Mov dx, 71h
Mov ax, 0Ah
Out dx, al ; Out port 71h = 0Ah
```

### • Clear the WDT

Repeatedly read WDT Configuration Port and the interval cannot be longer than the preset time, otherwise, the WDT will generate NMI or Reset signal for the system.

The following is an example of **clear the WDT program** in Intel 8086 assembly language.

```
; ( Clear the WDT)
Mov dx, F2h ;Setting the WDT configuration port
In al, dx
```

**Note:** Before running WDT, you must clear the WDT. It means to make sure the initial value is zero before enabling the WDT.

### • WDT Control Register (Write to WDT configuration port)

You can set the WDT Control Register to control the WDT working mode.

The initial value of the WDT Control Register is as the following.

```
; (Setting the WDT Control Register as AL)
Mov al, 0h ; Setting initial value = 0 for the WDT Control Register
```

You must plan the option of following:

1. Select NMI or Reset: decide D4 value in F2.

i.e. Setting D4 = 0, then it select Reset

```
AND al, 11101111b ; Select Reset
```

i.e. Setting D4 = 1, then it select NMI

```
OR    al, 00010000b ; Select NMI
```

2. Select the time-out intervals of WDT (decide the values of D2, D1, D0 in F2 )

Example: D2~D0 = 0, the time-out interval will be 64 sec.

```
AND    al, 11111000b ; Setting the time-out interval as 64 sec.
```

3. Enable or Disable the WDT ( decide D3 value in F2)

i.e. D3=0, Disable the WDT

```
AND    al, 11110111b ; Disable the WDT
```

i.e. D3=1, Enable the WDT

```
OR     al, 00001000b ; Enable the WDT
```

After finishing the above setting, you must be output for the Control Register value to the WDT Configuration Port. Then WDT will start according to the above setting.

```
MOV    dx, F2h ; Setting WDT Configuration Port
OUT    dx, al ; Output the Control Register Value
```

- You should build in a mechanism in the program to continue to read the WDT Configuration Port for clearing WDT before the time out.

## Appendix 2

### Memory Mapping

